

## 刀模线不印刷

单号: EC160504203

型号: 5B149BT

印刷及材质要求: 80g书写纸, 正反面单色印刷, 8折页

尺寸: 148x105mm

美工: 小芳

文件完成日期: 2015/12/21



BOOMER Portable Bluetooth®  
Boombox & MP3 Player  
NAS-3071



Instruction Manual  
Please read carefully before use and keep for future reference.

### Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at [www.naxa.com](http://www.naxa.com) and see all that we have to offer!


### In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at [www.naxa.com/naxa\\_support](http://www.naxa.com/naxa_support).

- NAS-3071
- AUX cable
- Charging cable
- Carrying strap


Page 2 Naxa Electronics

### At a Glance

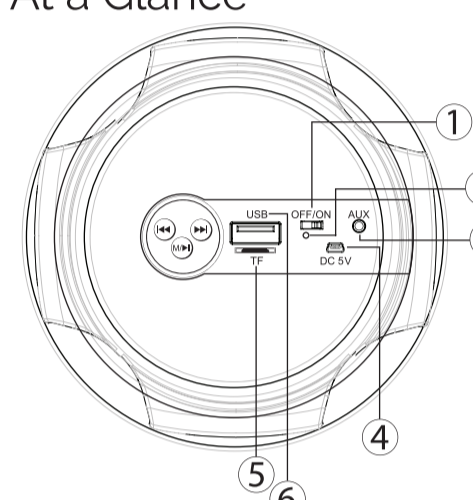

1 POWER	Set the switch to the "ON" position to turn the speaker on. Set the switch to the "OFF" position to turn the speaker off.
2 Status LED	Lights up to indicate which mode the speaker is in.
3 AUX connector	AUX mode. 3.5mm stereo connection for devices with 3.5mm line-out or headphone output.
4 DC 5V charge port	Connect to a USB power source with the included cable.
5 microSD card reader	CARD mode. Load memory cards here.
6 USB port	USB mode. Load USB memory sticks here.

www.naxa.com Page 3

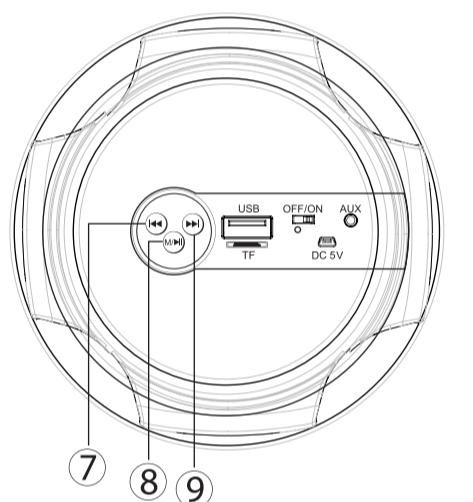

7	Press to skip to the previous track during playback. Press and hold to decrease the volume.
8	Press to pause or resume playback. Press and hold to change the active mode (Bluetooth®, SD, USB, FM, and AUX).
9	Press to skip to the next track during playback. Press and hold to increase the volume.

Page 4 Naxa Electronics

### Connecting Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Use the included USB charging cable to connect the speaker to a USB power source to charge the battery.

- Connect the small end of the cable to the USB charge port [4] of the unit.
- Connect the large end of the cable to a high-power USB port of a computer. The computer should be powered on.

**!** The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

The Status LED [2] will light a steady red when the battery is charging. When charging is complete, the Status LED will darken.

**i** It takes approximately 3 to 6 hours to charge the unit fully when connected to a standard USB port.

**!** Do not charge the unit for more than 8 hours to optimize the lifetime performance of the battery.

www.naxa.com Page 5

### Using Bluetooth® Mode

#### Pairing a Device with Bluetooth®

A device must be paired with the speaker before using them together for the first time.

**Make sure Bluetooth is enabled on your device before attempting to pair it.**

When you turn on the speaker, it will automatically search for a paired device. If it finds a paired device, it will connect to it automatically, and you're ready to play music from that device.

If it does not detect a paired device, it will switch to Pairing mode (the Status LED will [2] flash blue quickly). When the speaker is in Pairing Mode, it will announce itself to nearby Bluetooth devices and accept pairing requests from them.

1. The speaker will announce itself as "NAXA NAS-3071." Use your device to search for nearby Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
2. Select "NAXA NAS-3071" from the list of found devices.
3. If your device asks for a passcode, use "0000" to complete the pairing process.

When the speaker is paired and connected to a device, the Status LED [2] will blink blue slowly.

**i** To enter pairing mode when the speaker is already on, turn it off and then back on again.

The speaker can be paired with one device at a time.

Page 6 Naxa Electronics

### Bluetooth® Speaker Controls

When the speaker is connected to a Bluetooth® device:

To do this...	...do this
Start, pause, or resume audio playback	Press <b>▶ ◀</b>
Skip to the previous track	Press <b>◀◀</b>
Skip to the next track	Press <b>▶▶</b>
Adjust the volume level	Press and hold <b>◀◀</b> or <b>▶▶</b>

**i** You may also use your device to control playback. Some devices may not support remote Bluetooth® controls.

Use the speaker to adjust the volume to a comfortable level. Set the volume level of the connected Bluetooth device to maximum.

www.naxa.com Page 7

### Using USB & Card Mode

Install a USB drive or microSD memory card and then press and hold **▶|◀** [8] to set the active mode to USB or CARD.

Install a compatible USB drive or memory card with music files on it.

- The speaker will automatically detect the drive or card and the Status LED [2] will light blue.
- The speaker will automatically switch modes, and attempt to play music from the USB drive or card.

**i** Please refer to the Specifications section to learn more about compatibility.

To do this...	...do this
Start, pause, or resume playback	Press <b>▶ ◀</b>
Skip to the next track	Press <b>▶▶</b>
Skip to the previous track	Press <b>◀◀</b>

Change the active mode (Bluetooth®, SD, USB, FM, and AUX). Press and hold **▶|◀** [8].

### Using FM Radio Mode

Press and hold **▶|◀** [8] to set the active mode to FM.

**i** You must connect the included AUX cable to the AUX connector [3] in order to use the FM radio. The AUX connector is also used for FM radio reception.

To optimize reception, extend the connected AUX cable and adjust its position.

#### Automatic Station Scan

Use the station scan feature to find stations within broadcast reception range and save them to preset memory.

1. Press **▶|◀** [8] once. The speaker will search for and store stations automatically.

**i** Scan for new stations any time you move the speaker. Scanning for new stations will replace the old stations.

Page 8 Naxa Electronics

www.naxa.com Page 9

### FM Radio Controls

To do this...	...do this
Tune to the next station	Press <b>▶▶</b>
Tune to the previous station.	Press <b>◀◀</b>
Scan for stations and auto save them to preset memory	Press <b>▶ ◀</b>

### Using the AUX Input Connector

Connect devices without Bluetooth® by using the AUX connection. A 3.5mm stereo patch cable is required to make this connection.

1. Press and hold **▶|◀** [8] to switch the speaker to AUX mode.
2. Use the included AUX cable to connect the device's headphone or line-out jack to the AUX connector [3] found on the side of the speaker.
3. Turn on the device and the speaker. Lower the volume on both.
4. Set the device volume to 80% of its maximum and then start playback.
5. Press and hold **▶|◀** [9] to increase the volume gradually to a comfortable level.

**i** Use the connected AUX device to control all functions in AUX mode. The speaker can only be used to adjust the volume.

www.naxa.com Page 9

### Warnings and Precautions

**CAUTION**

WARNING: SHOCK HAZARD. DO NOT OPEN. AVOID: RIBIQUE DE CHOC ELECTRIQUE. NE PAS OUVRIRE.

**CAUTION:** TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of unshielded "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

**CAUTION**

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

### Important Safety Information

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instruction should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. Water and Moisture: Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

www.naxa.com Page 10

### Troubleshooting Guide

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support ([www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)).

Symptom	Possible Cause	Possible Solution
The device is connected but there is no sound.	The AUX connector may be in use.	Disconnect all cables from the AUX input connector of the speaker.
	Your device may be beyond the effective range of the speaker.	Move closer to the speaker. Range may be affected adversely by environmental conditions.
	Your device may not be in playback mode.	Ensure that your device is operating correctly. Start playback on your device.

www.naxa.com Page 13

### Specifications

Speakers	Twin 2" drivers + 3" subwoofer
Frequency Response	100–20,000 Hz
Removable Memory Support	USB, microSD, microSDHC (max 32 GB)
Playable Media Formats	MP3
Radio Tuner	FM
Input	Bluetooth® 2.1 + EDR 3.5 mm AUX audio
Power	Rechargeable lithium battery USB charge
Battery Life*	Up to 1.5–2 hours

\* Estimate based on playback with Bluetooth at 100% volume. Battery life will vary depending on usage.

Note: Product is improved continuously. We reserve the right to modify the product and specifications without prior notice.

### Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

**NAXA Technical Support**  
2320 East 49th St.  
Vernon, CA 90058

[http://www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)

www.naxa.com Page 15

### Connecting Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Use the included USB charging cable to connect the speaker to a USB power source to charge the battery.

- Connect the small end of the cable to the USB charge port [4] of the unit.
- Connect the large end of the cable to a high-power USB port of a computer. The computer should be powered on.

**!** The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

The Status LED [2] will light a steady red when the battery is charging. When charging is complete, the Status LED will darken.

**i** It takes approximately 3 to 6 hours to charge the unit fully when connected to a standard USB port.

**!** Do not charge the unit for more than 8 hours to optimize the lifetime performance of the battery.

www.naxa.com Page 5

### Using Bluetooth® Mode

#### Pairing a Device with Bluetooth®

A device must be paired with the speaker before using them together for the first time.

**Make sure Bluetooth is enabled on your device before attempting to pair it.**

When you turn on the speaker, it will automatically search for a paired device. If it finds a paired device, it will connect to it automatically, and you're ready to play music from that device.

If it does not detect a paired device, it will switch to Pairing mode (the Status LED will [2] flash blue quickly). When the speaker is in Pairing Mode, it will announce itself to nearby Bluetooth devices and accept pairing requests from them.

1. The speaker will announce itself as "NAXA NAS-3071." Use your device to search for nearby Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
2. Select "NAXA NAS-3071" from the list of found devices.
3. If your device asks for a passcode, use "0000" to complete the pairing process.

When the speaker is paired and connected to a device, the Status LED [2] will blink blue slowly.

**i** To enter pairing mode when the speaker is already on, turn it off and then back on again.

The speaker can be paired with one device at a time.

Page 6 Naxa Electronics

### Bluetooth® Speaker Controls

When the speaker is connected to a Bluetooth® device:

To do this...	...do this
Start, pause, or resume audio playback	Press <b>▶ ◀</b>
Skip to the previous track	Press <b>◀◀</b>
Skip to the next track	Press <b>▶▶</b>
Adjust the volume level	Press and hold <b>◀◀</b> or <b>▶▶</b>

**i** You may also use your device to control playback. Some devices may not support remote Bluetooth® controls.

Use the speaker to adjust the volume to a comfortable level. Set the volume level of the connected Bluetooth device to maximum.

www.naxa.com Page 7

### Using USB & Card Mode

Install a USB drive or microSD memory card and then press and hold **▶|◀** [8] to set the active mode to USB or CARD.

Install a compatible USB drive or memory card with music files on it.

- The speaker will automatically detect the drive or card and the Status LED [2] will light blue.
- The speaker will automatically switch modes, and attempt to play music from the USB drive or card.

**i** Please refer to the Specifications section to learn more about compatibility.

To do this...	...do this
Start, pause, or resume playback	Press <b>▶ ◀</b>
Skip to the next track	Press <b>▶▶</b>
Skip to the previous track	Press <b>◀◀</b>

Change the active mode (Bluetooth®, SD, USB, FM, and AUX). Press and hold **▶|◀** [8].

### Using FM Radio Mode

Press and hold **▶|◀** [8] to set the active mode to FM.

**i** You must connect the included AUX cable to the AUX connector [3] in order to use the FM radio. The AUX connector is also used for FM radio reception.

To optimize reception, extend the connected AUX cable and adjust its position.

#### Automatic Station Scan

Use the station scan feature to find stations within broadcast reception range and save them to preset memory.

1. Press **▶|◀** [8] once. The speaker will search for and store stations automatically.

**i** Scan for new stations any time you move the speaker. Scanning for new stations will replace the old stations.

Page 8 Naxa Electronics

www.naxa.com Page 9