

刀模线不印刷

单号： EC161112637

型号： 3251062-FCBT

印刷及材质要求： 80g书写纸， 正反面单色印刷， 8折页

尺寸： 105x75mm

美工： 小劳



naxa
THE NEW GENERATION IN TECHNOLOGY

Portable Bluetooth® Music System
NAS-3074

Instruction Manual
Please read carefully before use and keep for future reference.

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.


We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at www.naxa.com and see all that we have to offer!

In the Box


Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at www.naxa.com/naxa_support.

- NAS-3074
- Combination USB charge cable + 3.5mm AUX audio adapter

At a Glance

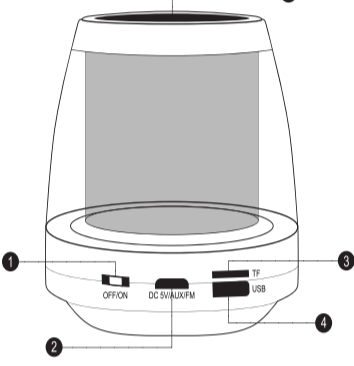

1	Power/Function switch	Set the switch to "ON" to turn the speaker on, then the speaker will turn to BT mode. Set the switch to "OFF" to turn the speaker off.
2	DCSV/AUX/FM port	Use the large USB plug of the included cable to charge the speaker from a standard USB 5 V power source. Use the 3.5 mm plug of the included cable to connect the speaker to an AUX device. Connect the included cable when listening to FM radio.
3	microSD slot	microSD mode. Load a microSD/SDHC memory card here for MP3 playback.
4	USB port	USB mode. Load a USB memory stick here for MP3 playback.
5	Speaker	Full-range driver delivers great sound.

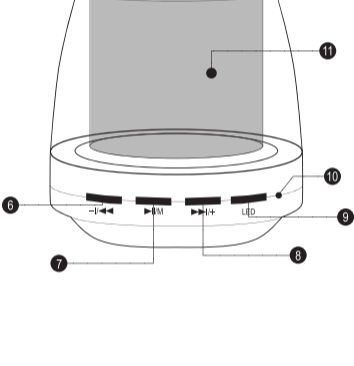

6	~ / <>	Press and hold to decrease the volume level. MP3: Press to skip to the previous track. FM: Press to tune to the previous station.
7	⏸ / M	Press to pause or resume playback. Press and hold to change the active source mode (FM, MP3, AUX). FM: press to Auto Scan for stations.
8	▶ / +	Press and hold to increase the volume level. MP3: Press to skip to the next track. FM: Press to tune to the next station.
9	LED	Press to change the multicolor lighting effect. Press and hold to turn the Multicolor LEDs on or off.
10	Microphone	Use the microphone to speak when making a call with a connected cellphone.
11	Multicolor LEDs	Indicates speaker status and provides multicolor light effects.

Connecting Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Use the included USB cable to connect the speaker to a USB power source to charge the battery.

- Connect the small "micro USB" end of the cable to the **DCSV/AUX/FM** charge port [2] of the unit. (The 3.5 mm plug is not used for power.)
- Connect the large USB plug of the cable to a high-power USB port on a computer. The computer should be powered on.

i You may also use the charge cable with a USB power adapter that matches the power rating of this device. The power rating can be found in the Specifications section of this manual.

! Never connect the speaker to a power source that does not match its power rating.

Using BT Mode (Bluetooth®)

Pairing a Device with Bluetooth®

A device must be paired with the speaker before using them together for the first time.

Set the **Power/Function** switch [1] to the "BT" position to place the speaker in Bluetooth mode. The speaker will emit a tone and automatically search for a paired device. If it does not detect a paired device, it will switch to Pairing mode (the multicolor LEDs will flash quickly). Then:

- Make sure Bluetooth® is enabled on your device. Enable it if it hasn't.
- Use your device to search for available Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
- The speaker will announce itself as "NAXA NAS-3074." Select it from the list of devices.

4. If your device asks for a passcode, use "0000" to complete the pairing process.

The speaker will provide an audio alert when it pairs and connects to your device.

i Make sure that the volume your device is set to its maximum level, then use the controls on the speaker to adjust the volume to a comfortable level.

The speaker cannot be paired with more than one device at a time.

Using the Speaker

When the speaker is connected to a Bluetooth® device:

To do this...	...do this
Start, pause, or resume audio playback	Press ⏸ / M .
Skip to the previous track	Press ~ / <> .
Skip to the next track	Press ▶ / + .
Decrease the volume level	Press and hold ~ / <> .
Increase the volume level	Press and hold ▶ / + .

To do this...	...do this
Change the speaker mode between FM, MP3, and AUX.	Press and hold ⏸ / M .

Using the Speakerphone Functions

When the speaker is connected to a cellphone with Bluetooth®:

To do this...	...do this
Answer an incoming call or end the current call.	Press ⏸ / M .
Call the last dialed number.	Press ⏸ / M twice quickly.
Change the speaker mode between FM, MP3, and AUX.	Press and hold ⏸ / M .

Using the FM Radio

Connect the included combination cable to the **DCSV/AUX/FM** connector [2] of the speaker. Set the **Power/Function** switch [1] to the "ON" position to set the speaker mode to FM.

i If a memory card has been loaded, the speaker will automatically switch to MP3 mode when you set the **Power/Function** switch to "ON". Press and hold **⏸ / M** [7] to change the speaker mode back to FM.

i The combination cable must be connected for the speaker to receive FM broadcasts.

The first time you use the radio, you should perform an Auto Scan. Press **⏸ / M** [7] to automatically find and save all FM stations within reception range.

i You should perform an Auto Scan when you move to a different location or if the battery runs down completely.

To do this...	...do this
Auto scan for stations and save them to preset memory.	Press ⏸ / M .
Tune to the previous preset station	Press ~ / <> .
Tune to the next preset station.	Press ▶ / + .
Decrease the volume level	Press and hold ~ / <> .
Increase the volume level	Press and hold ▶ / + .
Change the speaker mode between FM, MP3, and AUX.	Press and hold ⏸ / M .

Using the MP3 Player

Load a memory card that contains MP3 audio files into the **microSD slot** [3] of the speaker or load a USB drive into the **USB port** [4] of the speaker. Set the **Power/Function** switch [1] to the "ON" position, then press and hold **⏸ / M** [7] to set the speaker mode to MP3.

i Learn which types of memory cards work with this speaker in the Specifications section of this manual.

When the speaker is in MP3 mode:

To do this...	...do this
Start, pause, or resume audio playback	Press ⏸ / M .
Skip to the previous track	Press ~ / <> .
Skip to the next track	Press ▶ / + .
Decrease the volume level	Press and hold ~ / <> .
Increase the volume level	Press and hold ▶ / + .
Change the active source mode	Press and hold ⏸ / M .

! Do not remove a memory card or USB drive while the speaker is on. Doing so may damage the speaker system or memory device.

Using the AUX Input Connector

Connect devices without Bluetooth® by using the included combination USB + 3.5mm AUX audio cable.

Connect the 3.5mm plug of the combination cable to the device's headphone or line-out jack; connect the other end to the **DCSV/AUX/FM** connector [2] of the speaker. Set the **Power/Function** switch [1] to the "ON" position, then press and hold **⏸ / M** [7] to set the speaker mode to AUX.

- Press and hold **~ / <>** [7] to lower the volume on the speaker.
- Set the volume of the device to 80% of its maximum.
- Start playback, then press and hold **▶ / +** [9] to gradually increase the volume of the speaker to a comfortable level.

Warnings and Precautions

CAUTION

WARNING: SHOCK HAZARD. DO NOT OPEN. RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR.

CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of unisolated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information

- Read Instructions: All the safety and operating instructions should be read before the product is operated.
- Retain Instructions: The safety and operating instruction should be retained for future reference.
- Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
- Follow Instructions: All operating and usage instructions should be followed.
- Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
- Water and Moisture: Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
- Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

- Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
- Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
- Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
- Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
- Lighting: For added protection for this product, unplug it from the wall outlet during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
- Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a fire or electric shock.
- Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
- Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

- Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
- Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

WARNING:

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Troubleshooting Guide

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support (www.naxa.com/naxa_support/).

Symptom	Possible Cause	Possible Solution
The device is connected but there is no sound.	The AUX connector may be in use.	Disconnect all cables from the AUX input connector of the speaker.
	The speaker may be in the wrong mode.	Press and hold ⏸ / M to change the active mode.
	Your device may be beyond the effective range of the speaker.	Move closer to the speaker. Range may be affected adversely by environmental conditions.
	Your device may not be in playback mode.	Ensure that your device is operating correctly. Start playback on your device.
There is no power.	The battery is exhausted.	Connect the unit to a USB power source to charge it.
	The speaker hasn't been turned on.	Set the Power/Function switch on the back of the speaker to the "ON" or "BT" position.
The device is unable to connect to the speaker.	The speaker is not in pairing mode.	Reset the speaker (turn it off and then set the Power/Function switch to the "BT" position).
	Bluetooth may be disabled on the device.	Make sure Bluetooth is enabled on your device. Turn it on if it isn't.

Specifications

Speakers	3W RMS
Frequency Response	150 – 20,000 Hz
Removable Memory Support	USB microSD, microSDHC (max 8 GB)
Playable Media Formats	MP3
Radio Tuner	FM
Wireless Source	Bluetooth®
Input	3.5mm AUX audio (via USB with included adapter) Built-in microphone
Power	Rechargeable battery (300 mAh) USB charge port (DC 5V)
Battery Life*	Music: 1 hour Talk: 1.5 Hours

* Estimated time based on Bluetooth use at 100% volume; battery life will vary depending on use conditions.
Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support
2320 East 49th St.
Vernon, CA 90058

http://www.naxa.com/naxa_support/

www.naxa.com

Page 15