

刀模线不印刷

单号: EC160526261

型号: 53010BT

印刷及材质要求: 80g书写纸, 正反面单色印刷, 8折页

尺寸: 148x105mm

美工: 小劳



Portable Bluetooth® Stereo System
NAS-3077



Instruction Manual

Please read carefully before use and keep for future reference.

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.


We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at www.naxa.com and see all that we have to offer!

In the Box


Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at www.naxa.com/naxa-support.

- NAS-3077
- USB charge cable
- 3.5mm AUX cable


At a Glance

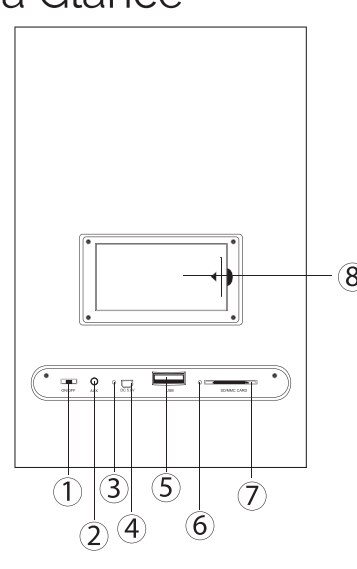

| | |
|-----------------------|--|
| 1 ON/OFF connector | Power switch. Turn the speaker on or off. |
| 2 AUX connector | AUX mode. 3.5mm stereo connection for devices with 3.5mm line-out or headphone output. |
| 3 Charge LED | Lights red when the speaker is charging. Turns off when the speaker is fully charged. |
| 4 DC 5V | USB charge port. Connect to a USB power source with the included cable. |
| 5 USB port | USB mode. Load USB memory sticks here. The USB port is designed for media playback from flash memory devices. It is not designed to charge high-power devices. |
| 6 Status LED | Lights up to indicate the current mode of the speaker. |
| 7 SD card slot | SD mode. Load an SD/SDHC memory card here. |
| 8 Battery compartment | Remove the cover to install the included rechargeable battery, then replace the cover. |

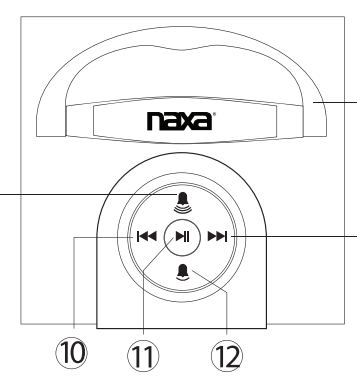

| | |
|----------------|--|
| 9 Volume up | Volume up. Press and hold to increase the volume level. |
| 10 Previous | Previous. Press to skip to the previous track during music playback, or tune to the previous preset station when listening to the radio. |
| 11 Play/pause | Play/pause. Start, pause or resume playback. Mode. Press and hold to change the active source mode. |
| 12 Volume down | Volume down. Press and hold to decrease the volume level. |
| 13 Next | Next. Press to skip to the next track during music playback, or tune to the next preset station when listening to the radio. |
| 14 Handle | A convenient handle folds down when it is not in use. |

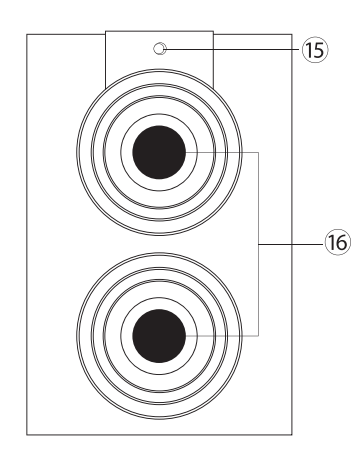

| | |
|--------------|---|
| 15 Power LED | Lights steady when the speaker is on. |
| 16 Speakers | Twin full-range drivers deliver high-performance sound. |

Connecting Power

Your speaker can be powered by the included rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

• Connect the large end of the cable to a high-power USB port of a computer. The computer should be powered on.

The Charge LED [3] will light a steady red when the battery is charging. When charging is complete, the charge LED will darken.

DO NOT USE the speaker while charging the battery. To use the speaker while connected to a USB power source, remove the battery first.

Do not charge the battery for more than 5 hours at a time as this may shorten the operational life of the battery.

It takes approximately 2 hours to charge the unit fully when connected to a standard USB port.

Installing the Battery:

- Remove the cover of the battery compartment [11] found on the back of the speaker.
- Place the rechargeable battery (BL-5C) in the battery compartment, taking care to match the +/– poles of the battery with the markings in the compartment.
- Replace the cover of the battery compartment.

Charging the Battery

Use the included USB cable to connect the speaker to a USB power source to charge the battery.

- Connect the small end of the cable to the USB charge port of the unit.

The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

About the Status Indicators

The status indicators light up to let you know which mode the speaker is in.

| Status Indicator | Speaker Mode |
|--|--|
| Charge LED [3]: Steady red when the speaker is connected to USB power. | The speaker is charging. |
| Charge LED [3]: Off when the speaker is connected to USB power. | The speaker is fully charged. |
| Status LED [6]: Flashing quickly green. | The speaker is on and is ready to pair to a Bluetooth® device. |
| Status LED [6]: Steady green. | The speaker is connected to a Bluetooth device |
| Status LED [6]: Flashing slowly green. | The speaker is playing audio from a Bluetooth device. |
| Power LED [15]: Steady blue. | The speaker is on. |

Using the Bluetooth® Speaker

Pairing a Device with Bluetooth®

A device must be paired with the speaker before using them together for the first time. Make sure Bluetooth® is enabled on your device before attempting to pair it with the speaker.

When you turn on the speaker, it will automatically be in FM mode, you need to press to change the speaker to Bluetooth mode, then the speaker will search for a paired device. If it doesn't detect a paired device, it will switch to pairing mode (the green status indicator will flash quickly). Then:

- Use your device to search for available Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
- The speaker will announce itself as "NAXA NAS-3077". Select it from the list of devices.
- If your device asks for a passcode, use "0000" to complete the pairing process.

When the speaker is paired and connected to a device, the status indicator will light a steady green.

Bluetooth® Speaker Controls

When the speaker is connected to a Bluetooth® device:

| To do this... | ...do this |
|--|--------------------------|
| Start, pause, or resume audio playback | Press ▶ |
| Skip to the previous track | Press ◀◀ |
| Skip to the next track | Press ▶▶ |
| Decrease the volume level | Press ◀ |
| Increase the volume level | Press ▶ |
| Switch the audio source mode | Press and hold ▶ |

Using the Bluetooth® Card Player

Your speaker can play MP3 files from USB memory sticks or SD memory cards. Connect USB memory

Using the FM Radio

Turn the speaker on, then press and hold **▶|** to set the active source of the speaker to FM Radio.

When the speaker is in USB or SD mode:

| To do this... | ...do this |
|--|--------------------------|
| Start, pause, or resume audio playback | Press ▶ |
| Skip to the previous track | Press ◀◀ |
| Skip to the next track | Press ▶▶ |
| Decrease the volume level | Press ◀ |
| Increase the volume level | Press ▶ |
| Switch the audio source mode | Press and hold ▶ |

Do not remove USB sticks or SD memory cards while the speaker is on. Doing so may damage the speaker system or memory card/USB stick.

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN DAMAGE TO THE SPEAKER SYSTEM AND VOID THE WARRANTY.

When the speaker is in FM Radio mode:

| To do this... | ...do this |
|--|--------------------------|
| Scan for stations within reception range and automatically save them as preset stations (up to 20) | Press ▶ |
| Tune to the next preset station | Press ▶▶ |
| Tune to the previous preset station | Press ◀◀ |
| Decrease the volume level | Press ◀ |
| Increase the volume level | Press ▶ |
| Switch the audio source mode | Press and hold ▶ |

Rescan for stations when you change the location of the speaker.

Using the AUX Input Connector

Connect devices without Bluetooth® by using the AUX connection. A 3.5mm stereo patch cable is required to make this connection.

- Use the included AUX cable to connect the device's headphone or line-out jack to the AUX connector [2] found on the back of the speaker.
- Turn on the device and the speaker. Lower the volume on both.
- Press and hold **▶|** to set the active source of the speaker to AUX.
- Set the device volume to 80% of its maximum and then start playback.
- Press **▶** to gradually increase the volume of the speaker to a comfortable level.

Use the connected AUX device to control all functions in AUX mode. The speaker can only be used to adjust the volume.

Warnings and Precautions

CAUTION

WARNING: SHOCK HAZARD. DO NOT OPEN.
AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR.

CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information

- Read Instructions: All the safety and operating instructions should be read before the product is operated.
- Retain Instructions: The safety and operating instruction should be retained for future reference.
- Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
- Follow Instructions: All operating and usage instructions should be followed.
- Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
- Water and Moisture: Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
- Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

- Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
- Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
- Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
- Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
- Lightning: For added protection for this product, unplug it from the wall outlet during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
- Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
- Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

- Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
- Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING:
This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this license may void the authority granted by the FCC to operate the equipment.

Trademark & Regulatory Statements

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. Other trademarks and names are those of their respective owners.

Troubleshooting Guide

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support (www.naxa.com/naxa-support/).

| Symptom | Possible Cause | Possible Solution |
|---|---|--|
| There is no power. | The battery is exhausted. The speaker hasn't been turned on. | Connect the unit to a USB power source to charge it. Set the ON/OFF switch on the back of the speaker to the "ON" position. |
| The device is unable to connect to the speaker. | The speaker is not in pairing mode. | Reset the speaker (turn it off and then on again.) Wait for the status indicator to flash quickly. |
| | Bluetooth may be disabled on your device. | Make sure Bluetooth is enabled on your device. Turn it on if it isn't. |

Specifications

| | |
|--------------------------|---|
| Speakers | 3" full-range drivers |
| Frequency Response | 150-20,000 Hz |
| Removable Memory Support | USB, SD, SDHC (max 32GB) |
| Playable Media Formats | MP3 |
| Radio Tuner | FM |
| Input | Bluetooth® 3.5mm AUX line-in |
| Power | Rechargeable battery (500 mAh) USB charge port (DC 5V) |
| Battery Life* | 2 hours |

* Estimated time based on Bluetooth use at 100% volume; battery life will vary depending on use conditions.
Note: Product is improved continuously. We reserve the right to modify the product and specifications without prior notice.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support
2320 East 49th St.
Vernon, CA 90058
<http://www.naxa.com/naxa-support/>

Using the Bluetooth® Speaker

Pairing a Device with Bluetooth®

A device must be paired with the speaker before using them together for the first time. Make sure Bluetooth® is enabled on your device before attempting to pair it with the speaker.

When you turn on the speaker, it will automatically be in FM mode, you need to press to change the speaker to Bluetooth mode, then the speaker will search for a paired device. If it doesn't detect a paired device, it will switch to pairing mode (the green status indicator will flash quickly). Then:

- Use your device to search for available Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
- The speaker will announce itself as "NAXA NAS-3077". Select it from the list of devices.
- If your device asks for a passcode, use "0000" to complete the pairing process.

When the speaker is paired and connected to a device, the status indicator will light a steady green.

Bluetooth® Speaker Controls

When the speaker is connected to a Bluetooth® device:

| To do this... | ...do this |
|--|--------------------------|
| Start, pause, or resume audio playback | Press ▶ |
| Skip to the previous track | Press ◀◀ |
| Skip to the next track | Press ▶▶ |
| Decrease the volume level | Press ◀ |
| Increase the volume level | Press ▶ |
| Switch the audio source mode | Press and hold ▶ |

Using the Bluetooth® Card Player

Your speaker can play MP3 files from USB memory sticks or SD memory cards. Connect USB memory