



## Instruction Manual

Please read carefully before use and keep for future reference.

---

---

# Important Safety Information



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

**WARNING:** This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.*

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply


with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

# At a Glance

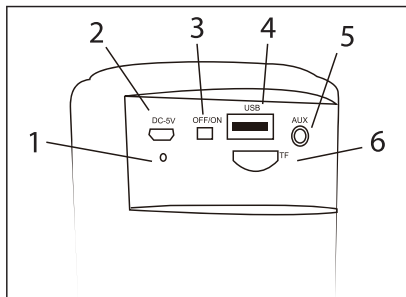

1. Indicator  
Light

LED Indicator Light

2. DC 5V  
Power Port

DC 5V Micro USB charge port

3. On/Off  
Switch

Switch to turn the unit On/Off

4. USB port

USB Port to plug in a flash drive


5. AUX Input

3.5mm AUX input

6. Micro SD  
input

Insert a Micro SD card to listen to  
MP3 files.

## At a Glance

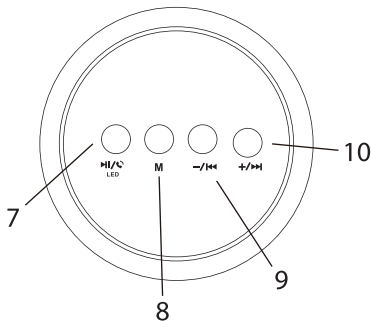

7.   
LED

Press to Pause or Resume Playback

Press to Answer/End a call when the speaker is connected to a smartphone via Bluetooth

Press and hold to turn on and off the LED Lights on the speaker

8. M  
(Mode Button)

Press to select different inputs  
(Bluetooth®/FM/USB/Micro SD/AUX)

9. 

Press to skip to previous track.  
Press and hold to decrease the volume

10. 

Press skip to the next track.  
Press and hold to increase the volume.

---

---

# Bluetooth® speaker with LED Lights

This Naxa NAS-3082 portable Bluetooth® speaker allows you to take your music just about anywhere you want. Stream your music from any Bluetooth® enabled device at a range of up to 30' or connect your MP3 player or smartphone using the 3.5mm line-in audio jack. LED lighting effects give you a light show for an added enjoyment while you listen to your favorite music or soundtracks. The hands-free Bluetooth® speaker has a built-in microphone which allows you to receive an incoming call while paired with a Bluetooth® enabled smartphone. This lightweight speaker makes it easy for you to take it anywhere and enjoy music on the go.

---

---

# Speaker Function Parameters

Frequency response: 80–18,000 Hz.

FM frequency range: 87.05–108 MHz (±3DB)

SNR ≥65DB

Bluetooth® connection distance ≥10M with hands-free function.

Power input USB power of 5V–1000mA from AC power adapter (not supplied)

---


---

# Instructions for Use

Operating Instructions

Built-in battery

DC-5V (0.4–1A) USB power adapter (not supplied)

 REMINDER: When charging the battery is completed, please unplug the cable.

While the unit is charging, the indicator light will remain on RED.

When the unit is fully charged, the light will turn off.

---

---

## Bluetooth® Mode

Your Bluetooth® speaker can wirelessly stream audio from any Bluetooth® enabled device within the distance of 26–33 ft. Please follow the steps below to setup connection.






1. Turn ON the unit.
2. The LED lights will flash on the unit indicating your speaker is powered on and in “pairing” mode.
3. Enable Bluetooth® on your Mobile Phone, Tablet, or Computer.
4. Scan for available devices and pair with “NAXA NAS-3082”.
5. If your device requires a password, please enter “0000” to confirm the pairing process.
6. You will hear a voice confirming you have paired successfully.
7. If pairing was unsuccessful, please repeat the steps above.

---

---

## Bluetooth® Control Buttons



When the speaker is connected to a device via Bluetooth®:

To	Do
Start, Pause, or Resume playback	Press  LED
Play the previous track	Press 
Play the next track	Press 
Adjust the Volume	Press and Hold  or 



*You may also use your device to control playback. Some devices may not support remote Bluetooth controls.*

*Volume control can be adjusted on both the device and speaker.*

To	Do
Answer/End Call	Press  LED
Call previous number dialed	Press  LED (2x) times quickly

---

---

## Listening to FM Radio

1. Turn ON the unit.
2. Short press the MODE button until you hear the FM Tuner input.
3. Short press the **▶||** button for searching and recording preset radio stations within the frequency range of 87.5–108Mhz. .
4. Short press the **◀◀** or **▶▶** buttons to listen to the next and previous preset radio stations.
5. Long press the **◀◀** or **▶▶** buttons to adjust the volume up or down.

---

---

## AUX Mode

Connect devices without Bluetooth® by using the AUX input. A 3.5mm stereo mini patch cable (supplied) is required to make this connection.

- 
- 
1. Turn ON the unit.
  2. Connect your audio device using the supplied 3.5mm AUX cable and the unit will automatically go to the LINE(AUX) input.
  3. Select your favorite song on your source player and begin playback.

## Using USB & Micro SD Mode

Install a USB drive or MicroSD card and music will automatically begin playback.

1. Turn ON the unit.
2. Insert a USB flash drive or a MicroSD card in the slot and music will automatically begin playback.
3. Short press **◀◀** or **▶▶** to switch between your tracks.
4. Short press the Play/Pause button to Pause or resume playback.
5. Long press the **◀◀** or **▶▶** to increase or decrease the volume.





If you insert a USB drive or MicroSD card while in Bluetooth® Mode, the unit will disconnect from Bluetooth® and begin playback in USB or MicroSD mode. Press the Mode button to return back to BT.

## Connecting Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be fully charged to ensure optimal performance and battery life.

Use the included USB charging cable to connect the speaker to a USB power source to charge the battery.

1. Connect the USB charging cable (included) to a DC 5V charging port of the speaker and insert the other end into a USB port on your computer or a similar power source.
2. Red LED indicator signifies that the unit is charging. Once the unit is fully charged, the LED indicator light will turn off.



it takes approximately 3 to 6 hours to charge the unit fully when connected to a standard USB port.



Do not charge the unit for more than 8 hours to optimize the lifetime performance of the battery.

## Troubleshooting Guide

This guide lists common problems and their solutions. solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support @ [www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)

Symptom	Possible Cause	Solution
There is no power.	The power switch is set to Off. Battery dead.	Make sure the switch is set to ON. Charge the battery.
Device is unable to connect to the speaker.	The speaker is not in pairing mode. Bluetooth is disabled.	Power cycle the speaker Enable Bluetooth mode on your device.
The device is connected but there is no sound.	The AUX connector may be in use. Your device may be too far from the speaker. Your device is not in playback mode.	Disconnect the AUX cable from the device. Move your device closer to the speaker. Ensure your device is operating correctly. Start playback.

---

---

## Specifications

Speaker Output	6W RMS (2 x 3W)
Audio Frequency Range	80Hz – 18,000Hz
External Memory Support	USB, Micro SD (max 32GB)
Audio Format	MP3
Radio Band	FM
Radio Band Coverage	87.5 – 108 MHz
Inputs	Bluetooth®, AUX (3.5mm)
Built-in Rechargeable battery	3.7V / 1500 mAh USB charge port 5V
Battery Life	Talk time: Up to 4 hours Playback: Up to 1.5 hours

## Accessories

- 1 x Bluetooth Portable Speaker
- 1 x Owner's Manual
- 1 x USB Charging Cable
- 1 x 3.5 mm AUX cable

Specifications are subject to change without prior notice.

---

---

## Support

If you have problems with your device, please re-view the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get the latest news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

### **NAXA Technical Support**

2320 East 49th St.

Vernon, CA 90058

866-411-6292

[http://www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)

MADE IN CHINA