



## Instruction Manual

Please read carefully before use and keep for future reference.

---

---

# Important Safety Information



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

**WARNING:** This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.*

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply


with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

# At a Glance

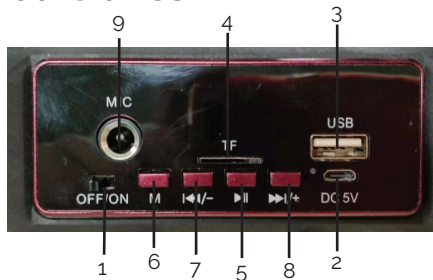

1. Power Switch  
ON/OFF

To turn the speaker on and off

2. DC 5V Port

Plug the Micro USB cable into the speaker for power

3. USB Port

Used to read MP3 files in FAT32 format (maximum size: 32 GB)

4. Memory Card Slot

Used to read MP3 files in FAT32 format (maximum size: 32 GB)

5. Play/Pause

Under USB/SD/Bluetooth mode, press to play or pause playback

6. M (Mode)

Used to change the mode between USB/Memory Card, Bluetooth, FM, and Aux-in mode

7. PREV/VOL-

USB/Memory Card/Bluetooth/FM mode: Press to go back a track. Hold to decrease the volume

8. NEXT/VOL+

USB/Memory Card/Bluetooth/FM mode: Press to skip to the next track. Hold to increase the volume

9. MIC-IN

Connect with your desired microphone

---

---

## Connecting to Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be fully charged to ensure optimal performance and battery life.

Use the included USB charging cable to connect the speaker to a USB power source to charge the battery.

1. Connect the USB charging cable (included) to the DC 5V charging port of the speaker and insert the other end into a USB port on your computer or a similar power source.
2. Red LED indicator signifies that the unit is charging.



*In order to extend the life of the battery, please do not charge more than 4 hours. Over charging the speaker can adversely impact the battery life.*

---

---

## Getting Started

### Turning the Unit On and Off

Slide the On/Off switch to the ON position to turn the unit ON.

Slide the On/Off switch to the OFF position to turn the unit OFF.

### Bluetooth® Mode

Your Bluetooth® speaker can wirelessly stream audio from any Bluetooth® enabled device within the distance of 26–33 ft. Please follow the steps below to setup connection.

1. Turn the unit on.
2. The Blue LED light will flash rapidly, indicating your speaker is powered on and in “pairing” mode.
3. Enable Bluetooth® on your Mobile Phone, Tablet, or Computer.
4. Scan for available devices and pair with “NAXA NAS-3096”.

5. If your device requires a password, please enter “0000” to confirm the pairing process.
6. Once paired, Bluetooth will automatically connect when the unit is turned on and the paired device is nearby in the future.
7. If pairing was unsuccessful, please repeat the steps above.

## Listening to Music Wirelessly

Function	Operation	Button
Increase Volume	Playing Music	Long press the <b>▶▶</b> button to increase the volume.
Decrease Volume	Playing Music	Long press the <b>◀◀</b> button to decrease the volume.
Pause	Playing Music	Short press the Play/Pause button to Pause the music.
Play	Pause	Short press the Play/Pause button to Resume playback.
Previous Track	Playing Music	Short press the <b>◀◀</b> button to return to the previous track.
Next Track	Playing Music	Short press the <b>▶▶</b> button to skip to the next track.



*A tone indication will alert you once volume has reached maximum level.*

## AUX-IN Mode

Connect devices without Bluetooth® by using the AUX connection. The included auxiliary cable is required for connection.

1. Insert the included cable into the AUX-IN port on the unit.
2. Insert the other end of the cable into the compatible media device you wish to stream from.
3. Press the Mode (M) button on the speaker and switch to Aux-in mode.
4. Press and hold **◀◀** or **▶▶** to turn the volume up or down.

While in Aux-in mode, you can not skip to the next or previous track via the Bluetooth speaker. You must use the external device to change the track.

---

## Using USB & Card Mode

Insert a USB drive or memory card and music will automatically begin to play.

1. Turn on the unit.
2. Insert a USB flash drive or a memory card in the slot and music will automatically begin to play.
3. Briefly press **◀** or **▶** to switch between your tracks. Press and hold to decrease or increase the volume.
4. Briefly press the Play/Pause button to pause or resume playing.



*If you insert a USB drive or memory card while in Bluetooth® Mode, the unit will disconnect from Bluetooth® and begin playing in USB or memory card mode. Press the Mode button to return back to BT.*

---

## Listening to FM Radio

1. Turn on the unit.
2. Press the Mode (M) button to enter FM mode.
3. Briefly press the **▶||** button for searching and recording preset radio stations within the frequency range of 87.5–108Mhz. .
4. Briefly press the **▶▶** or **◀◀** buttons to listen to the next and previous preset radio stations.
5. Press and hold the **▶▶** or **◀◀** buttons to adjust the volume up or down.



*While playing the FM Radio, plug in the AUX cable (included) into the AUX IN port for better reception. This cable serves as an antenna and enhances FM stations near you.*

---

---

## NOTES



Press and hold the Mode button to switch between different inputs on the unit. The inputs are as follows: **Bluetooth® / USB – Card / FM / AUX.**

When the unit is not in use, please turn off the unit to save battery life.

Do not overcharge the unit. Every charge should not exceed 4 hours.

---

---

## Troubleshooting Guide

This guide lists common problems and their solutions. solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support @ [www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)

Symptom	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, laptop, etc) volume too low. Battery dead	Adjust source volume Charge battery
Audio distorted	Battery nearly drained/ dead	Charge battery
No Sound at all	Source (Tablet, Mobile Phone, laptop, etc) turned off. Speaker turned off. Source Volumes turned down. Media paused on source.	Turn the source on. Turn on Speaker. Adjust volume source. Play media from source

---

---

## Specifications

Bluetooth Version	4.2 + EDR
Speaker Output	5W
Frequency Response	100Hz~20KHz
Bluetooth Range	Up to 10 Meters (33 Ft.)
Memory Storage	32 GB (USB/memory card)
Battery Capacity	Removable 800mAh
Play Time at Max Volume	BT: 1 Hour, USB: 1.5 Hours

## Accessories

1 x Bluetooth Portable Speaker

1 x Owner's Manual

1 x 2-in-1 USB Charge/Audio Cable

***\*Specifications are subject to change without prior notice.***



---

---

# Support

If you have problems with your device, please re-view the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get the latest news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

## **NAXA Technical Support**

2320 East 49th St.

Vernon, CA 90058

866-411-6292

[http://www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)