



Wireless Portable Karaoke Speaker



NDS-1213



Instruction Manual

Please read carefully before use and keep for future reference.

WARNING

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Guard this manual.
3. Obey all alerts.
4. Follow all instructions.
5. **WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture. Do not store and operate this product near liquid.
6. Clean only with dry cloth.
7. Not store and not operate this product near any heat sources such as radiators and heat registers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a well ventilated place.
8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two blades being wider than the other. A grounding plug has two blades plus a round pin to ground. The wide blade or the third prong is intended to provide security. If the provided plug does not fit into your outlet, consult an electrician to replace the outlet.
9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs and the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the plug and do not pull the cord.
10. Disconnect the unit during lightning storms or when long period is to remain unused.
11. Keep this unit off when connecting all the devices connected to it.
12. After finishing the installation and connections, connect all your equipment with low volume level. Once all devices are connected, slowly increase the volume or level controls to achieve the proper position.
13. Before placement, installation, assembly or suspending any product, inspect all equipment, suspension, cabinets, transducers, brackets and associated equipment.
Any missing component, corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrangement of the installation significantly. Any of these conditions can reduce the security of the facility and must be corrected immediately.
Use only suitable equipment for the loading conditions of the installation and that any possibility of reducing term, unexpected overload, never exceed the capacity of the material or equipment.
14. Consult a licensed professional to install the equipment and make sure that all local, regional and national regulations related to security are understood and adhered to.
15. All services should be performed by qualified professionals. Servicing is required when the apparatus has been damaged in any way, as if having the power cord or its damaged connector, or if the machine breaks contact with liquid or if any object is inserted in the unit or if the unit is exposed to rain or moisture, or if the unit does not operate normally, or has been dropped.


CHARGE THE BATTERY FULLY BEFORE FIRST USE TO OPTIMIZE ITS LIFETIME PERFORMANCE.

BACK PANEL

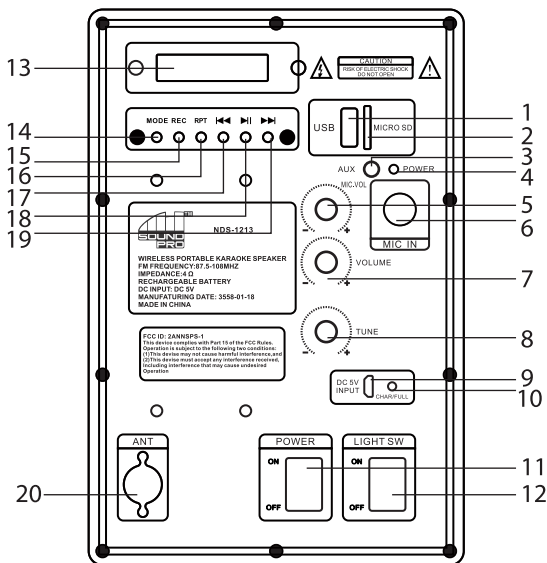

1. USB SLOT: Insert USB Drive to listen stream music
2. MEMORY CARD SLOT: Insert Media card to stream music
3. AUX IN: Connect external media player using 3.5mm line in cable (Cable not included)
4. POWER LED: Turns on when unit is powered on.
5. MIC VOLUME: Increase/Decrease Microphone Volume
6. MICROPHONE JACK: (MICROPHONE NOT INCLUDED): Plug in Microphone for Karaoke
7. MASTER VOLUME: Increase/Decrease Volume
8. TUNE: Adjust sound effect
9. DC 5V POWER INPUT: Use included charging cable to charge unit. Adaptor not included
10. CHARGING INDICATOR: Red = charging, Green = fully charged
11. POWER ON/OFF: Turn ON/OFF unit's power supply
12. LIGHT ON/OFF: Turn On/Off Woofer Light while unit is powered on
13. LED DISPLAY: Displays status
14. MODE: Toggle between source BT/USB/ Memory Card /FM/Aux. Long Press to turn ON/OFF voice prompt
15. RECORD: Long Press to record audio on Memory Card or USB while using Microphone, press again to stop recording and listen to playback. Insert Memory Card or USB drive with enough blank space to Record.
16. REPEAT: Press to repeat current track, press again to repeat all tracks in the Album
17. PREVIOUS: Select previous track in USB/ Memory Card Modes, Select previous preset frequency in FM mode
18. PLAY/PAUSE: Play or Pause in BT/USB/ Memory Card Mode, Scan for available frequencies in FM Mode, Mute in Aux Mode. Long press to change voice prompt form English to Chinese OR Chinese to English
19. NEXT: Select next track in USB/ Memory Card Modes, Select next preset frequency in FM mode
20. TELESCOPIC ANTENNA: Extend Antenna for better reception of FM frequencies

REMOTE CONTROL

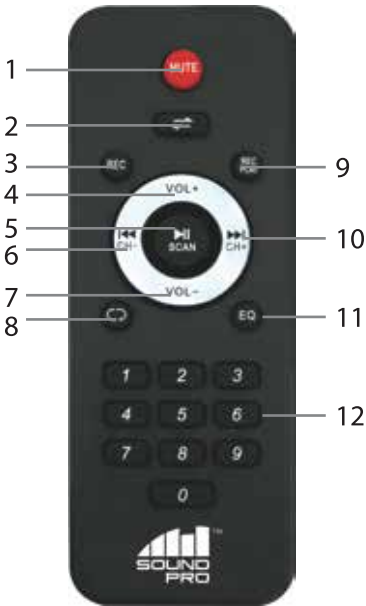

1. MUTE: Press to off audio
2. MODE: Toggle between source BT/USB/Memory Card/FM/Aux. Long Press to turn ON/OFF voice prompt
3. RECORD: Record Audio while using microphone
4. VOLUME UP: Increase Volume
5. PLAY/PAUSE: Play or Pause in BT/USB/Memory Card Mode, Scan for available frequencies in FM Mode. Long press to change voice prompt form English to Chinese OR Chinese to English
6. PREVIOUS: Select previous track in USB/Memory Card Modes, Select previous preset frequency in FM mode
7. VOLUME DOWN: Reduce Volume
8. REPEAT: Press to repeat current track or press again to play all tracks in album
9. RECORD PLAY: Play recording
10. NEXT: Select next track in USB/Memory Card Modes, Select next preset frequency in FM mode
11. EQ: Select Present Sound effects
12. NUMBER KEY 0-9: Press track number to play the track in USB/Memory Card mode

POWER SUPPLY

1. Connect the supplied USB cable unit to a 5V USB outlet to charge the unit.
2. Switch the Power button to turn On and Off the unit.

PAIRING A BLUETOOTH® DEVICE

1. Press the “MODE” button to select Bluetooth® Mode. The screen will display the word “Blue”.
2. From your Bluetooth® enabled device, search for “SOUND PRO NDS-1213” and select it to pair.
3. Press the Play/Pause button to Pause or resume playback.
4. Tracks can be changed from your connected Bluetooth® enabled device.
5. Only one device can be connected through Bluetooth® at a time.

AUX IN

1. Press the “MODE” button to select the AUX function.
2. Press the Play/Pause button to Mute the sound on the unit.
3. Plug in an external device to the AUX jack to listen to audio through the speaker. (AUX cable not included)

PLAYBACK ON USB/MEMORY CARD

1. Insert a USB flash drive and/or Memory card in the slots provided. Please make sure you use the correct file format in your media devices - MP3 FILES ONLY.
2. Press the MODE button to select the USB input. Press the MODE button to switch between USB and Memory Card inputs. Playback will automatically start. Please ensure that the speaker is fully charged & that your files are in MP3 format.
3. Screen will display U/TF and Track played time.
4. Press the Previous or Next button to skip to the previous or next tracks.
5. Press the Play/Pause button to Pause or resume playback.
6. Press the "Repeat" button to repeat current track, repeat all tracks.

USING A MICROPHONE

1. Plug in a Microphone into the Microphone jack to sing along on any input.

FM RADIO

1. Press the "MODE" button to select FM Radio.
2. Long press the Play/Pause button to auto scan all available radio frequencies. It will search and automatically store all available.
3. Press Next or Previous to select desired stored stations.
4. The LED Display will show the selected station.

SPECIFICATIONS

Woofer x 1, Driver Size: 12"

Tweeter x 1, Size: 1.5"

Peak Music Power Output: 2500W

Wireless Source: Bluetooth®

Removable Memory Support: USB / Memory Card

Audio Format Support: MP3

Tuners: FM

Input Sources: 3.5mm AUX, 6.3mm MIC

Power Source: 5V DC, charging cable included.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support
2320 East 49th St.
Vernon, CA 90058
(866) 411-6292

<http://www.naxa.com/supportcenter/>



