

刀模线不印刷

型号：8B151BT

尺寸：折后 148*210mm

印刷材质及要求：80g 书纸，单色正反面印刷，2 折页

美工：小邹

文件完成时间：2018/01/02

正面印刷

naxa[®]
THE NEW GENERATION IN TECHNOLOGY

NE-966



RADIANT
WIRELESS EARBUDS WITH MIC

INSTRUCTION MANUAL

RADIANT Bluetooth® Wireless Earbuds

FEATURES

- Works with all Bluetooth®-enabled devices including iPad®/iPhone®/iPod® Touch models, Galaxy® and Android™.
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away.
- Integrated rechargeable battery provides hours of playing time wherever you go.

CONTENTS

- Wireless Earbuds with Mic (1)
- 1 USB Charging Cable
- 1 User Manual

SPECIFICATIONS

- Power: Internal Li-Ion Rechargeable Battery
- Bluetooth Version: Bluetooth v4.2
- Wireless Capability: Up to 33 ft range
- Supply Voltage: DC 5V (not included)
- Driver Unit: 10 mm
- Frequency Response: 20Hz – 20KHz
- Sensitivity: 103 ± 2dB
- Impedance: 32ohms

CHARGING THE BATTERY

The internal battery must be fully charged before first use of the wireless earbuds. To charge, use the included USB charge cable:

1. Insert the smaller micro-USB end of the cable into the CHARGE INPUT on the earbud unit.
2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights up red during charging and will turn blue when charging is complete. Unplug from the power source when charging is complete.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as advised above to resume normal operation.

WIRELESS EARBUDS OPERATION

Wireless playback Via Bluetooth:

1. Make sure the battery is charged as explained above.
2. On the controller, press and hold the POWER/PLAY BUTTON until the indicator light flashes blue and red – this means the Bluetooth function is active and ready to connect to your smartphone/Bluetooth audio device. NOTE: If you do not connect the earbuds with a Bluetooth device after 5 minutes of being turned on, the earbuds will turn off automatically. Restart this step to try to connect again.
3. Activate Bluetooth function on your audio device – it should automatically recognize the earbuds unit and allow you to select it using the name “NE-966”. If required, enter the password “0000” to complete the wireless connection. When the earbuds are connected, the indicator light on the controller will flash blue and you are now set to enjoy wireless audio from within a 33ft range of the audio device.
4. Before playback, first adjust the volume of your audio device to medium level as a safe starting point.
5. To play audio, click the POWER/PLAY BUTTON once.
6. To pause audio, click the POWER/PLAY BUTTON once.
7. To increase the volume, press and hold +. To decrease the volume, press and hold -. The earbuds make a chime sound when they reach maximum volume. You may then adjust the volume on your audio device to make it even louder or softer as you please.
8. To go to the next song, click + once. To go to the previous song, click - once.
9. To answer an incoming call, click the POWER/PLAY BUTTON once.
10. To hang up a phone call, click the POWER/PLAY BUTTON once.
11. To disconnect and shut off the earbuds unit, press and hold the POWER/PLAY BUTTON until the indicator light goes out.

NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not overcharge the battery.

反面印刷

Product Diagram

