



## Instruction Manual

Please read carefully before use and keep for future reference.

---

---

# Table of Contents

<b>Thank You .....</b>	<b>4</b>	<b>Using the DVD Player.....</b>	<b>19</b>
<b>In the Box .....</b>	<b>4</b>	Loading a DVD .....	19
<b>Before You Start .....</b>	<b>5</b>	Playing a DVD .....	20
<b>At a Glance .....</b>	<b>6</b>	Returning to Tablet Mode.....	20
<b>Basic Operation .....</b>	<b>9</b>	<b>Managing &amp; Using Apps.....</b>	<b>21</b>
Turning the Unit On and Off .....	9	About the Apps.....	22
Sleep .....	9	Browser .....	22
About the Lock Screen and Security.....	10	Music .....	23
Charging .....	12	Video .....	23
<b>Getting Started.....</b>	<b>12</b>	Manage your Calendar .....	24
Using the Touchscreen .....	12	Sound Recorder .....	25
Using the Navigation Icons.....	13	E-mail.....	25
First Time Setup Wizard.....	14	Managing Downloads.....	26
Using the Home Screen.....	14	Apps Settings and Options.....	27
Using the Dock .....	15	<b>Connecting to Wi-Fi Networks.....</b>	<b>31</b>
All Apps Icon .....	15	Connecting to a Wi-Fi Network .....	31
About the Notification Bar.....	16	Adding a Network Manually .....	34
Using the On-Screen Keyboard.....	17	Set Advanced Wi-Fi Options.....	35
Entering Text .....	17	<b>Adjusting the System Settings.....</b>	<b>36</b>
Basic Editing .....	17	Wireless & Networks.....	37
		Wi-Fi .....	37
		Data Usage .....	37

More .....	37	<b>About Optical Discs .....</b>	<b>44</b>
Device.....	37	Disc Types.....	44
Display .....	37	Video DVDs.....	44
Sound & notification .....	38	Audio CDs .....	44
Storage .....	38	Picture CDs (JPEG).....	45
Battery.....	38	DVD Features.....	45
Apps.....	38	DVD Region Codes.....	45
HDMI .....	38	Disc Care and Maintenance.....	46
ScreenshotSetting .....	39	Handling a Disc.....	46
Personal.....	39	Cleaning a Disc .....	46
Location .....	39	<b>Troubleshooting .....</b>	<b>47</b>
Security.....	39	<b>Warnings and Precautions.....</b>	<b>48</b>
Accounts.....	39	<b>Specifications .....</b>	<b>53</b>
Language and Input.....	40	<b>Support .....</b>	<b>54</b>
Backup & Reset.....	41		
System .....	41		
<b>Connect to a Computer via USB.....</b>	<b>41</b>		
<b>Tuning Your Tablet’s Performance.....</b>	<b>42</b>		
Optimizing battery life.....	42		
To extend the life of your battery:.....	42		
To check the battery level and usage details .....	42		

---

---

# Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at **[www.naxa.com](http://www.naxa.com)** and see all that we have to offer!

---

---

# In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at **[www.naxa.com/naxa\\_support](http://www.naxa.com/naxa_support)**.

- NID-9004 tablet
- AC power adapter
- USB cable
- User manual

---

 
---




# Before You Start


Please take note of the following before you start.

1. Do not drop the unit. Avoid forceful shaking of the display to prevent damage or unusual operation.
2. Do not touch the unit with metal objects to avoid short circuits.
3. Schedule regular backup of your data to prevent the loss of important data. Always backup your data before upgrading the firmware.
4. Do not disassemble. Do not wipe the surface of the unit with alcohol, thinner or benzene.
5. Do not disconnect the tablet while it is formatting or uploading/downloading. Doing so may corrupt your data.
6. Do not allow water or foreign objects to enter the tablet.
7. Do not use the tablet in places that are extremely hot, cold, dusty, or humid.
8. Specifications are subject to change and improvement without notice.

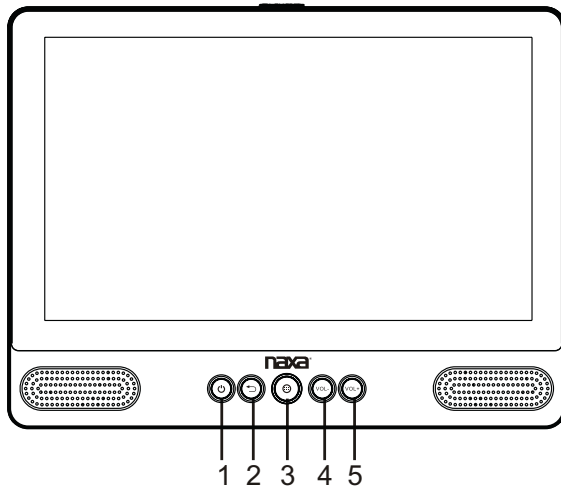
# At a Glance




1		Power: Press and hold to turn the tablet on or off. Sleep: Press once to wake or put the tablet to sleep.
2		Back: Press to return to the previous screen.
3		Home: Press to go to the home screen. Recent: Press and hold to see a list of the most recent apps.
4	VOL—	Volume down: Press to decrease the volume level.
5	VOL+	Volume up: Press to increase the volume level.

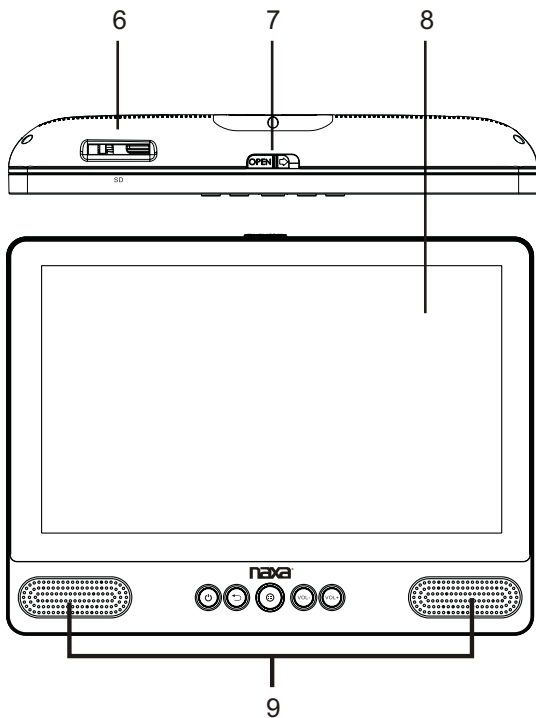 

6	SD	Load SD/SDHC/SDXC memory cards here.
7	DVD Open latch	Slide the latch to the right to lift the screen and reveal the DVD compartment.
8	LCD touchscreen	Display screen and touchscreen.
9	Speakers	High-performance stereo speakers.

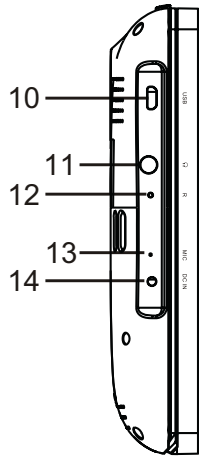 

10	USB	USB (micro type B) connector.
11		3.5 mm headphone out jack.
12	R	Reset button. Press to restart the tablet if none of the other controls are responsive.
13	MIC	Built-in microphone.
14	DC IN	Power input jack.



---


---

# Basic Operation
 
## Turning the Unit On and Off

Press and hold the power button [1] until the screen turns on and displays the start-up logo (about 3 seconds).

Press and hold the power button until the screen displays the Power menu. Tap Power off to turn the tablet off.

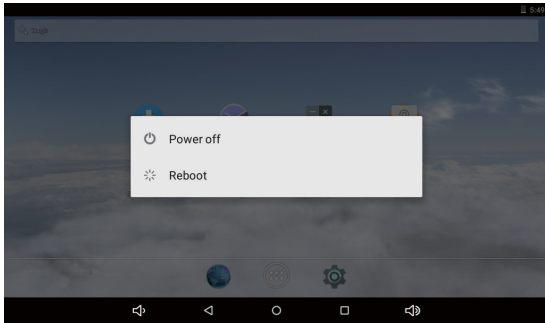

## Sleep

Place the tablet into Sleep mode to conserve power.

To place the tablet into Sleep mode, press the power button [1] once while the tablet is on. The screen will turn off.

To wake the tablet from Sleep mode, press the power button again. The screen will turn on. (It may take a second or two for the tablet to wake from sleep.)



 
*When the tablet is woken from sleep, the screen may be locked for your security. To unlock the screen, simply tap and hold the lock icon, then swipe your finger up the screen.*

*If you have set a password or other security feature, you will need to enter it to continue.*


# About the Lock Screen and Security

Customize the lock screen settings to prevent unauthorized use of your tablet.


1. Swipe down from the top of the screen to view the Notifications Panel.

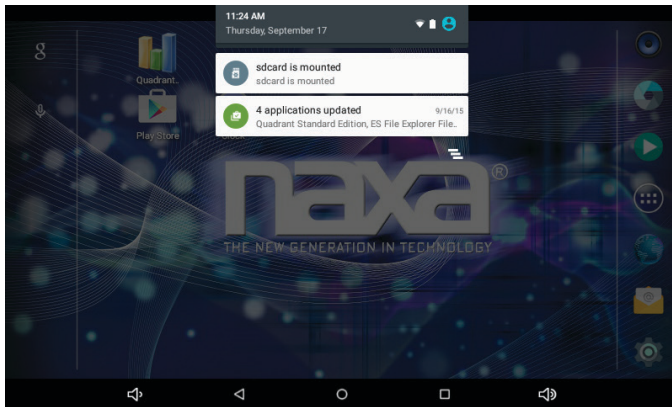

 2. Tap the top bar, then tap the Settings icon.

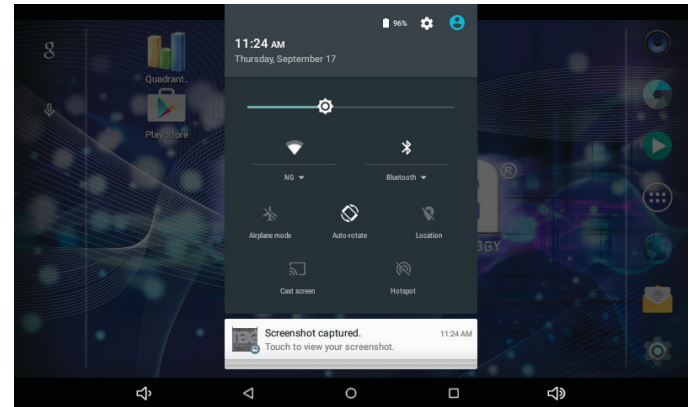

 3. Browse down the list of settings to locate the Personal section. Tap Security.

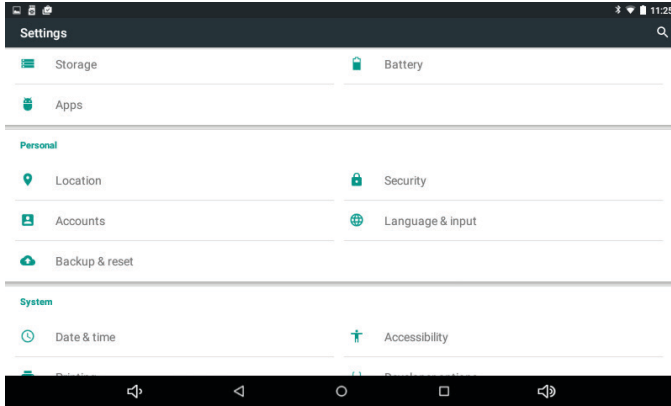

4. Tap Screen lock.
5. Tap the type of lock to use on the Lock Screen (None, Swipe, Pattern, PIN, or Password).

After you set a lock here, the tablet will display the lock screen whenever you turn the screen on. You will need to enter the password, PIN, or other security feature to continue using the tablet.



*Screen lock options are listed in the approximate order of the strength of their security, starting with “None” and “Swipe,” which provide no security. Pattern provides minimal security, although it can be more convenient than the stronger options. Naxa recommends that you always establish a strong PIN or password for security.*



*To learn more about your tablet’s security options, please refer to the section “Adjusting System Settings > Personal > Security”.*

# Charging

When the battery level is low, the tablet will prompt you to charge the tablet. Connect the provided charger to the DC IN power input jack [14] of the tablet; plug the other end of the charger to household AC 100–240 V power.



*Batteries contain chemicals that may be regulated by your local government. Observe all local regulations when disposing of this device.*



*To improve the performance and life of the battery, charge the tablet for an additional 15 minutes after the tablet indicates that it has been fully charged.*

---

---

# Getting Started

## Using the Touchscreen

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touchscreen. You can also change the screen's orientation.

To select or activate something, tap it gently with your finger.

To type something (e.g., a name, password, or a website address), just tap where you want to type. A keyboard will appear on the screen; tap the keyboard to type.

Other common gestures include:

- **Tap & Hold:** Tap an item & hold your finger over it until an action occurs. Do not lift your finger from the screen.
- **Tap & Drag:** Tap an item & hold your finger over it for a moment; then, without lifting your finger, drag your finger along the screen until you reach


 
 
the target position. Try using Tap & Drag to reposition icons on the Home screen.

- **Swipe or slide:** Slide your finger quickly across the surface of the screen. Do not pause when your finger first touches the screen to avoid dragging items accidentally. Swipe up or down to browse a list of items, or try swiping left or right on a Home screen to view other Home screens.
- **Pinch-to-Zoom:** In some apps (such as Browser and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the Screen:** On most screens, the orientation of the display will automatically rotate with your tablet as you turn it. You can change this option from the Display setting screen.

## Using the Navigation Icons

The Navigation icons are always displayed at the bottom of the screen. No matter what you are doing, these

icons are always available for you to browse the different screens of your tablet.

 
Icon	Name	Description
	Back	Tap this icon to return to the previous screen, even if it was in a different app. Tapping Back repeatedly will return you to the Home screen; you cannot go back further than the Home screen.
	Home	Tap this icon to navigate to the Home screen. If there are multiple Home screens, tap Home again to return to the central Home screen.
	Recent	Tap this icon to display a list of screens that you've worked with recently. Tap the thumbnail image of any screen to open it.  To remove an app from the list, swipe the thumbnail left or right, or tap the X.



*The Navigation icons may fade away if the screen has not been touched in a while for example, when watching a video. Simply tap the screen to display them again.*


# First Time Setup Wizard

The first time you turn on your tablet, a setup wizard will appear. Follow the on-screen instructions to get your tablet up and running. The Setup Wizard will guide you through setting the default language, connecting to a wireless network, restoring apps and data from previous Android devices, setting up a Google account, and more.

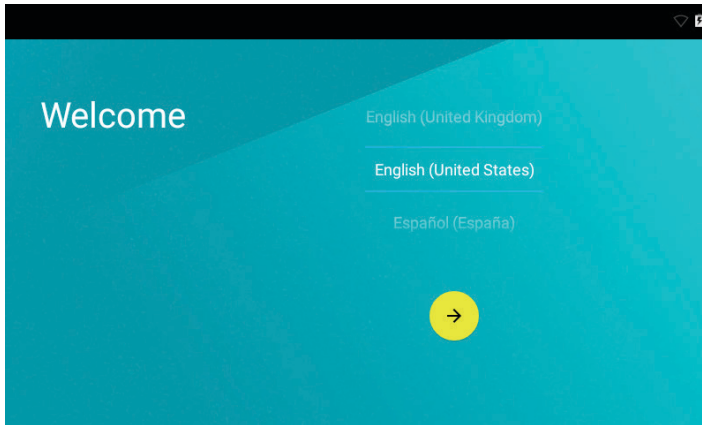

# Using the Home Screen

 The Home screen is the first thing you'll see after you finish the Setup Wizard. The Home screen can display app icons, widgets, and folders.

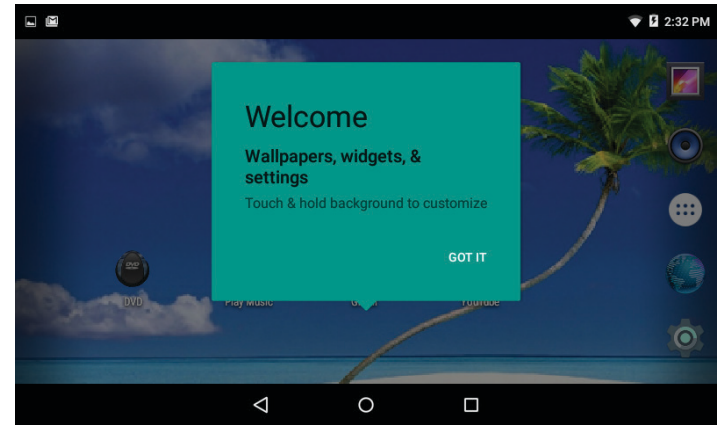

- To open an app, folder, or widget, tap it.
- If there are additional Home screens, swipe the screen left or right to view them.
- To return quickly to the main, center Home screen, tap the Home icon in the navigation bar.

# Using the Dock


The dock is a permanent fixture on all home screens. The dock is a good place to put apps that you will use a lot.



- To add an app to the dock, tap and hold the app icon and drag it into the dock.
- To remove an app from the dock, tap and hold an icon in the dock, then drag the icon out of the dock.

# All Apps Icon

The All Apps icon is displayed in the center of the Dock and is accessible on all Home screens. Tap it to see a list of all apps that are on your tablet.

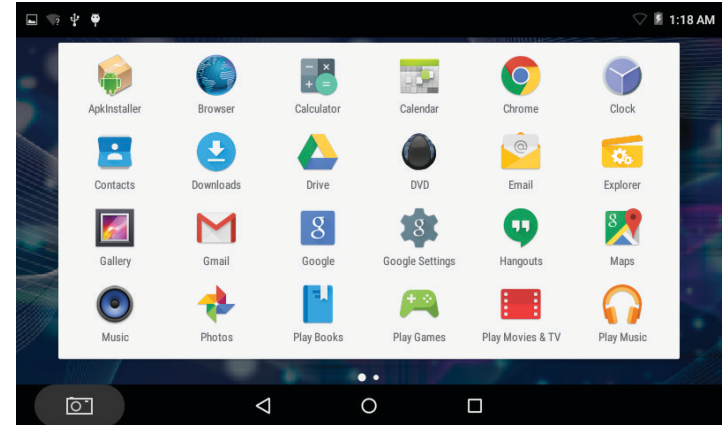 

- Tap an app icon in the list to open it.
- Tap and hold an app icon then drag it to a home screen to create a shortcut that is easily accessible.




To place an app icon shortcut on another home screen, drag it to the edge of the screen and wait for a new home screen to appear. (If the current home screen is empty, the tablet will not create a new home screen).

## About the Notification Bar

 The Notification Bar is found at the top of the screen and displays quick status information (e.g., the time and battery life).



If you swipe down from the top of the screen, the Notification Panel will appear. The notification panel is where you can view alerts from your apps.

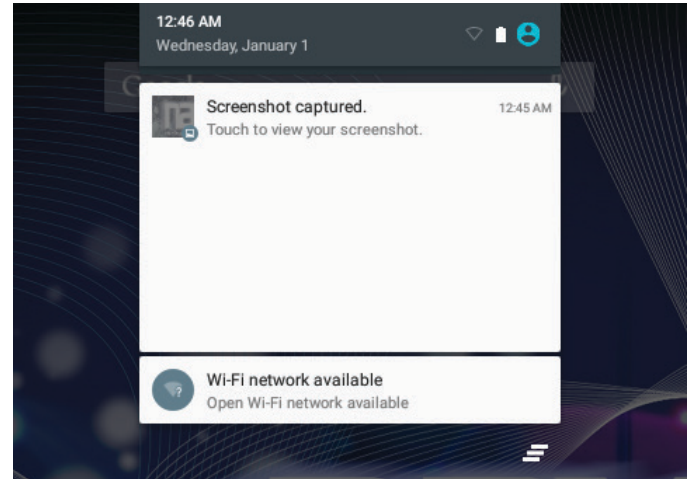


- Swipe up and down to browse the alerts.
- Tap on an alert to open it with an app.
- Swipe down on an alert to see additional information provided by the app. Some alerts will contain controls that allow you to respond to the alert without going to the app.
- Swipe left or right on an alert to dismiss it. At the bottom of the list of alerts, there is a Dismiss All Alerts button; tap it to dismiss all alerts at once.





 To view the Quick Settings panel, tap the top of the notification panel. Use the Quick Settings to adjust frequently used options (e.g., Wi-Fi).

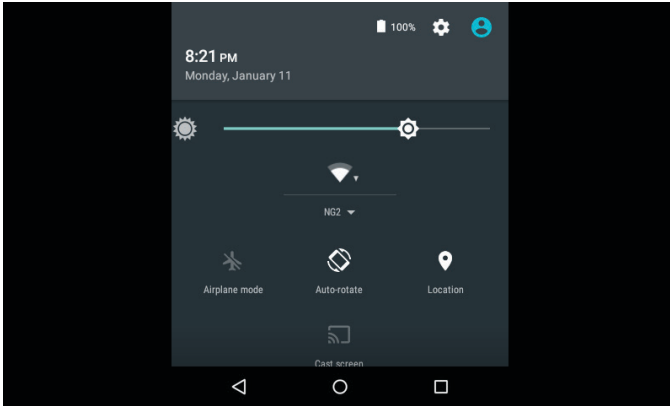


- Tap an options icon to turn it on or off.
- Tap the label below the icon to view additional settings.

## Using the On-Screen Keyboard
 
### Entering Text

Enter text using the onscreen keyboard. Some apps automatically display the keyboard when necessary; in others you display the keyboard by tapping where you want to type.

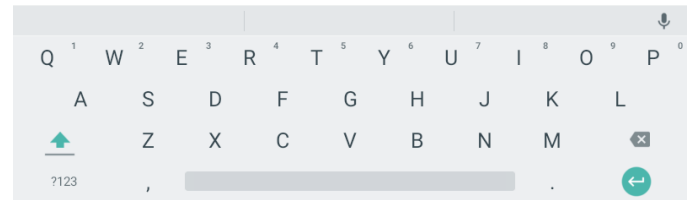

As you type, the keyboard displays suggestions above the top row of keys. To accept a suggestion, tap it.


### Basic Editing

- **Moving the insertion point:** Tap where you want to type. The cursor blinks in the new position, and

a marker appears below it. Drag the marker to move the cursor.

- **Selecting text:** Tap & hold (or double-tap) within the text. The nearest word will be highlighted with markers at each end of the highlighted selection. Tap & drag the markers to change the selection. The markers will disappear after a few moments; to make them reappear, tap the text again.
- **Cut or copy text:** Select some text, then tap the SELECT ALL, CUT, OR COPY icon.



- **Deleting text:** Tap the  key to delete selected text or the characters before the cursor.

To make the keyboard go away, tap the Close icon found in the Navigation bar at the bottom of the screen.



## Tips & Shortcuts

- **To type in capital letters:** Tap the Shift key once to switch to capital letters for one letter. Tap & hold the Shift key to type in capital letters; release

the Shift key to return to typing in lower case letters.

- **To turn caps lock on:** Double-tap the Shift key to turn Caps Lock on. The Shift key will be highlighted to indicate that Caps Lock is active. To turn Caps Lock off, tap the Shift key again.
- **To show numbers or symbols:** Tap the ?123 key. To see more choices, tap the =\< key. Tap ABC to return to letters.
- **To quickly access common punctuation and symbols:** Some keys have an alternate function. These keys are located near the space bar and are labeled with a smaller, gray symbol. Tap & hold these keys to use their alternate functions.

- **To type alternate characters:** Some keys can produce alternate characters (e.g., accented vowels). Tap & hold these keys to see these alternate letters or symbols, then tap again to type.
- **To change the input language or keyboard:** Tap and hold the comma key [ , ] to view the input options menu.

### **Related settings**

*Settings > Personal > Language & input*

 
---

---

# Using the DVD Player

## Loading a DVD

1. Slide the DVD Open latch [7] and lift the screen of the tablet to reveal the disc compartment.



**Never open the compartment while a disc is playing or spinning!**

2. Center the disc over the spindle in the compartment. Gently push the disc down onto the spindle to lock it into place.



*The label side of the disc should face up and the shiny playing surface should face down.*

3. Lower the screen to close the compartment. Make sure the DVD Open latch is locked.

# Playing a DVD

Once a compatible DVD has been loaded, launch the DVD app.

1. Press **⊞** (3) to go to the main Home screen, then tap the DVD icon to launch the DVD app. The DVD player will automatically read the disc and start playing automatically.
2. Tap the screen once to reveal the DVD player controls.



**⏮** Decrease the volume level.

**⏪** Skip to the previous track.

**■** Stop playback.

**⏩** Skip to the next track.

**⏸** Start, pause, or resume playback.

**📖** Go to the DVD menu.

**🔊+** Increase the volume level.

**🎵** Change the audio track.

**SUB** Change the subtitle track.

**◀** Navigate left in a DVD menu.

**▶** Navigate right in a DVD menu.

**OK** Confirm a selection in a DVD menu.

**▲** Navigate up in a DVD menu.

 
 
**▼** Navigate down in a DVD menu.

## Returning to Tablet Mode

Press **⊞** [3] to leave the DVD app and return to the Home screen of the tablet.

# Managing & Using Apps


To see all your apps, tap the All Apps icon on any Home screen, and the main All Apps screen will open. You will be able to see all of your apps, including those downloaded and installed from the Internet. You can move app icons to any of your Home screens.

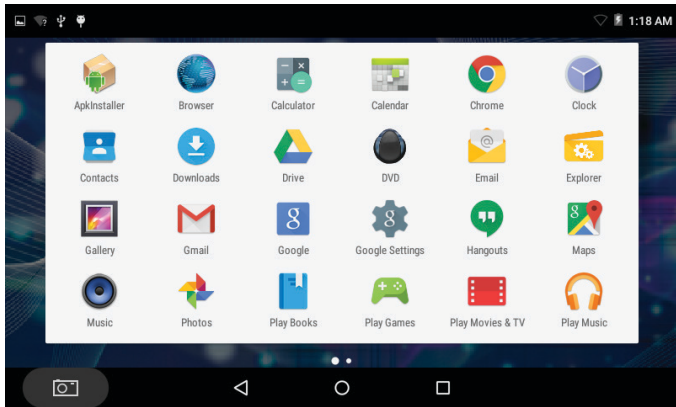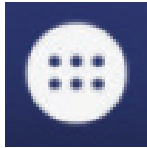


From All Apps, you can:

- See additional app screens: Swipe left or right.
- Launch an app: Tap its icon.

 - Place an app icon on a Home screen: Tap & hold the app icon to pick it up, then drag it to its place.
- To see detailed information about an app: Tap & hold the app icon to pick it up, then drag and drop it on the App Info icon at the top of the screen.

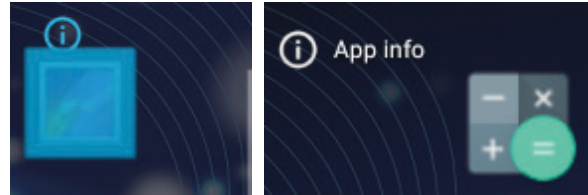

 - To uninstall an app: Tap & hold the app icon to pick it up, then drag and drop it on the trashcan icon at the top of the screen.

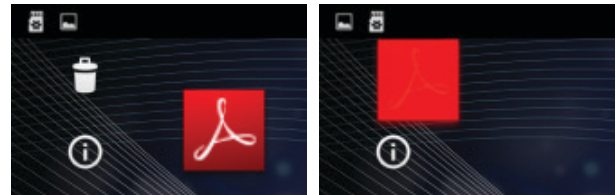


# About the Apps

Software has been preinstalled on the tablet for your convenience.

Some apps may not work if certain region and network service requirements are not met.

 Launch the Play Store app to find, download, and install apps on your tablet. You can find apps to view streaming video and movies, music, web browsers, messaging and communications, games, and more.

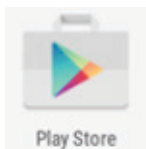

For your security, we recommend that all apps be downloaded and installed using the Google Play Store app. From time to time, however, there may be an app that you cannot find on the Google Play Store. In such a case, you may download the app's APK installation file directly from the maker of the app.




*Only download and install apps from a trusted source!*

*By default, Android OS prevents installation of apps from anywhere but the Play Store. You must change this setting manually before Android OS will allow you to install apps from elsewhere.*

## Browser

 The Browser app lets you browse and view websites. Tap the address bar to enter a URL.

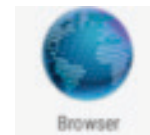


Google Search I'm Feeling Lucky



## Music

 The Music app lets you listen to music synced to your tablet.

When you launch the app, it will list all music files that it finds on the tablet. Tap the categories in the top row to change the view of your music (by Artists, Albums, Songs, Playlists, or Now playing).

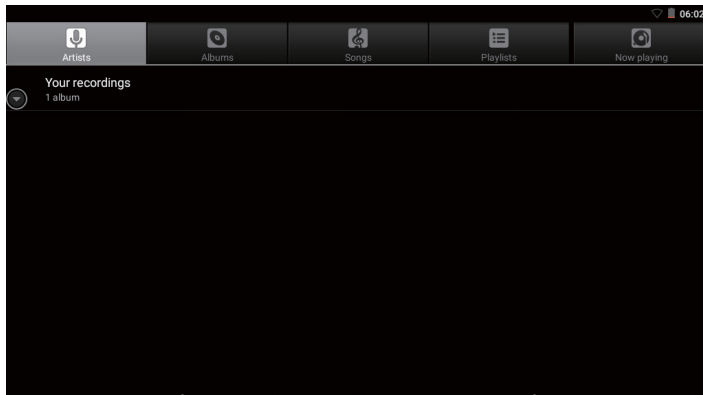


## Video

The Video app lets you watch video files synced to your tablet. It can also be used to view image files.



 When you launch the app, it will list all video and image files that it finds on the tablet.

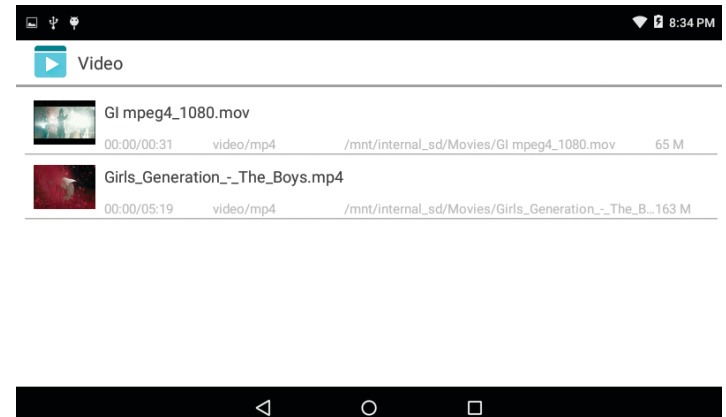

Tap a video file to start playing it. While a video is playing, the control keys will be hidden. Tap the video again to reveal the control keys for Play, Stop, Next/Forward, Previous/Reverse, and the progress bar.


## Manage your Calendar

 The Calendar app lets you view and edit your schedule.

When you sign into a Google Account, any existing calendar events from that account will be synced with your Calendar app. After that, all of your events will stay in sync automatically, whether you make changes on your Tablet, or from another device that is synced to your Google Account. As you add events from different sources, they are synced automatically across all the places you need them.



To view your Calendar, tap on the Home screen or All Apps screen.

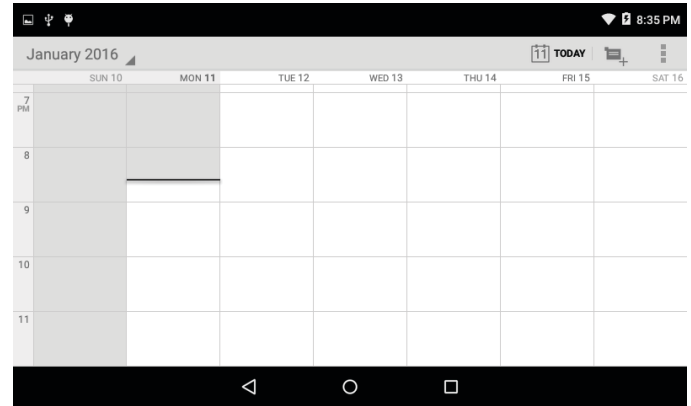

To change the Calendar view, tap the tabs at the top of the screen labeled **Day**, **Week**, **Month**, or **Agenda**.

Swipe to scroll vertically or horizontally. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.

From any of these views, you can:


- Read or edit event details. Tap an event to view its details.



- Manage events and calendars. Tap the icons across the top of the screen or tap the Menu icon for additional options.

## Sound Recorder

 The Sound Recorder app allows you to make recordings from the built-in microphone of your tablet.

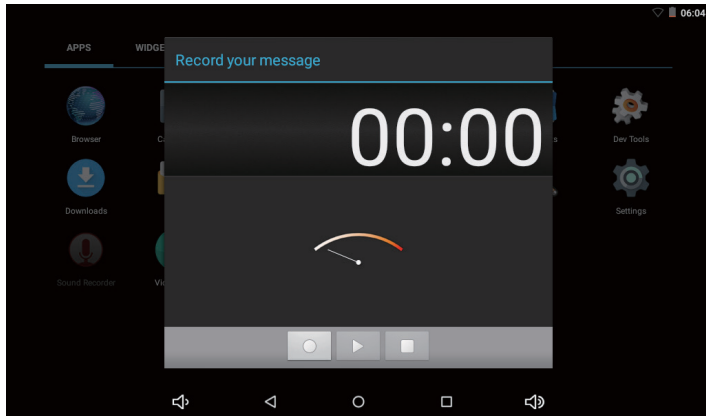


- Tap the record icon to start recording.
- Tap the stop icon to stop recording.


- Tap the play icon to replay the recording.
- Tap "Use this recording" to save the recording to the NAND directory of the tablet. Tap "Give up" to cancel and delete the recording.

## E-mail


 
The E-mail app lets you send and read messages from an e-mail account. You will need to have an e-mail account; your internet provider can provide you with one, or you can find free and paid e-mail providers on the web.

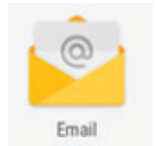

 The first time you launch the app, you will be asked to enter your e-mail address and password.

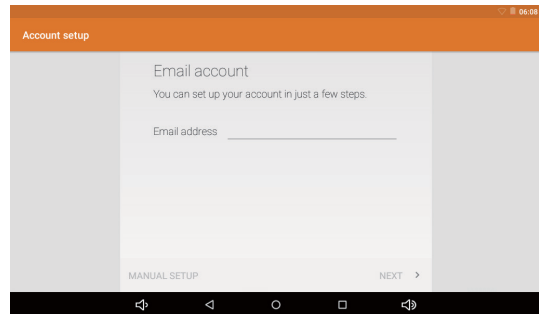

  If the app cannot detect your account and server information, you will need to add the settings manually.

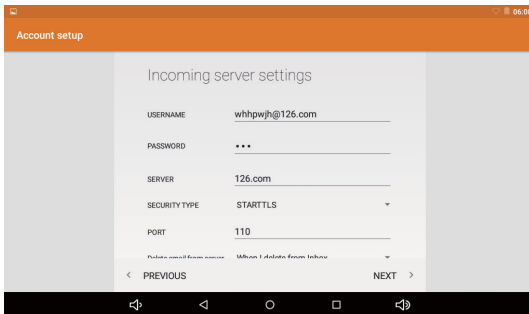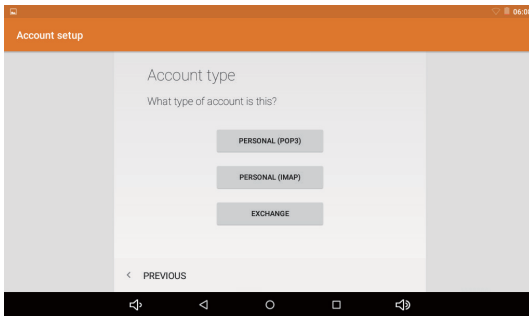

*If you do not know your e-mail account and server settings, please contact your e-mail provider.*


## Managing Downloads



 Files, apps, and other items you download from your email, app marketplaces, or in other ways are saved to your tablet's internal storage.


Use the Downloads app to view, open, or delete what you've downloaded.


Downloaded files are stored in the Download directory that's visible when your tablet is connected to a computer. You can view and copy files from this directory.

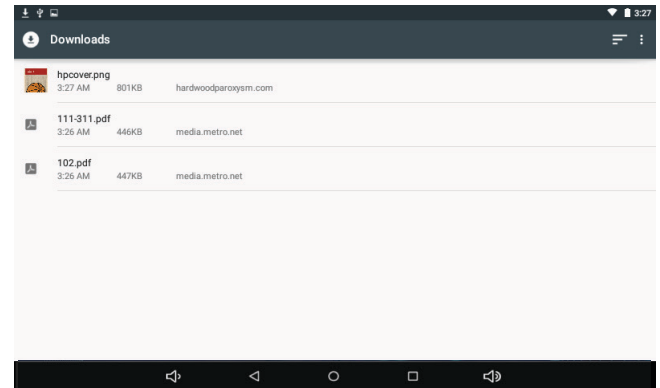To open Downloads and manage downloaded files:



 
1. Tap the Downloads icon from the All Apps screen.
2. Tap an item to open it.
3. Tap the headings of earlier downloads to view them.
4. Tap and hold to select multiple items, then tap the Share icon  and choose a sharing method from the list, or tap the Trash icon  to delete them.

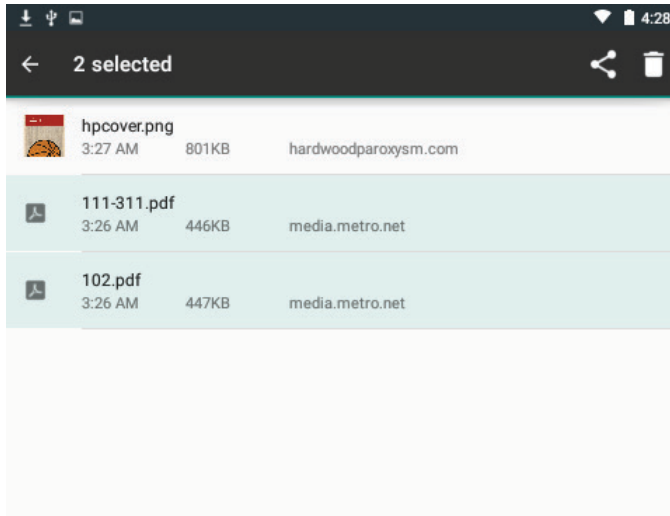


5. Tap the Sort icon  to change the display sort order (by name, by date modified, or by size).


## Apps Settings and Options

 View detailed information about your apps and remove and manage apps on your tablet.

1. Swipe down from the top of the screen to view the Notifications Panel. Tap the top bar, then tap the Settings icon .

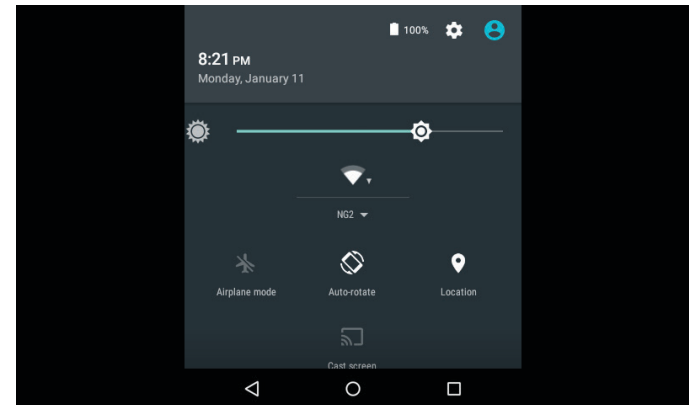

 2. Browse to the Device section, then tap Apps.
3. You'll see four tabs at the top of the screen; swipe left/right to change tabs. Each tab displays a list of apps or their components:

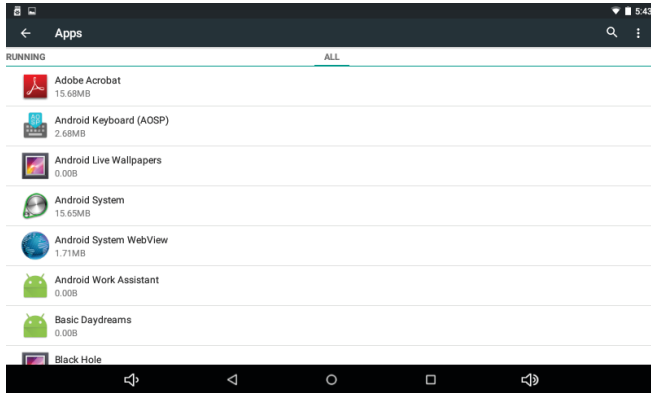


- **Downloaded.** Displays apps you've downloaded from app marketplaces or the Internet.
- **On SD Card.** Displays apps that are installed on the memory card (if available).
- **Running.** Displays all apps, processes, and services that are currently running or that have cached processes, and how much RAM they are using. At the top right corner of the screen, tap


the Cached/Running processes icon to change which processes are displayed.

- **All.** Displays all apps that came with your tablet and all apps that you have downloaded from app marketplaces.

 To switch the order of the lists displayed in the Downloaded or All tabs, tap the Menu icon.

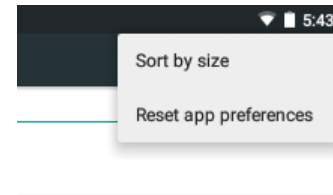

 To view details about an app or other item listed under any tab, tap its name. The information and controls available vary among different types of apps, but commonly include:

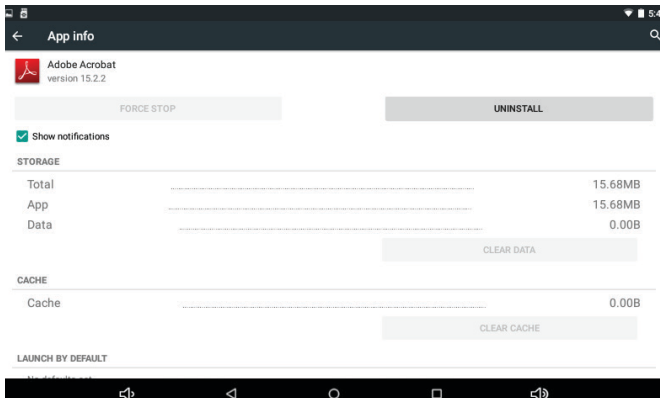

- **Force stop button:** Stops an app that is misbehaving. Stopping an app, process, or service may cause your device to stop working correctly. You may need to restart your tablet after doing this.
- **Uninstall button:** Deletes the app and all of its data and settings.
- **Disable button:** Prevents the app from running, but does not uninstall it. This option is available for some apps and services that can't be uninstalled.
- **Move to SD card/Move to Device:** Change where the application is installed. Applications will work

best when installed to internal (device) memory. Not all apps can be moved to the SD card.

- **Clear data button:** Delete an app's settings and other data without removing the app itself.
- **Clear cache:** If the app stores data in a temporary area of the tablet's memory, lists how much information is stored, and includes a button for deleting the data.
- **Launch by default:** If you have configured an app to launch certain file types by default, you can clear that setting here.
- **Permissions:** Lists the kinds of information about your tablet and data the app has access to.



*Some apps cannot be uninstalled from your tablet, but they can be disabled. Tap the Disable button to stop the app from running on your tablet.*

### **A note about memory usage**

*You typically don't need to worry about managing apps beyond installing, opening, and using them. But there*

*may be times when you want to know more about what's happening behind the scenes.*

*Apps use two kinds of memory: internal storage and RAM. They use internal storage for themselves and any files, settings, and other data they use. They also use RAM (memory designed for temporary storage and fast access) when they're running.*

*Your tablet manages and carefully guards the portion of internal storage where the system, apps, and most data for those apps are stored, because this area may contain your private information. It's not possible to view this portion of internal storage when you connect your device to a computer with a USB cable. The other portion of internal storage, where music, downloaded files, and so on are stored, remains visible for your convenience.*

*Your tablet also manages how apps use RAM. It may cache some things you've been using recently, for quicker access if you need them again, but it will erase the cache if it needs the RAM for new activities. You af-*

*fect the way apps use internal storage directly and indirectly in many ways; for example, by:*

- Installing or uninstalling apps.*
- Downloading files in Browser, mail, and other apps.*
- Creating files (for example, by taking pictures).*
- Deleting downloaded files or files you created.*
- Copying files between your device and a computer via USB.*

*You rarely need to manage the way apps use RAM. But you can monitor RAM usage and stop them if they misbehave.*

---

---

# Connecting to Wi-Fi Networks

Your tablet works best when it is connected to the Internet. Your tablet can connect wirelessly to the Internet using Wi-Fi networks.

 
Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi, you connect to a wireless access point, or “hotspot.” Some hotspots are open and you can simply connect to them. Others implement security features that require other steps to set up, such as digital certificates or other ways to ensure that only authorized users can connect.


## Connecting to a Wi-Fi Network

If you’re adding a Wi-Fi network when first setting up your device, Wi-Fi is turned on automatically.


1. Swipe down from the top of your screen to reveal the Notifications panel, tap the top bar, and then tap the Settings icon .

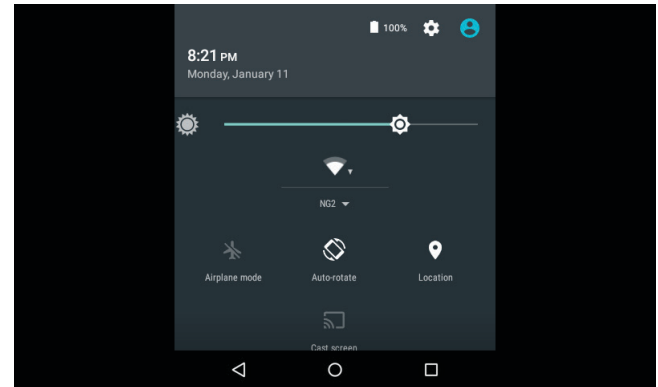

 2. Under Wireless & networks, tap Wi-Fi.

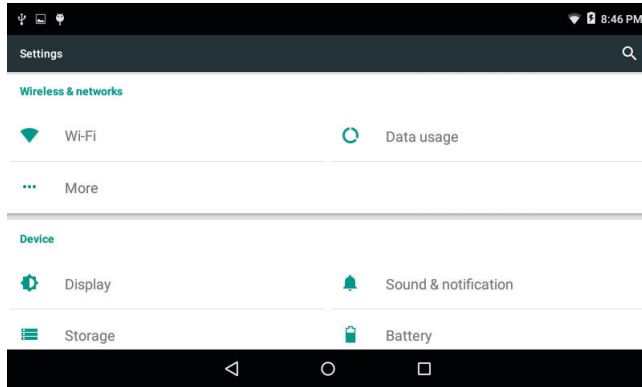


 3. Slide the Wi-Fi switch to the On position. The device scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

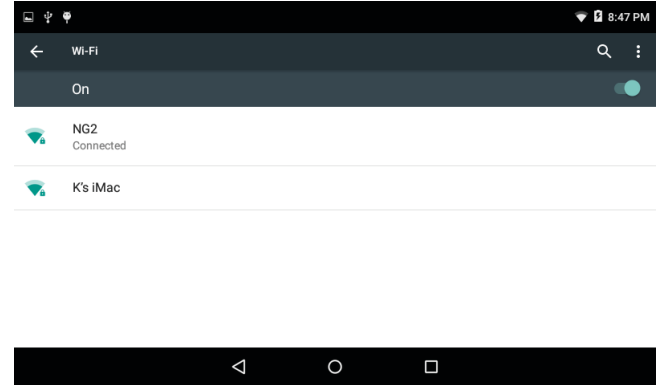




 4. Tap a network name to see more details or to connect to it. If the network is secured, you will be prompted to enter a password or other credentials. (If you don't know the password, you will need to ask the owner of the network to provide it.) If the tablet finds a network that you connected to previously, it will connect to it automatically.

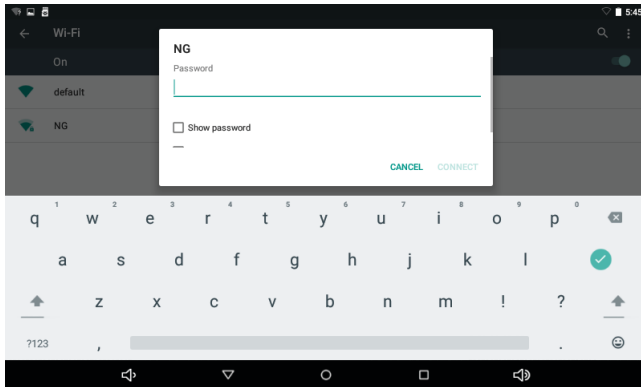

 5. To forget a network or to modify its settings, tap & hold the network name.

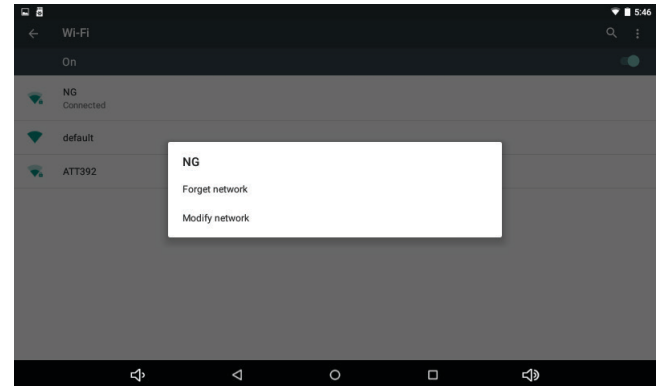


- You may want the tablet to forget a network if you don't want to connect automatically or if you no longer use the network.
- Modify a network's settings to change the password or to configure its advanced options (i.e., Proxy and static IP settings). Networks are configured by default to not use proxy servers and to use automatic IP addressing. Proxy settings need to be added for each individual Wi-Fi network.

# Adding a Network Manually

 
Some Wi-Fi networks are configured so that the tablet cannot detect them automatically. These networks need to be added manually.

Under Wireless & Networks, tap Wi-Fi to select it.

1. Tap the options icon , then tap “Add Network”.

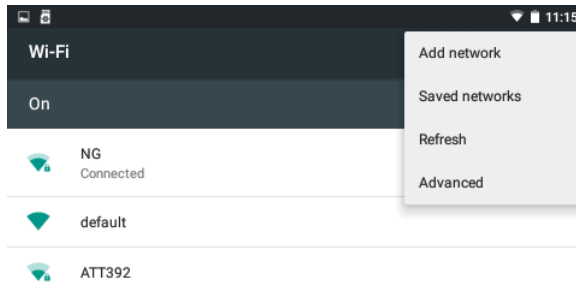

 
2. Enter the SSID (name) of the network.

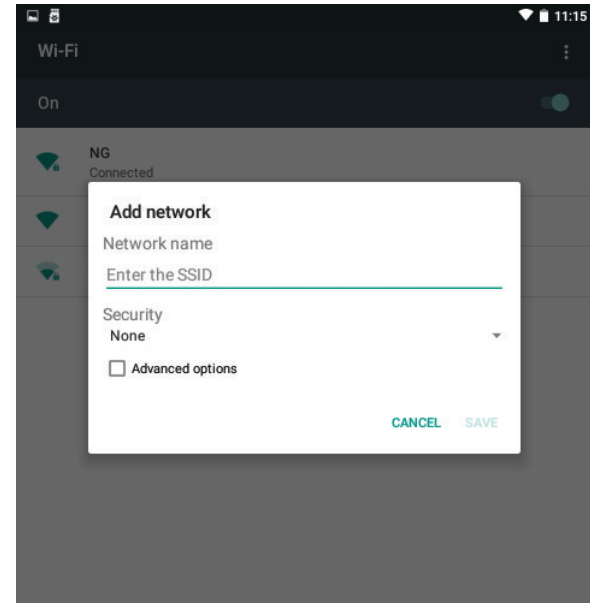


3. If necessary, enter security or other network configuration details.
4. Tap Save.

The information about the network is saved. Your tablet will connect to this network automatically the next time you come within range.

# Set Advanced Wi-Fi Options

 Under Wireless & Networks, tap Wi-Fi to select it. Tap the Options icon  and choose Advanced.

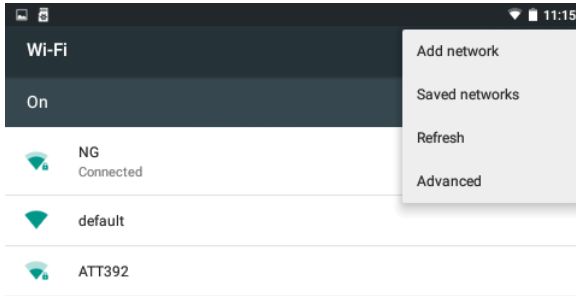

These are the settings you can adjust:

- **Network notification:** By default, when Wi-Fi is on, you receive notifications in the Status bar when your device detects an open Wi-Fi network. Uncheck this option to turn off notifications
- **Scanning always available.** Enable to allow Google's location service and other apps to scan for networks, even when Wi-Fi is off. This allows

for a better experience with apps that rely on location data.

- **Keep Wi-Fi on during sleep:** To conserve mobile data usage, your device stays connected to Wi-Fi when the screen goes to sleep. Tap this option to change this default behavior: either to stay connected to Wi-Fi only when the device is connected to a charger (when battery life isn't a problem), or to disconnect from Wi-Fi during sleep.
- **Install certificates:** Select a Wi-Fi certificate to install, if available.
- **Wi-Fi Direct:** Connect to another Wi-Fi direct device.
- **WPS push button:** Use with the WPS button on your router, if available.
- **WPS Pin Entry:** Generates a PIN to use with your Wi-Fi router, if necessary.

This screen also displays the following information:

- **MAC address:** The unique Media Access Control (MAC) address of your tablet when connected to a Wi-Fi network.
- **IP address:** The Internet Protocol (IP) address assigned to the device by the Wi-Fi network you are connected to (unless you used the IP settings to assign it a static IP address).

### ***Related settings***


*Settings > Wireless & networks > Wi-Fi*

 
*Settings > Wireless & networks > Data usage*

---

---

# Adjusting the System Settings

To view the System Settings screen, swipe down from the top of your screen to reveal the Notifications panel, tap the top bar, then tap the Settings icon .

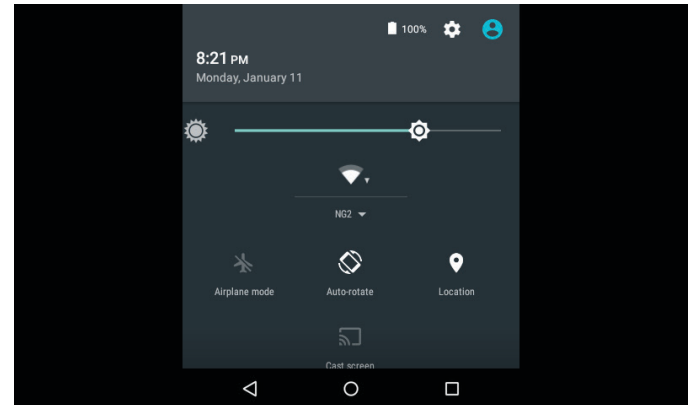

# Wireless & Networks

## Wi-Fi

To learn about the Wireless & Networks options, refer to the section “Connecting to Wi-Fi Networks”.

## Data Usage

See how much data your tablet has used over time, and how much data has been used by each of your applications.

## More

- **Airplane Mode:** Enable this option to turn off ALL wireless radios (i.e., Wi-Fi, Bluetooth).
- **VPN:** Add a VPN network for secure networking.

# Device

## Display

Adjust the display options of the tablet.

- **Brightness level:** Move the slider to set the brightness level on your tablet.
- **Adaptive brightness:** Enable adaptive brightness to automatically optimize the brightness level on your tablet based on the available light around you. Adaptive brightness is on by default and you can still adjust your brightness when needed.
- **Sleep:** Change how long it takes for your tablet’s screen to turn off when you’re not using it.
- **Daydream:** Set up screensavers that display photos, colorful backgrounds, and more when your tablet is charging.
- **Font size:** Change the font size displayed on your tablet.
- **Wallpaper:** Change the background image.

- When device is rotated: Change how your screen displays what’s on the screen when you rotate your screen. This option won’t show up if you’ve disabled “Auto-rotate screen” in accessibility settings.
- Cast screen: Touch the Cast screen icon to connect your device to Chromecast.

## Sound & notification

Adjust the sound options of the tablet.

## Storage

Adjust the storage options of the tablet.

- Internal storage: Shows how much memory is left available to be used. This total does not count the amount of memory used by files required by the tablet to run such as the operating system.
- Mount/Unmount SD card: When a microSD card is installed, the tablet will automatically mount the card to make it available for use. Unmount the

card before removing it from the tablet to prevent data corruption.

- Erase SD card: Delete everything from the microSD memory card.

## Battery

Adjust the battery options of the tablet.

## Apps

The Apps settings allow you to adjust several aspects of the way your tablet uses memory.

You’ll see four tabs at the top of the screen; swipe left/right to change tabs. Each tab displays a list of apps or their components.

To learn about the Apps options, refer to the section “Managing & Using Apps > Apps Settings and Options”.

## HDMI

Not used.

## ScreenshotSetting

Adjust the screenshot options. You can capture a screenshot by pressing **⏏** and **VOL-** together at the same time.

## Personal

### Location

Adjust the location services options of your tablet.

### Security

Set screen lock: Depending how you use your tablet, you may want to set some form of automatic screen lock to prevent unauthorized access. If a screen lock has been set, the screen locks when your tablet's display goes to sleep. Select one of the screen lock types from the list and then follow the onscreen instructions to set the lock. The screen lock types are listed in approximate order of strength.

- Swipe provides no protection, but lets you get to

the Home screen quickly, or open the Camera app to start taking pictures immediately.

- Pattern lets you draw a simple pattern with your finger to unlock the tablet.
- PIN requires four or more numbers. Hold the tablet in portrait mode, enter your pin, and then enter your PIN once more to confirm.
- Password requires four or more letters or numbers. Hold the tablet vertically, enter your password, and then enter your password once more to confirm. This is the most secure option, as long as you create a strong password. For best security, specify a password that is at least 8 characters long, contains a mixture of numbers, letters, and special symbols, and doesn't contain any recognizable words, phrases, or personal information.

### Accounts

You can use multiple Google Accounts and e-mail accounts on your tablet.

You may also be able to add other kinds of accounts, depending on which apps are installed on your tablet.

Some you can add in the Accounts & Sync screen, as described here. Others you add using an app that works with those kinds of accounts. For example, you can add IMAP and POP3 email accounts with the Email app.

- **Add Account:** Tap Add Account, then choose the type of account to add. Follow the onscreen instructions to enter information about the account. To add some accounts, you may need to obtain details from system administrator about the service to which the account connects. For example, you may need to know the account’s domain or server address. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service you’re connecting to. Depending on the kind of account, you may be asked to configure what kinds of data you want to sync, the name of the account, and other details. When you’re finished, the account is added to the list in Accounts & sync. Depending on how you configured the account, email, contacts, and other information will start syncing to your tablet.
- **Remove an account:** Tap the name of an account to select it. Tap the Options icon at the top right corner of the screen and choose “Remove account”. Remove an account to delete it and all information associated with it from your tablet, including email, contacts, settings, and so on.
- **Manually sync an account:** Tap the name of an account, then tap the Options icon at the top right corner of the screen and choose “Sync Now”.
- **Account sync options:** Tap the name of an account to choose which types of data to sync. Some apps, such as E-mail, Gmail, and Calendar, have separate synchronization settings that provide more fine-grained control. In such cases, the settings you select at the account level are still valid. For some accounts, syncing is bi-directional; changes that you make to the information on your tablet are made to the copy of that information on the web. Google Accounts works this way. Other accounts support only one-way sync: the information on your tablet is read-only.

## Language and Input

Adjust the Language and Input options of your tablet.



## Backup & Reset

Adjust the Backup & reset options of your tablet.

## System

Adjust the System options of your tablet.

- Date & Time
- Accessibility
- Printing
- About Tablet

---

---

# Connect to a Computer via USB

You can use a USB cable to connect your tablet to a computer in order to transfer music, pictures, and other files in both directions.

When you connect your tablet to the USB port on your computer, the tablet will prompt you to turn on USB storage.

- Tap Turn on USB storage to make your tablet's storage available to your computer. You can now copy files back and forth as you would with any other external storage drive.
- Tap Turn off USB storage to use your tablet normally while your computer charges the battery.

### ***Related Settings***

*Settings > Device > Storage > Menu > USB computer connection*

---

---

# Tuning Your Tablet's Performance

## Optimizing battery life

You can extend your battery's life between charges by turning off features that you don't need. You can also monitor how much power your apps and system resources are using.

To adjust the settings described here, swipe down from the top of the screen to view the Notifications panel, tap the top bar, and then tap the Settings icon.

To extend the life of your battery:

- If you aren't using Wi-Fi, use the Settings app to turn it off.
- If you have a navigation app, map, or other app that uses Location services, do not leave it open when you are not using it.

- Lower the screen brightness level and set a shorter Sleep timeout (Settings > Device > Display).
- If you don't need it, turn off automatic syncing for all apps (Settings > Personal > Accounts & sync). Note that this means you need to sync manually to collect messages, email, and other recent information, and you won't receive notifications when updates occur.
- If you know you won't be near a Wi-Fi network for a while, switch to Airplane mode. Press and hold the power button until the Tablet options dialog appears, then tap Airplane Mode.

To check the battery level and usage details

Tap Settings > Device > Battery.

- The charge status and charge level of the battery are displayed at the top of the screen. The discharge graph shows battery level over time since you last charged the device, and how long you've been running on battery power.

- Enable Standby intelligent power saving to extend the tablet's usable time.
- Enable Battery Saver to turn on automatically, which improves battery life by decreasing the tablet's performance and other methods.

# About Optical Discs

## Disc Types

 
This player supports playback of the following media types and discs.

Type	Content Type
DVD	Audio + Video
MP3	Audio
CD	Audio
Video CD (VCD)	Audio + Video
Picture CD (JPEG)	Still Picture
MPEG-4	Audio + Video

This unit can play back optical discs or memory cards that contain MP3, MPEG-4, or JPEG files. Discs and media types not listed above are not supported by this unit (e.g., PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)


## Video DVDs

Data on most DVDs are divided into sections called titles, and then into subsections called chapters; each is given a title or chapter number.

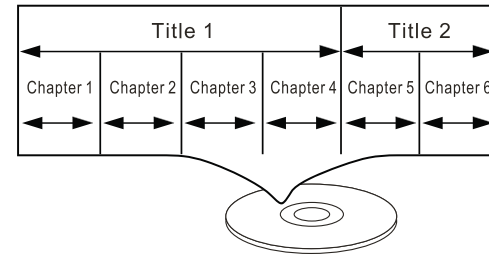

## Audio CDs

 Data on an audio CD is divided into sections called tracks; each is given a track number.

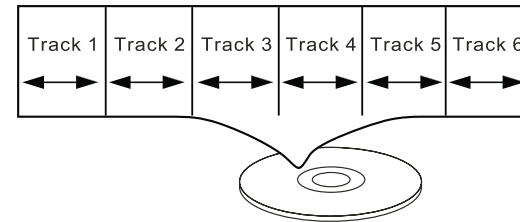






## Picture CDs (JPEG)

Data on a JPEG picture CD is usually not divided into separate folders. The picture files should appear in the root directory.

## DVD Features

Each DVD disc contains features that may vary depending upon the production of the disc. Some of the icons you may see that represent these features are shown below.

	Number of audio tracks
	Number of subtitles
	Angle indicator
	Screen format (aspect ratio)
	Zoom



*Some of the DVD features enabled by this player depend on how the DVD was produced. Some features may not be enabled*

*if the disc does not support the feature, or it may require special settings. Check the features printed on the DVD package or follow the instructions found on the disc's on-screen menu.*

## DVD Region Codes

DVD discs and DVD players are manufactured under a compulsory worldwide agreement, the DVD Regional Code System. DVD players will only operate with DVD discs encoded with the same corresponding Regional Code.

 
Region 1	Canada, USA
Region 2	Europe (including Poland, Romania, Czech Republic), Japan, Middle East (including Saudi Arabia, Egypt, Iran, South Africa)
Region 3	East Asia (including Hong Kong, Taiwan, South Korea), Southeast Asia
Region 4	Australia, Caribbean, Central America, South America, Mexico, New Zealand
Region 5	Africa, the former Soviet Union, India, North Korea, Pakistan, Turkmenistan
Region 6	China

# Disc Care and Maintenance

Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.

## Handling a Disc

- Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc. To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not bend or press discs.
- Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures.
- To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.

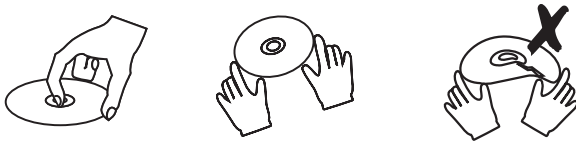

## Cleaning a Disc

Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.



*Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.*

---

---

# Troubleshooting

## 1. *What if the tablet freezes or exhibits other abnormal behavior during operation?*

Use a paperclip to press the RESET key on the back of the tablet to reboot it.

## 2. *What if an app freezes, does not respond, or exhibits other abnormal behavior?*

Close the app. Tap the “Recent Screen” icon and then swipe left or right to close the non-responsive app. An alternative would be to locate the non-responsive app in Settings > Device > Apps and then tap the Force Stop button.



## 3. *Why the standby time is so short sometimes?*

Battery performance is impacted by many things, including the temperature and what you are using the tablet for. Temperatures that are too high or too low will reduce battery performance. The tablet will work best in room temperature environments (i.e., approximately 72 degrees Fahrenheit). Apps that require a lot of processing power (e.g., games) will use more ener-

gy and reduce battery performance device in normal temperature.

## 4. **Only charge the tablet with the included power adapter.** Fully charge the tablet the first time you use it. Make sure it has power before you use it.

# Warnings and Precautions

 
	<b>CAUTION</b> WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
<b>CAUTION:</b> TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of significant magnitude to constitute risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.
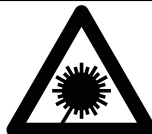
<b>CLASS 1 LASER PRODUCT</b> CLASS 1 LASER PRODUCT APPAREIL LASER DE CLASSE 1 PRODUCTO LASER DE CLASE 1	<b>CAUTION</b> INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM	
This product contains a low power laser device.		

## On Protection Against Laser Energy Exposure

- As the laser beam used in this product is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the disc compartment door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC-DC adapter from the wall outlet. Make it a practice to remove the AC-DC adapter by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

## CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- Invisible laser radiation when open and interlock has failed or been defeated. Avoid direct exposure to beam.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.



## Important Safety Information

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instruction should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing



the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.

10. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
11. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug does still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
13. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
14. **Lightning:** For added protection for this product, unplug it from the wall outlet during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.

15. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
19. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. **Safety Check:** Upon completion of any service or repairs to this product,ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
21. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. **Heat:** The product should be situated away from heat sources such as radiators,heat registers, stoves, or other products (including amplifiers) that produce heat.

## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

## WARNING:

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***



---

---

# Specifications

Display Panel	9" TFT LCD
Display Resolution	800 x 480
Touch layer	Capacitive touch screen
OS	Android 5.1
CPU	Cortex A7 1.3GHz (quad core)
RAM	1 GB
Memory	8 GB
External Memory	SD, SDHC, SDXC (up to 64 GB)
Wireless Connectivity	Wi-Fi 802.11 b/g/n
A/V connectivity	Headphone out (3.5 mm) Built-in microphone Built-in stereo speakers (1 W x 2)
Computer Interface	USB (micro type B)
Power adapter	AC 100~240V, 50/60 Hz (DC 5 V, 2.5 A)
Battery	Rechargeable lithium-polymer battery (4000 mAh)

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

In case of malfunction due to electrostatic discharge, just reset the product to resume normal operation (reconnecting the power source may be required).

---

# Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

## **NAXA Technical Support**

2320 East 49th St.

Vernon, CA 90058

[http://www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)



