

# naxa

## Portable CD Player With AM/FM Stereo Radio

NPB-233



CE



**⚡** This "bolt of lightning" indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 
**!** The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**Dripping warning:**  
The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT.

**Ventilation warning:**  
The normal ventilation of the product shall not be impeded for intended use.



Class II equipment symbol  
This symbol indicates that the unit has a double insulation system

2

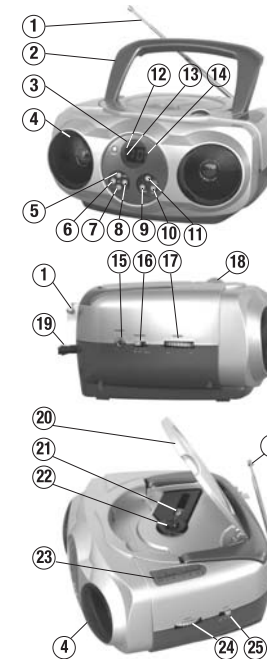

3

### English CONTROLS

Top and front panels (See 1.)

1. Antenna
2. Handle
3. Display
4. Speakers
5. Program Button
6. Forward Skip / Search Button
7. Repeat Button
8. Backward Skip / Search Button
9. Random Play Button
10. Stop Button
11. Play / Pause Button
12. Repeat LED Indicator
13. Program LED Indicator
14. Play / Pause LED Indicator
15. Phones Jack
16. Function Switch(CD/OFF/RADIO)
17. Volume Control
18. Button for Opening of the reader CD
19. AC Input Socket
20. CD Door
21. Laser
22. Pivot for CD
23. Tuning Frequency Scale
24. Tuning Knob
25. Band Switch(AM/FM/ST.)

Power Supply

Whenever convenient, use the power supply if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

**Batteries (not included)**

Open the battery compartment and insert eight batteries, type R-14, UM-2 or C-cells, (preferably Alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment.

**Batteries contain chemical substances, so they should be disposed of properly.**

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:

- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time.

Using AC Power

- 1 Check if the power voltage, as shown on the type plate located on the bottom of the set, corresponds to your local AC power supply. If it does not, consult your dealer or service center.
  - 2 Connect the power cord to the AC MAINS inlet and the wall outlet. The power supply is now connected and ready for use.
  - 3 To switch off completely, unplug the power cord from the wall outlet.
- Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.

4

### POWER SUPPLY

### BASIC FUNCTIONS

Switching power on/off: Save energy

Whether you are using mains or battery supply, to avoid unnecessary energy consumption always adjust the source selector to off.

General operation

- 1 To select your sound source adjust the source selector to **CD/OFF/RADIO**.
- 2 Adjust the sound with the **VOLUME**.
- 3 To switch off the set, adjust the source selector to off position.

RADIO

Radio reception

1. Slide the **FUNCTION** selector to **RADIO**.
  2. Slide the **BAND** selector to a desired setting - **FM STEREO**, **FM**, **AM**.
  3. Rotate the **TUNING** control to find the desired stations.
- NOTE: If the **BAND** selector is set to the **FM** stereo position and you have tuned to an FM stereo station, the **FM** stereo LED indicator will light.
4. When you have finished listening, slide the **FUNCTION** selector to the **OFF** position to shut the power off.

- For **FM**, pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter).
- For **AM** the set is provided with a built-in antenna so the telescopic antenna is not needed. Direct the antenna by turning the whole set.

5

### RADIO

### CD PLAYER

CD Player

Playing a CD

This CD-player can play Audio Discs, CD-R and CD-Rewritables. Do not try to play CD-ROM, CDI, VCD, DVD or computer CD.

- 1 Adjust the source selector to **CD**.  
→Display: shows - - Briefly.
- 2 To open the CD door, lift the CD door at the edge marked **OPEN/CLOSE**
- 3 Insert a CD, CD-R or CD-RW with the printed side Facing up and press the CD door gently close.
- 4 Press **▶▶** on the set to start playback.
- 5 To pause playback press **⏸**. To resume, press **▶▶** again.
- 6 To stop CD playback, press **STOP**.

Note: CD play will also stop when:

- you open the CD compartment;
- you select **RADIO** sound source;
- the CD has reached to the end.

Selecting a different track

During playback you can use **◀◀** or **▶▶** to select a particular track.

- If you have selected a track number in the stop or pause position, press **▶▶** to start playback.
- Press **▶▶** once briefly for the next track, or press repeatedly until the desired track number appears in the display.
- Press **◀◀** once briefly to return to the beginning of a current track.
- Press **◀◀** more than once briefly for a previous track.

Finding a passage within a track

- 1 Press and hold down **◀◀** or **▶▶**.
- The CD is played at high speed and low volume.
- 2 When you recognize the passage you want release **◀◀** or **▶▶**.  
→Normal playback resumes.

Different play modes: **Repeat**  
repeat - plays the current track continuously  
repeat all - plays the entire CD continuously

Programming track numbers

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

- 1 In the **STOP** mode, press **◀◀** or **▶▶** for your desired track.
- 2 When your chosen track number appears, press **PROG MODE** once to store the track.  
→**PROG** LED flashes and the display shows **Prog** briefly followed by your selected track number.
- 3 Repeat steps 1 to 2 to select and store all desired tracks in this way.
- 4 To play your program, press **▶▶**.

Reviewing your set program

- In the **STOP** mode, press **PROG MODE**.  
→The display shows your stored track numbers in sequence.

Erasing a program

You can erase the contents of the memory by:

- opening the CD door;
- selecting **RADIO** source;
- pressing **▶▶** (twice during playback or in the stop Position)

Random play

Press stop button to enter into stop mode, press Random button once then press play/pause button to carry out random play. "RANDOM" will appear in display. All tracks on the disc will be played in random order, then will stop. During random playing, To cancel random play, press stop button twice.

6