

Digital MP3/CD Micro System

with AM/FM Stereo Radio and USB/SD Inputs

 
NSM-436



INSTRUCTION MANUAL

Please read this manual carefully before operation

PRECAUTIONS

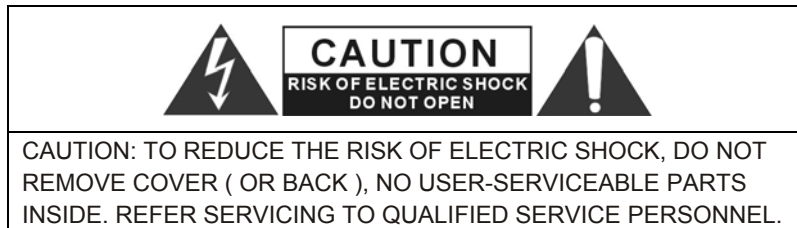

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous” Voltage “within the product’enclosure that may be of sufficient magnitude To constitute a risk of electric shock.



The exclamation point within an equilateral triangles is intended to alert the The user to the presence of important operation and servicing instructions in The literature accompanying the appliance .

For Customer Use:

Enter below the serial number that is located on the unit .Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING:

To prevent shock hazard ,do not expose this device t rain or moisture .Dangerous high voltage Is present inside the enclosure ,Do not open the cabinet .

CAUTION :

To prevent electric shock ,match wide blade of plug to wide slot of outlet and fully insert .

 
WARNING:

Handling the cords on this product will expose to lead, a chemical known to the State of California to cause cancer , and birth defects of other reproductive harm .**Wash hands** after handling.

PROTECT YOUR HEARING:

Hearing experts advise against the constant use of personnel stereos played at high volume .Constant exposure to high volumes can lead to hearing loss . If you should experience ringing in the ears or hearing loss , discontinue use and seek medical advice .

PRECAUTIONS

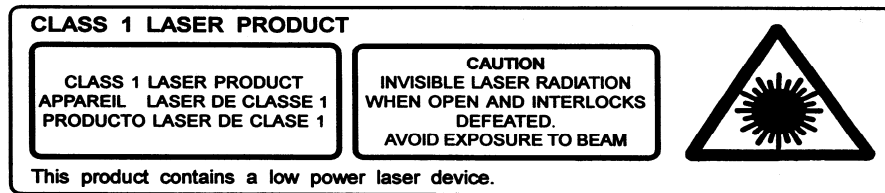

Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC cord from the wall outlet. Make it a practice to remove the AC cord by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occur, remove the power cord and refer servicing to qualified personnel.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions - All the safety and operating instructions should be read before the appliance is operated
2. Keep these instructions - The safety and operating instructions should be kept for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operation and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Clean only with dry cloth - The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments / accessories specified by the manufacturer
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for a long periods of time.
13. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
14. Wall and Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
15. Power Lines - An outdoor antenna should be located away from power lines.
16. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
18. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.



COMPLIANCE WITH FCC REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules . These limits are designed to provide reasonable protection against harmful interference in a residential installation .This equipment generates , uses ,and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions , may cause harmful interference to radio communication . However ,there is no guarantee that interference will not occur in a particular installation ,If this equipment doed cause harmful interference to radio or television reception , which can be determined by turing the equipment off and on ,the user is encouraged to try to correct the interference by one or more of the following measures .

- ◆ Reorient or relocate the receiving antenna .
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
- ◆ Consult the dealer or an experienced radio technician for help.

CD CARE & MAINTENANCE

Handling CDs

Holds a CD by its edges .Avoid touching the recorded side of the disc .To remove a CD from its storage case , press down on the center retention mechanism of the case and lift the disc ,

Cleaning the CDs

Use a dry cloth to wipe off any fingerprints and dusts from the playing surface of the disc .Wipe in a straight line radially from the center to the outside edge of the disc . Small dusts particles light stains will not affect playback quality .

- ◆ Never use chemical such as record sprays ,anti-static sprays ,benzene ,or thinners to clean your CDs.
- ◆ To reduce the risk of scratches , always put CDs back in their case after use ,
- ◆ Do not subject CDs to prolonged exposures to direct sunlight ,high humidity ,or high temperature ,
- ◆ Do not place stickers or labels on either side of the CD.

Cleaning the CD Player lens

A dirty lens can cause CD playback to skip .If the lens is very dirty , the CD may not work at all , Unplug the power supply , open the CD door , and clean the lens as follows :


- ◆ For Dusts or Dry Particles – use a camera lens brush /blower to blow on the lens a few times . Then wipe the lens with the brush ,and blow on the lens once more .
- ◆ For Fingerprints – use a dry cotton swab to wipe the lens in a straight line radially from the center to the outside edge .

TABLE OF CONTENTS

| | |
|--|----|
| PRECAUTIONS | 1 |
| IMPORTANT SAFETY INSTRUCTIONS | 3 |
| COMPLIANCE WITH FCC REGULATIONS | 4 |
| CD CARE & MAINTENANCE | 5 |
| Handling CDs | 5 |
| Cleaning CDs | 5 |
| Cleaning the CD Player Lens | 5 |
| TABLE OF CONTENTS | 6 |
| FUNCTIONS AND CONTROLS | 7 |
| Unit View | 7 |
| Remote Control | 8 |
| Connections | 9 |
| Speakers | 9 |
| Power | 9 |
| Remote Control | 9 |
| MOUNTING | 10 |
| CD MODE | 10 |
| Basic Operations | 11 |
| CD functions | 11 |
| Play/Pause /Stop | 11 |
| Previous /NEXT(Skip) | 11 |
| Reverse/Forward (Scan) | 11 |
| Play Mode | 11 |
| USB and SD card mode | 11 |
| Basic Operation | 12 |
| RADIO MODE | 12 |
| Basic Operation | 12 |
| Program play operation | 13 |
| Basic operation | 13 |
| CLOCK ADJUSTMENT | 13 |
| Display function | 13 |
| MENU FUNCTION | 14 |
| TIMER..... | 14 |
| SLEEP..... | 14 |
| EQ..... | 14 |
| BASS..... | 14 |
| ID3..... | 14 |
| AUX MODE | 14 |
| Basic Operation | 14 |
| TROUBLESHOOTING | 15 |
| TECHNICAL SPECIFICATIONS | 16 |

FUNCTIONS AND CONTROLS

 Unit

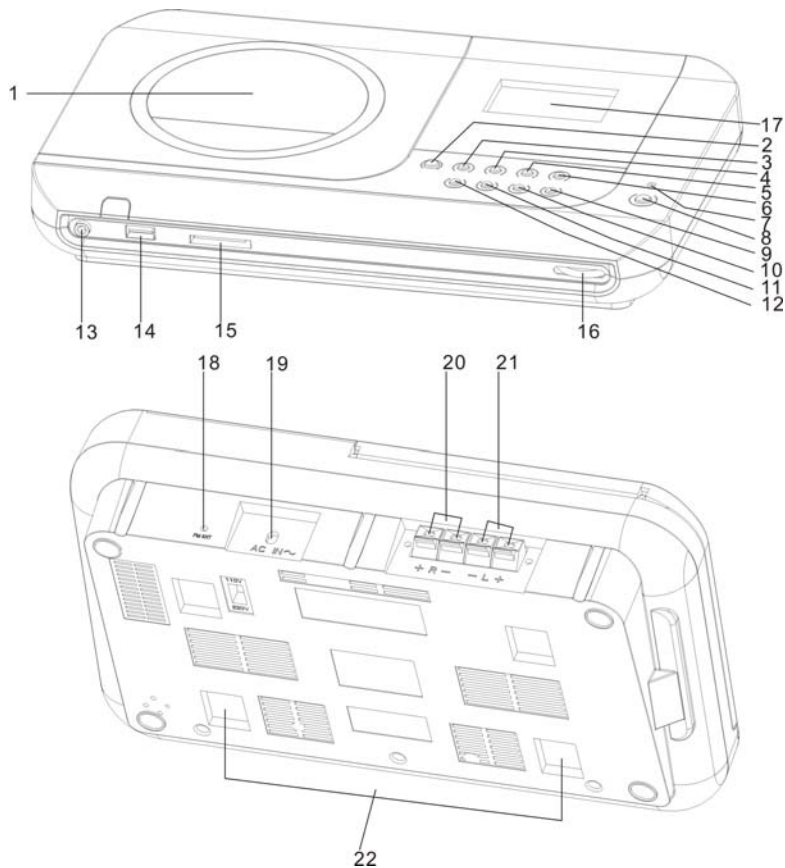


1. CD DOOR
2. OPEN button
3. FUNCTION
4. PROGRAM PLAY-MODE
5. STOP ■
6. ► || /ENTER
7. STANDBY LED
8. POWER
9. SKIP UP/BAND
10. SKIP/DN FM.ST
11. VOL+
12. VOL-
13. AUX-IN JACK
14. USB JACK
15. SD/MMC CARD JACK
16. TUNING CONTROL
17. LCD DISPLAY
18. FM ANTENNA
19. AC IN JACK

- 20. RIGHT SPEAKER JACK
- 21. LEFT SPEAKER JACK
- 22. WALL MOUNTING SLOT

FUNCTIONS AND CONTROLS

 Remote Control

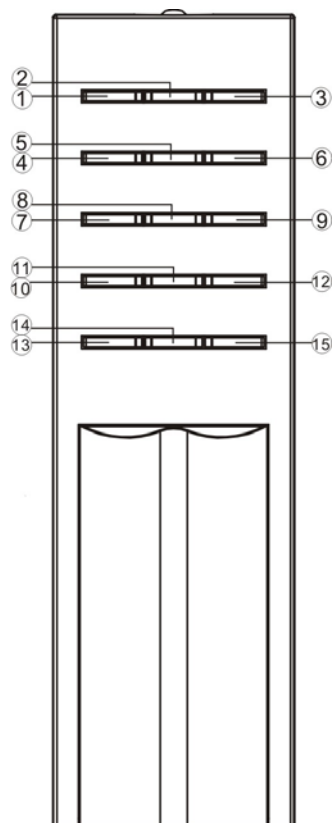

- 1. POWER
- 2. TRACK+10
- 3. ID3
- 4. MENU
- 5. ENTER ► ||
- 6. ■ STOP
- 7. PROGRAM PLAY MODE
- 8. ◀◀ FM.ST
- 9. ▶▶ BAND
- 10. FUNCTION
- 11. FOLDER-DN
- 12. FOLDER-UP
- 13. MUTE
- 14. VOL-
- 15. VLO+

CONNECTIONS

Speakers

- ◆ Connect the black wire of the left speaker to the black terminal marked “L-“ on the rear of the main unit .
- ◆ Connect the white wire of the left speaker to the red terminal marked”L+” on the rear of the main unit.
- ◆ Connect the black wire of the right speaker to the black terminal marked “R-“ on the rear of the main unit .
- ◆ Connect the white wire of the right speaker to the red terminal marked”R+” on the rear of the main unit.

 
Power

This unit runs on AC 120V power .

1. Plug the power cord into an AC wall outlet .
2. To turn the player on , press the **POWER** button to power on the unit.

Remote Control


- ◆ Refer to the diagram .Remove the battery compartment cover located on the front of the remote control. Insert 2 ×”AA” batteries ,making sure to match Their polarities (+/-)to the markings on the Side of the compartmetn .Replace the cover.
 - ◆ To use the remote ,point it at the remote sensor Of the player . Operate the remote within 15 feet Of the sensor and at an agle of +/-60 degrees.
 - ◆ Batteries in the remote will last for approximately 6 months under Normal use. Replace the batteries if the remote control does not work. Do not mix old with new batteries ,or differents types of batteries.
 - ◆ Remove the batteries from the remote if it will not be used for a long Period of time.
- ▲ The battery used in this device may present a fire or chemical burn if mistreated .Do not recharge ,disassemble ,incinerate ,or heat the battery(-212° F) Keep battery away from children .

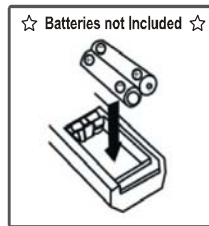


MOUNTING THE UNIT TO THE WALL OR STAND

1 . To mount the unit to the stand

 A . Use 2 holes of the wall mounting bracket to match the 2 holes in the stand (refer to the following drawing).

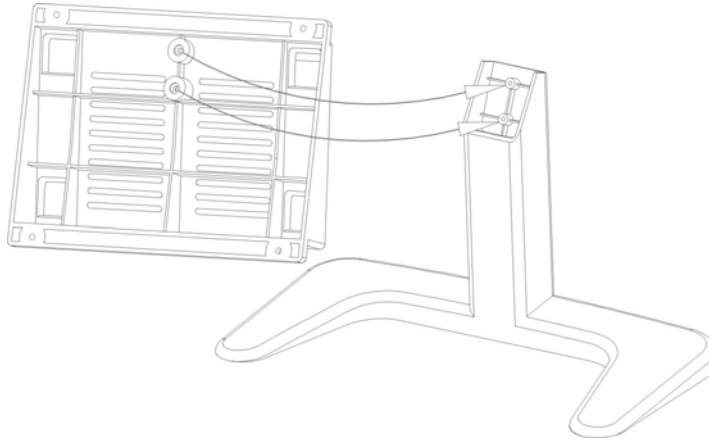

 B. Use a screwdriver to insert 2 screws to make the wall mounting steadily connecting to the stand, then hang the 4 slots on the bottom of the unit to the 4 hooks of the wall mounting bracket(refer to the following drawing) .

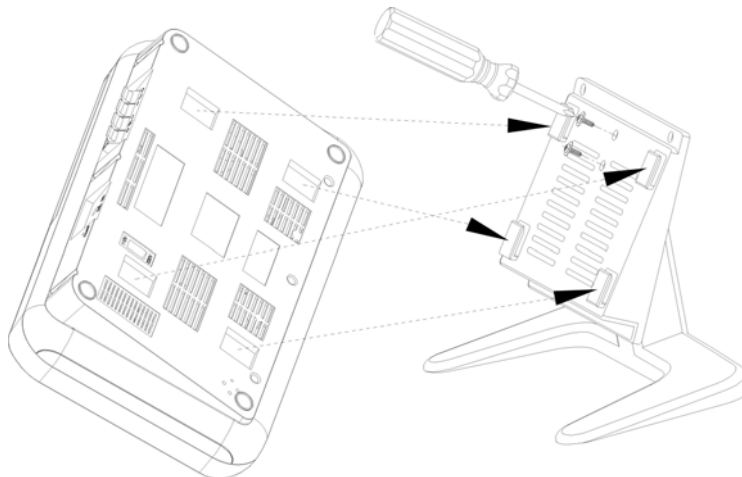

2. To mount the unit to the wall

A. First cut 4 suitable holes on the wall(as drawing 1).

 
B. Use screwdriver to insert 4 screws to make the bracket steadily on the wall (as drawing 2).

CD OPERATION

CD Mode allows to play regular audio CDs , or CDs that contain digital MP3 or WMA music files.



If the CD contains MP3 or WMA files, playback control will be the same as in UDISK mode .See the UDISK Mode section for more information.
DRM-encrypted WMA files are not supported.

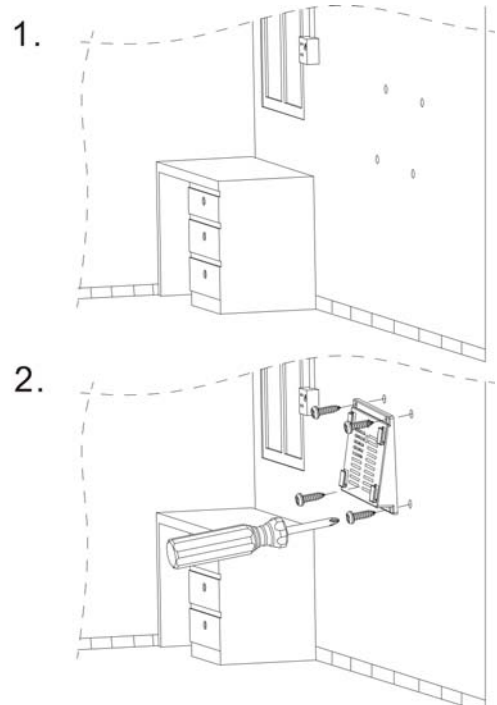

Basic Operation

1. Press **FUNCTION** repeatedly to select CD mode.
2. To open the CD Door ,press the CD open button on the top of the unit. Insert a CD with its label facing up.Close the CD Door (it will click into place)
3. The CD will automatically play after reading the disc.

CD Functions

Play/Pause/Stop

- ◆ Press **ENTER ► II** during playback to pause .Press **ENTER ► II** again to resume playback .
- ◆ Press **■ STOP** during playback to stop the disc .

Scan through the current track

- ◆ Press and hold **◀ FM.ST** on remote control or **SKIP/DN FM.ST** on unit to scan through the current track in a reverse direction .
- ◆ Press and hold **▶ BAND** on remote control or **SKIP/UP BAND** on unit to scan through the current track in a forward direction .

Previous/Next Track(Skip)

- ◆ Press and release **◀ FM.ST** to skip to the previous track.
- ◆ Press and release **▶ BAND** to skip to the next track.

Play Mode

This setting changes the order in which the unit will play tracks.

IN CD Mode

1. Press the **PROGRAM PLAY MODE** button on unit or remote control repeatedly to select the following repeat options: Repeat, Repeat all , Random , Intro Play.
- ◆ Repeat: Repeat the current track.
 - ◆ Repeat All : Repeat all tracks in the CD.
 - ◆ Random: the unit will shuffle all the tracks in the CD and will play in random order.
 - ◆ Intro: when the intro play mode is selected , the unit will play 10 seconds of every trakcs in the CD.

IN MP3 disc or USB/SD CARD Mode

1. Press the **PROGRAM PLAY MODE** button on unit or remote control repeatedly to select the following repeat options :Repeat , Repeat folder , Repeat all , Random ,Introl .
- ◆ Repeat: Repeat the current track.
 - ◆ Repeat Folder: Repeat the current folder.
 - ◆ Repeat All : Repeat all tracks in the CD.
 - ◆ Random: the unit will shuffle all the tracks in the CD and will play in random order.
 - ◆ Intro: when the intro play mode is selected , the unit will play 10 seconds of every trakcs in the CD.

Note : Random play will not work in the program play mode .

USB and SD CARD OPERATION

USB and SD CARD mode allows you to play digital MP3 and WMA music files from USB and SD CARD flash drives .



USB only USB-MSC device or flash disk drives .USB-MTP devices are supported .

DRM-encrypted WMA files are not supported.

Basic Operation

- ◆ Press **FUNCTION** to select USB or SD CARD mode .
- ◆ Connect a USB drive containing MP3/WMA files to the USB port or SD/MMC CARD to the SD/MMC CARD slot on the bottom side of the unit. Playback will start automatically.
- ◆ Press **ENTER ► ||** to pause playback or press **■STOP** to stop playback completely . Press **ENTER ► ||** again to resume playback .
- ◆ Press **◀FM.ST** or **▶BAND** to select the previous or next track ,respectively .
- ◆ If the USB drive or SD/MMC CARD contain folders ,press **Folder-UP** or **Folder-DN** to cycle through the folders.
- ◆ Playback will stop automatically when all tracks on the USB drive have been played .
- ◆ When the ID3 display is activated(also the USB or SD card contain folders) , the LCD will show the file name ,the song name and the artist information .

RADIO OPERATION

Listening to AM or FM broadcasts.

Basic Operation

- ◆ Press **FUNCTION** to select **TUNER** mode .
- ◆ Press **▶BAND** to select the **AM** or **FM** band .
 - ▲ AM :Listen to AM broadcasts .
 - ▲ FM:Listen to FM broadcasts .
- ◆ Turn the **AM/FM Tuning Dial** to select a broadcasts stations ,press **◀FM.ST** to select **Mono** or **Stereo sound** .
 - ▲ when the tuner is locked into a stereo broaddcast ,the LCD screen will display “ST” Tuning.
 - ▲ For the best FM radio reception , position the FM Radio Antennal located on the rear of the unit away from the speaker and power cables.
 - ▲ The AM antenna is built directly into the unit ,if AM reception is weak ,you may need to rotate or move the unit to obtain a better signal ..

PROGRAM PLAY OPERATION

Program a sequence of up to 20 tracks to be played .

IN CD disc mode

1. Press **■STOP** to make sure playback is stopped .
2. Press **PROGRAM PLAY MODE** button to enter program mode .The LCD screen will display 『MEMORY』 , 『P01』 and flashing 『00』 .
3. While 『00』 is blinking , press **◀FM.ST** or **▶BAND** to select a track number ,and then press **PROGRAM PLAY MODE** button to store it in memory . The LCD will display 『P02』 .
4. Repeat the previous step until you have selected up to 20 tracks . Press **ENTER ▶ ||** to start Program play .

IN MP3 disc or USB/SD CARD mode

1. Press **■STOP** to make sure playback is stopped .
2. Press **PROGRAM PLAY MODE** button to enter program mode .The LCD screen will display 『MEMORY』 , 『P01』 and flashing 『F00』 .
3. While 『F00』 is blinking , press **◀FM.ST** or **▶BAND** to select a folder , press **PROGRAM PLAY MODE** to confirm . then T 00 will be blinking , press **◀FM.ST** or **▶BAND** to select a track number . then press **PROGRAM PLAY MODE** button to store it in memory .
4. Repeat the previous step until you have selected up to 99 tracks . Press **ENTER ▶ ||** to start Program play .

IMPORTANT NOTE :

Press **◀FM.ST** or **▶BAND** during Program play will display the programmed track number . Press **■STOP** to clear the program list . The program list also be lost if you open the CD door or if the unit is unplugged .

CLOCK ADJUSTMENT

1. Press the **STANDBY** button to switch the unit to standby mode .
2. Hold the **PROGRAM PLAY MODE** button for 2 seconds . The LCD will flash the 12 or 24 H, press **◀FM.ST** or **▶BAND** to select the 12 H or 24 H display mode . Press **PROGRAM PLAY MODE** button to confirm .
3. The hour digit will flash , press **◀FM.ST** or **▶BAND** to set the hour . Press **PROGRAM PLAY MODE** button to confirm .
4. The minute digit will flash , press **◀FM.ST** or **▶BAND** to set the minute . Press **PROGRAM PLAY MODE** button to confirm .

Display Function

During “on”mode , Hold **PROGRAM PLAY MODE** button on the unit or remote control for 2-3 seconds to show the current clock . It will show 4-5 seconds .

MENU FUNCTION

TIMER (AUTOMATICAL POWER ON)

1. Press **MENU** on the remote control repeatedly until the LCD screen displays "TIMER" , press **ENTER ► II** to enter to set the TIMER . Press **◀◀FM.ST** or **▶▶BAND** to select the TIMER ON, then press **ENTER ► II** to set the timer .
- 2.. Hour digit will flash , press **◀◀FM.ST** or **▶▶BAND** to set the hour . press **ENTER ► II** to confirm .
3. The minute digit will flash , press **◀◀FM.ST** or **▶▶BAND** to set the minute , Then the LCD will flash the any mode of CD/TUNER/USB/SD CARD ,you can press the **◀◀FM.ST** or **▶▶BAND** to select the mode in which the unit powers on . The volume in which the unit powers on can also be adjustable .

SLEEP (AUTOMATICAL POWER OFF)

1. Press **MENU** button on the remote control repeatedly to select the **SLEEP** function , then press **ENTER ► II** to enter the sleep setting .
2. Press **◀◀FM.ST** or **▶▶BAND** to select the sleep time .
120 →110 →100 →90 →80 →70 →60 →50 →40 →30 →20 →10 →OFF
(In minutes)

(*OFF means SLEEP is disabled.)

EQ(Equalizer)

Set the EQ options to change the equalizer presets .

1. Press **MENU** on the remote control repeatedly unill the LCD screen displays "EQ" ,then press **ENTER ► II** to set the EQ mode.
2. Press **◀◀FM.ST** or **▶▶BAND** to cycle through the following equalizer preset options:
FLAT →CLASSIC → ROCK → JAZZ → POP.

BASS

Press MENU on the remote control repeatedly to select the BASS . when the LCD displays" BASS" , press **ENTER ► II** to enter . press **◀◀FM.ST** or **▶▶BAND** to BASS ON or BASS OFF .

ID3

When setting the ID3 , press the ID3 button on remote control to enable or disable the ID3 text display for MP3/WMA files .

VOLUME CONTROL

Use the VOLUME +/- button on the remote control or unit to adjust the volume level .

MUTE function

Press the MUTE button on the remote control to turn off the sound .Press the MUTE button again or use the VOLUME button to resume the sound .

TRACK +10

Press the **TRACK+10** button on the remote control to skip to the 10 track forward .

AUX IN MODE

Auxiliary (Aux) mode allows you to play any audio device (e.g., MP3, cassette player, etc.) through your system.

Basic Operation

1. Use a 3.5mm male to male line in cable (included) to connect the Line-out or Headphone out jack of an audio device to this system Auxiliary Line-In jack.
 2. Press POWER to turn the player on .
 3. Set the FUNCTION Mode switch to the "AUX" position .
 4. Start playback on the external audio device.
- ◆ You must use the external audio device to control playback.
 - ◆ To avoid distortion, do not set the volume from the external audio device to very high levels.

TROUBLESHOOTING

There is no power to the device .

- ◆ Ensure that the power cord is securely connected to the unit and the proper wall outlet .
- ◆ Ensure that the voltage selector has been set properly .

There is no sound .

- ◆ Ensure that the speaker connections are secure and correct .
- ◆ Try to adjusting the volume .
- ◆ Ensure that the player is in the proper mode(CD,UDISK,RADIO)
- ◆ Ensure that headphones are not connected to the unit.

The sound is distorted .

- ◆ The unit may be positioned too closely to a large appliance (e.g a TV or refrigerator) . If possible ,turn the appliance off or move the unit to another location .
- ◆ Ensure that the radio is in broadcast reception range .
- ◆ Decrease the volume level .

The remote control doesn't work.

- ◆ Ensure that there are no obstacles between the remote and the player.
- ◆ Point the remote at the remote sensor on the main unit .
- ◆ Strong light(e.g, direct sunlight ,fluorescent lights , strobe lights)may interfere with the remote signal .
- ◆ Ensure that the batteries in the remote control retain a charge and have been installed correctly .
- ◆ Try replacing the remote's batteries .

The device does not play .

- ◆ Moisture may have condensed inside the player .Remove the disc and leave the player on for 1-2hours and then try again .

The USB disk or SD/MMC card does not play.

- ◆ Use only USB-MSC device or flash disk drives . USB-MTP devices are not supported .
- ◆ Ensure that the USB disk or SD/MMC card has been loaded with compatible MP3 or WMA files.
- ◆ Ensure that the capacity of the SD/MMC card does not exceed 2GB. High- capacity SD cards(HCSD) are not supported by this player.
- ◆ DRM-encrypted WMA files are not supported .

The CD will not play.

- ◆ Ensure that the CD has been loaded with its label facing up .
- ◆ Ensure that the CD is not damaged , scratched ,or dirty .
- ◆ Ensure that the CD is an audio CD ,or that it contains compatible MP3 or WMA files .
- ◆ DRM-encrypted WMA files are not supported .

Playback is “skipping”

- ◆ Ensure that the CD is not damaged ,scratched ,or dirty.
- ◆ Ensure that the unit has been installed in a stable location to avoid vibration and shock .

The player will only play one track ,repeatedly .

- ◆ Ensure that REPEAT mode is off (press REPEAT to cancel).
The function mode is not working .
- ◆ Ensure that the CD Compartment Lid is closed .

The Function mode is not working .

- ◆ Ensure that the CD Compartment Lid is closed .

TECHNICAL SPECIFICATIONS

| | |
|----------------------|----------------------------------|
| Power Supply : | AC 120V 60 HZ |
| Power Consumption : | 16 W |
| Tuning System : | AM: 530-1710KHZ FM: 88-108MHZ |
| Audio Output : | Stereo Speaker (x2) |
| Peak Power : | 2.2 W X 2 |
| Speaker Dimensions : | 107 x 209 x 113 mm |
| Unit Dimensions : | 300 x 177 x 69 mm |