 




## 4" Dual Portable Speakers with Bluetooth® & TWS

NDS-4002D

### CONTROL PANEL



1. **Mode:** (AUX, MP3, FM, BT) Press and hold during playback.
2. **Previous Track / VOL-:** Press and hold to reduce volume.
3. **Play / Pause:** Press while on to pause playback, press again to resume.
4. **Next Track / VOL+:** Press and hold to increase volume.

2. Turn on the Speaker and set it to Bluetooth® mode (press the MODE Button). The speaker will automatically enter pairing mode and make a beeping sound.

3. Use your device to search for nearby Bluetooth devices. The Speaker will be listed as "SOUND PRO NDS-4002D". (This function is usually in the Bluetooth® settings menu; refer to your device's instruction manual to learn more.)

4. Select "SOUND PRO NDS-4002D" from the list of found/available devices. The Speaker will make a confirmation tone upon successful connection.

You can now start playback on your connected device to begin streaming music to the speaker.

### BLUETOOTH®

Use Bluetooth® mode to stream music from a Bluetooth® enabled player (e.g., smartphone or tablet device). A device must be paired with the unit before using them together for the first time.

To pair a Bluetooth® enabled device with the Speaker, follow these steps:

1. Make sure Bluetooth® is enabled on your device and that it is next to the unit before attempting to pair it.

### SPECIFICATIONS

- Output Power: 10W
- Impedance: 2 ohm
- Speaker: 4 inch\* 2
- Frequency Response: 40Hz-16Khz
- Signal-to-Noise Ratio: ≥85dB
- Total Harmonic Distortion: ≤0.05 1W