



NDS-8005 Instruction Manual



User Manual for NDS-8005 Portable Speaker

WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta en este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. SOLICITE EL SERVICIO A UN TECNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia o la humedad. No almacene o utilice este producto cerca de líquidos, fuentes de calor, como radiadores, acumuladores de calor. Limpie sólo con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando este símbolo aparece en este manual de instrucciones y siga todas las precauciones, ya que se han precisado.

NDS-8005 BATTERY

The NDS-8005 is a lithium battery powered PA loudspeaker.

Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (2~3 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. The Battery Indicator icon (on right top side of led display) always red when charging to full situation. With standard usage, a fully charged battery can play for about 1 hours.

Battery can be recharged about 300 times in its lifetime. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

NDS-8005 BLUETOOTH


Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "SOUNDPRO NDS-8005 BLUE" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

NDS-8005 DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT AUX /FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Short Press "play/pause" button for auto scan all channels.

NDS-8005 REAR PANEL

1. Volume adjusting Knob: Adjust from Min to Max (Power ON/ OFF)
2. Echo Knob: Adjust from Min to Max
3. Microphone Volume Knob: Adjust from Min to Max
4. Mode Button : Toggle Between AUX/ USB/TF/FM/ BT (Long press to turn ON/OFF the light)
5. Previous Track Button: Select previous track
6. Play/Pause Button
7. Next Track Button: Select next track
8. AUX input
9. USB Slot
10. TF Card input
11. Microphone Input
12. 5V DC connection

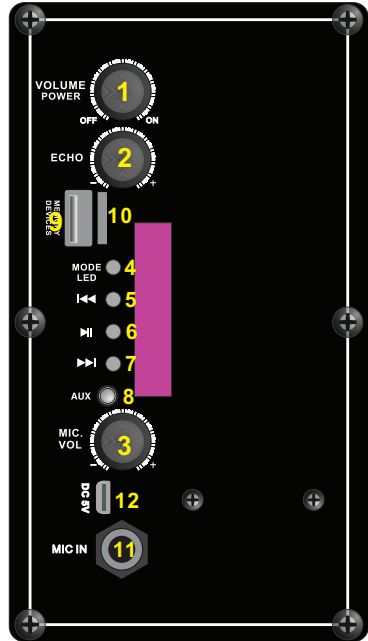

NDS-8005 TWS Function

- (1) TWS connection: TWS Connection is only for two speakers, can not support quantity over 2 PCS.
- (2) Turn on the Speakers , press the MODE button to switch to BLUETOOTH mode, and the word"BLUE"on the LED screen will flash.
- (3) At the first time, please press the Play/Pause (TWS) button for 3 seconds. Then two speakers will connect together
- (4) Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name'SOUND PRO NDS-8005 BLUE'.
- (5) Select music from phone and enjoy TWS playing in pairs with two Speakers.

NDS-8005 REMOTE CONTROL

- 1.STANDBY: Make the unit to be standby mode.
- 2.Input Mode Button: Toggle between USB,TF,FM,AUX,BT
- 3.Mute:Mute the track
- 4.PLAY/PAUSE
- 5.Previous Track: Select previous channel
- 6.Next Track:Select next channel.
- 7.EQ:Select EQ mode.
- 8.VOL-:Reduce the master volume
- 9.VOL+: Increase the master volume
- 10.REP: Repeat the playing track.
- 11.Press to Scan Channel in FM Mode
- 12-21.KEY Number for selecting the certain track for USB flash drive or TF card.

