


KTS-1110 说明书尺寸：210*148mm，骑马订装，装订成册，单色双面印刷，80G书纸

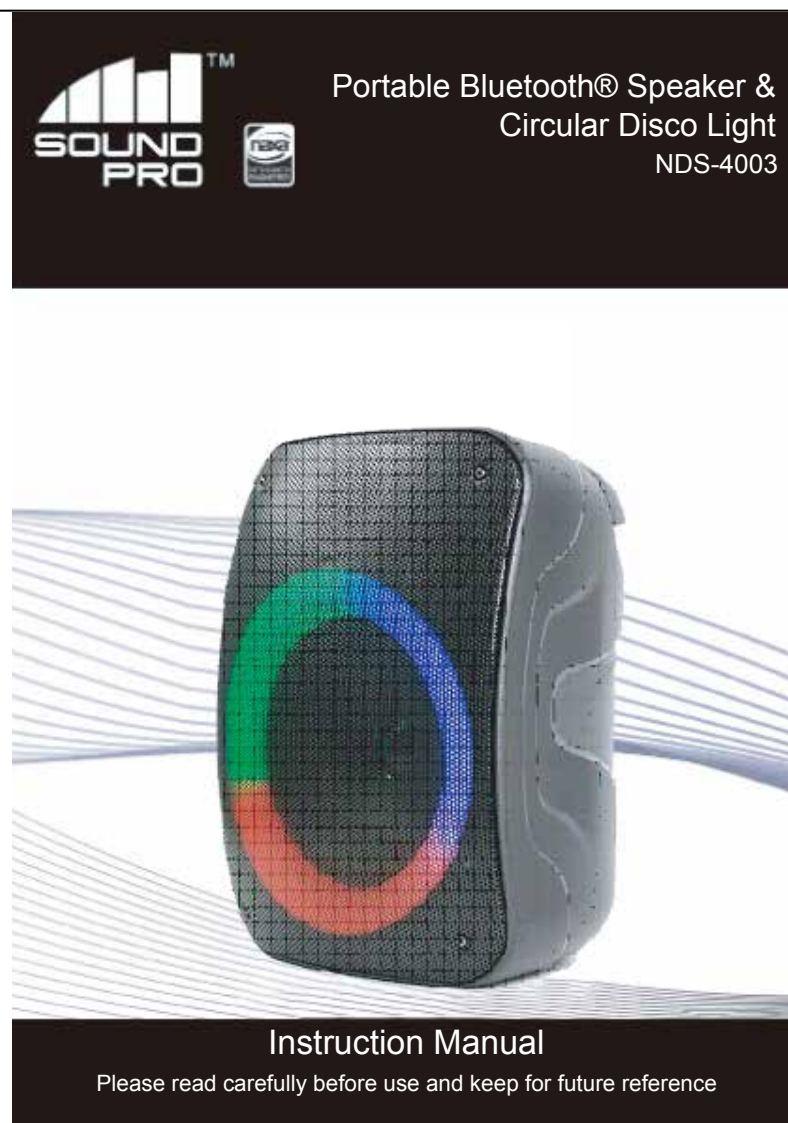

IN THE BOX

Upon opening your new portable Bluetooth® speaker, first check to ensure all of the following contents are present:

- Portable Bluetooth® Speaker
- Charging Cable
- Audio Cable
- User Manual

WARNING

CAUTION

WARNING: SHOCK HAZARD. DO NOT OPEN. RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIRE.

CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Guard this manual.
3. Obey all alerts.
4. Follow all instructions.
5. **WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture. Do not store and operate this product near liquid.
6. Clean only with dry cloth.
7. Not store and not operate this product near any heat sources such as radiators and heat registers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a well ventilated place.
8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two blades being wider than the other. A grounding plug has two blades plus a round pin to ground. The wide blade or the third prong is intended to provide security. If the provided plug does not fit into your outlet, consult an electrician to replace the outlet.
9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs and the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the plug and do not pull the cord.
10. Disconnect the unit during lightning storms or when long period is to remain unused.
11. Keep this unit off when connecting all the devices connected to it.
12. After finishing the installation and connections, connect all your equipment with low volume level. Once all devices are connected, slowly increase the volume or level controls to achieve the proper position.
13. Before placement, installation, assembly or suspending any product, inspect all equipment, suspension, cabinets, transducers, brackets and associated equipment. Any missing component, corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrangement of the installation significantly. Any of these conditions can reduce the security of the facility and must be corrected immediately. Use only suitable equipment for the loading conditions of the installation and that any possibility of reducing term, unexpected overload, never exceed the capacity of the material or equipment.
14. Consult a licensed professional to install the equipment and make sure that all local, regional and national regulations related to security are understood and adhered to.
15. All services should be performed by qualified professionals. Servicing is required when the apparatus has been damaged in any way, as if having the power cord or its damaged connector, or if the machine breaks contact with liquid or if any object is inserted in the unit or if the unit is exposed to rain or moisture, or if the unit does not operate normally, or has been dropped.

CHARGE THE BATTERY FULLY BEFORE FIRST USE TO OPTIMIZE ITS LIFETIME PERFORMANCE.

2

KEY FEATURES

- Bluetooth® functionality allows you to wirelessly stream all your favorite music content from Bluetooth-enabled devices in high-quality audio
- Connect to other Sound Pro NDS-4003 TWS speakers allowing you to sync speakers up to 33 Feet from each other without any wires.
- Start the party off right with the Circular Full Color Wave Disco Light
- Play media from removable storage devices, such as TF memory cards and USB flash drives thanks to the built-in TF card slot and USB port
- High-power speaker produces peerless soft, clear, and dynamic sound
- Tune in on all of your favorite local radio station with the FM radio tuner
- Built-in carrying handle allows you to move the speaker anywhere easily
- Accessories Included: User Manual, Charging Cable, & Audio Cable

3

PRODUCT BREAKDOWN

1. POWER ON/OFF: Turn on/off the machine
2. MIC-IN: Microphone input
3. AUX-IN: 3.5mm aux in jack
4. USB slot: Play Mp3 files from USB drive
5. TF slot: Play Mp3 files from TF card
6. MODE: Cycle through different modes (BT/AUX/USB/TF/FM).
7. PLAY/PAUSE: In USB/TF/BT mode, briefly press to play and pause. In FM mode, briefly press to search and record the channel automatically.
8. Previous/Volume(-): Under FM/USB/TF/Bluetooth mode, short press to move to previous channel/track. Press and hold to decrease the volume
9. Next/Volume(+): Under FM/USB/TF/Bluetooth mode, short press to move to next channel/track. Press and hold to increase the volume
10. Press to increase the bass
11. Press to change the lighting mode
12. Power Source: DC-5V USB charge port

4

PAIRING A BLUETOOTH® DEVICE

TWS FUNCTION

USB/TF CARD

The Bluetooth® speaker allows you to enjoy your favorite audio played from external storage devices, such as USB flash drives and TF memory cards. To use do so, follow these steps:

1. Insert the USB or TF card into the USB port / TF slot.
2. Press the "Play/Pause" button to start or stop playback. Briefly press the -/|<< or +/>> button to skip to the previous or next song. Press and hold the -/|<< or +/>> button to decrease or increase the volume.

NOTE: When a USB flash drive / memory card is inserted into the USB / memory card input, the unit will automatically switch to USB / memory mode and begin playing Mp3 audio files from the USB flash drive / memory card. You can also enter USB / memory card mode by pressing the "MODE" button to cycle through modes.

FM RADIO

AUX INPUT

CHARGING

SPECIFICATIONS

Speakers	4"
Wireless Source	Bluetooth®
Feature Function	TWS
RMS	5W
Media Inputs	USB Port, TF Card Slot, AUX
Radio Tuner	FM
Lighting Effects	Circular Disco Light
Power Source	3.7V 1800mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours (Play time will vary depending on volume level and type of media played)
Accessories Included	User Manual, Charging Cable, Audio Cable

FCC NOTICE

CAUTION ON MODIFICATIONS

SUPPORT

8