 


naxa®

Bluetooth & Wi-Fi Speaker

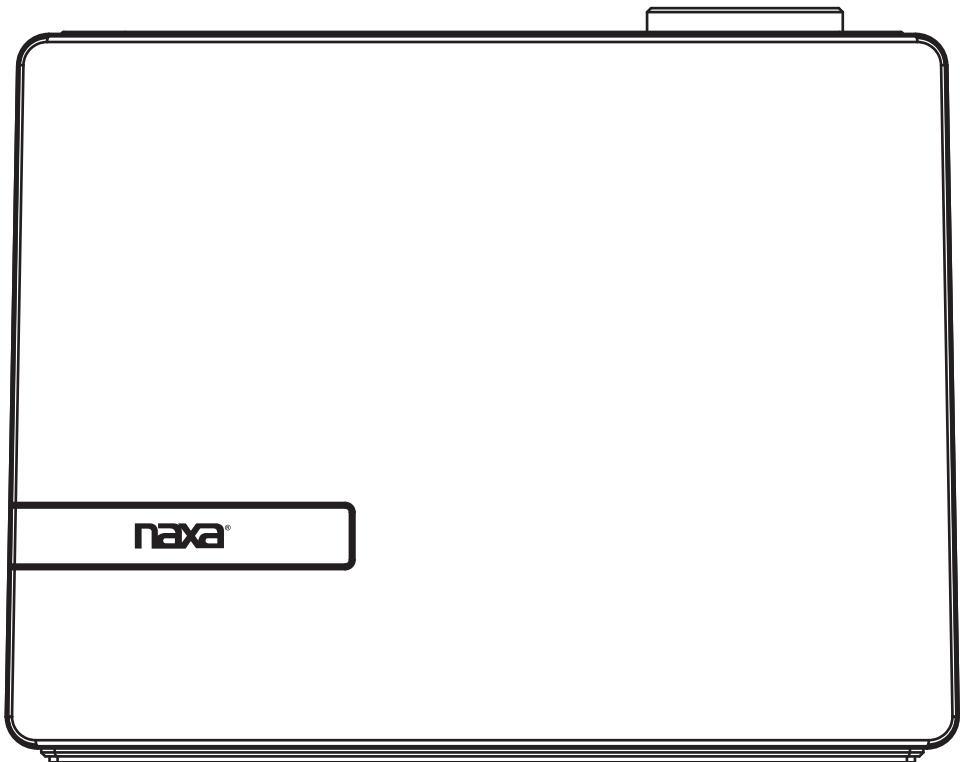

MODEL:NAS-5001

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE:The lighting flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Keep these instructions

The safety and operating instructions should be kept for future reference.

3. Heed all warnings

All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions

All operation and use instructions should be followed.

5. Do not use this apparatus near water

The appliance should not be used near water; for example, near a bath tub,

washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

6. Clean only with dry cloth

The appliance should be cleaned only as recommended by the manufacturer.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation, such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments / accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Portable Cart Warning

An appliance and cart combination should be moved with care. Quick stop, excessive fore and uneven surfaces may cause the appliance and cart combination to overturn.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or

moisture, does not operate normally, or has been dropped.

15. Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16. Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18. Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/ NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

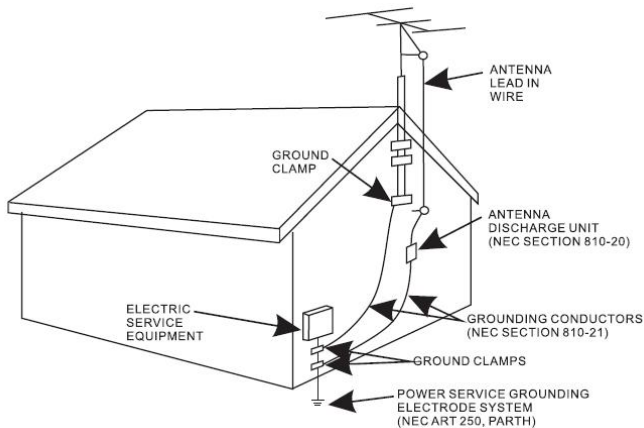

20. Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22. Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23. Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- a)When the power- supply cord or plug is damaged.
- b)If liquid has been spilled or objects have fallen into the product.
- c)If the product has been exposed to rain or water.
- d)If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- e)If the product has been dropped or the cabinet has been damaged.
- f)When the product exhibits a distinct change in performance- this indicates a need for service.

 
25. Note to CATV system installer

This reminder is provided to call the CATV system installer' s attention to Article 820- 40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

PRODUCT OVERVIEW


TOP VIEW

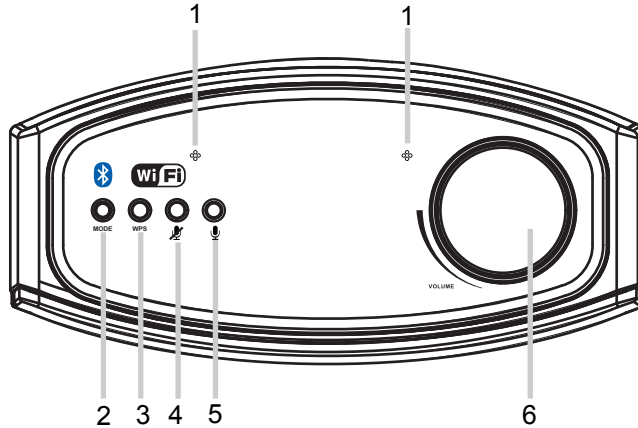

FRONT VIEW

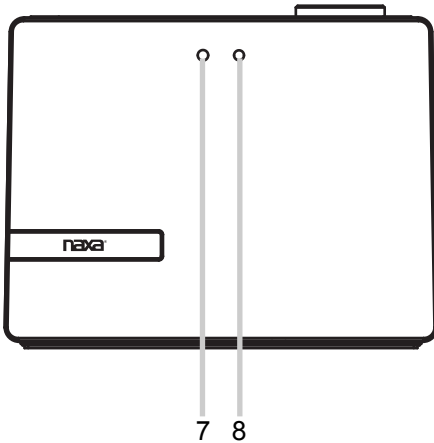 

REAR VIEW

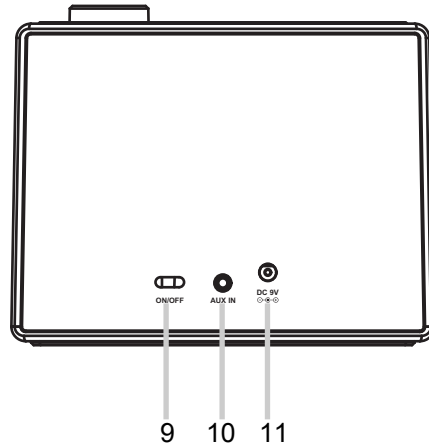 


1. Built-in Microphone
2. MODE Button
3. WPS / (Play/Pause) Button
4. Microphone (On/Off) Button
5. Communication Button
6. Volume Knob

7. Mode Indicator
8. Communication Status Indicator
9. Power ON/OFF Switch
10. AUX IN Jack
11. DC IN Jack

SETUP

PREPARATION

 
- Before connecting a device to the unit, download the "Naxa Resound" app from the Google Play store or the Apple App store. You can also scan the QR Codes shown in the Figure below to download and install the App.
- The App icon will appear as shown in Figure below after installation is successful.

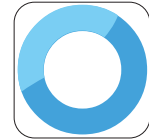


Naxa Resound

CONNECTION

 
1. Plug one end of the adapter to the DC IN jack of the speaker, then plug the adapter into the wall outlet. Set the power switch to the ON position to turn on the speaker. The mode indicator on the front of the speaker will flash blue and green alternatively; wait until it flashes green only. The speaker is now ready for connection.

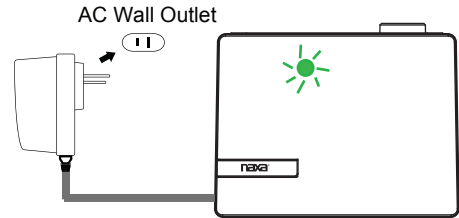

 2. Turn on the WiFi on your iOS or Android device (smart phone or tablet with WiFi function), Connect your iOS or Android device to the desired WiFi network (router).

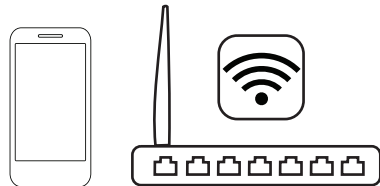

 
3. Tap the Naxa Resound icon on your iOS or Android device. It will start to scan and search for available speakers automatically. Read the on-screen instructions and tap the **Wi-Fi Setup Wizard** to continue.

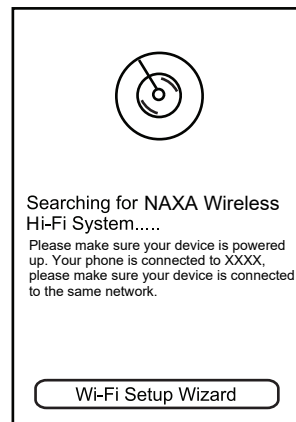


4. Read the instructions on the screen and tap

Next

 to continue.

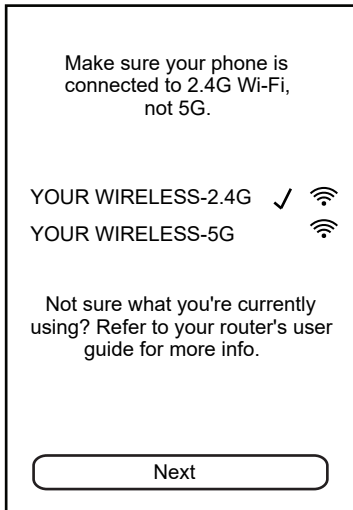


 5. Tap the device labeled NAS-5001.

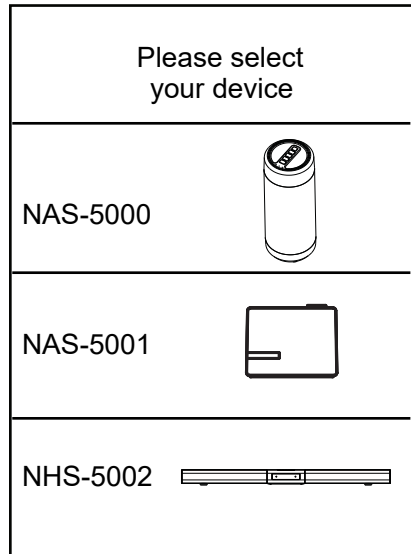

6. Tap Password to enter the Wi-Fi password to connect the speaker to Wi-Fi network(router), tap

 
Next

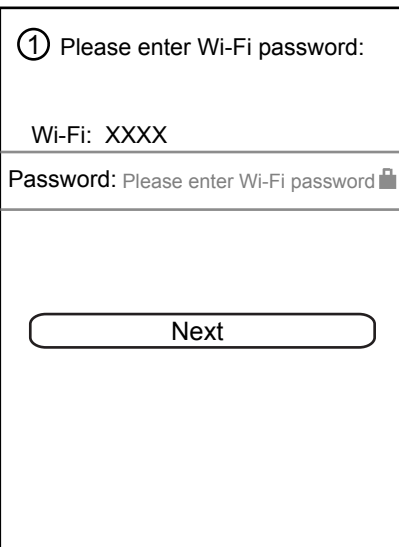


7. **Press and hold the WPS button** on top of the speaker.

Tap

 
Next

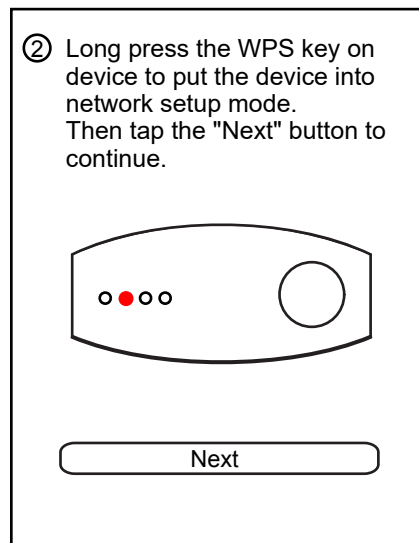

 
8. When the speaker is connected to the Wi-Fi (router) successfully, the mode indicator on front of the speaker will stay lit, and the communication status indicator will remain **WHITE**. If connection fails, please try again and repeat the above steps.

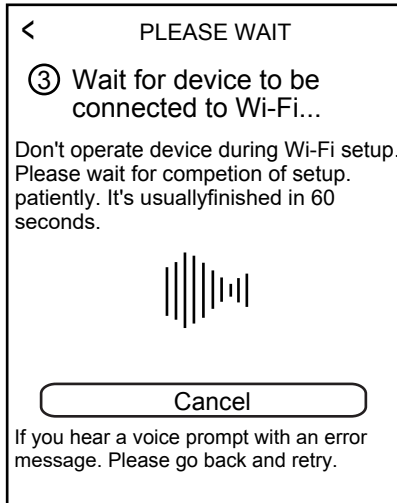

   
9. Once connected, the following screen will appear, tap Custom to change to the desired location name, or tap one of the names listed below.

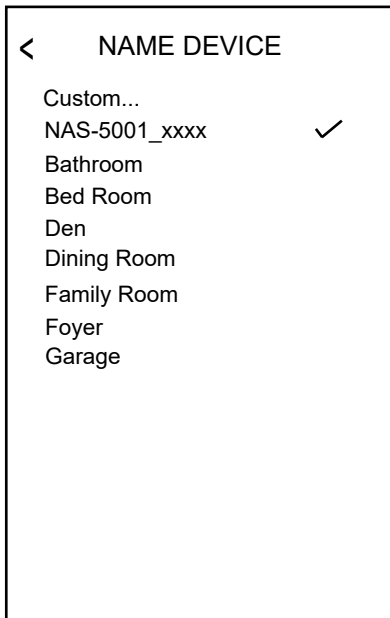


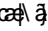
10. Select the desired Language for Alexa.

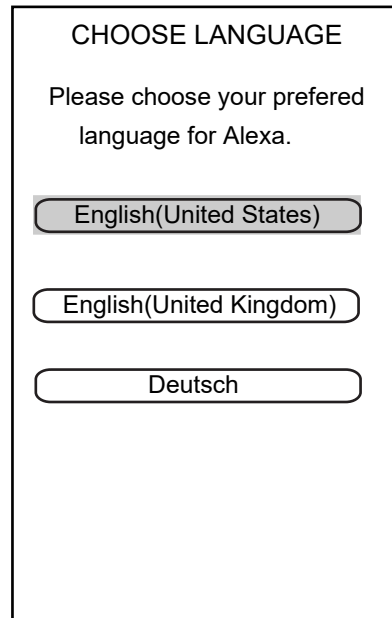


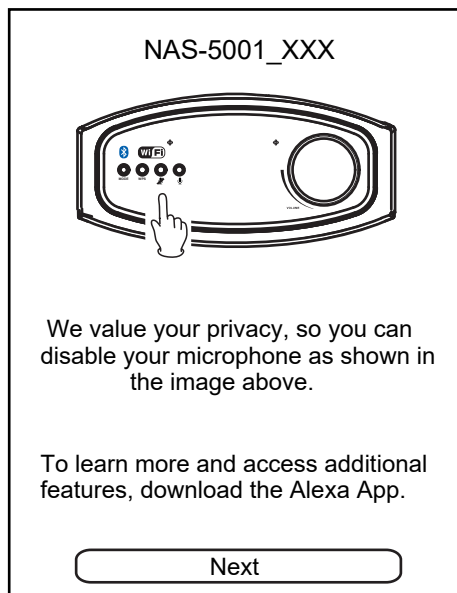 
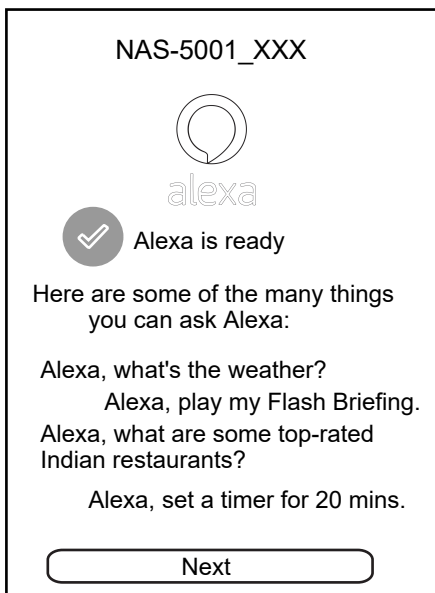 
11. Before using Amazon LinkPlay Alexa voice control function, you must have an Amazon account. Create an account on Amazon's website. If you already have an account please sign in.

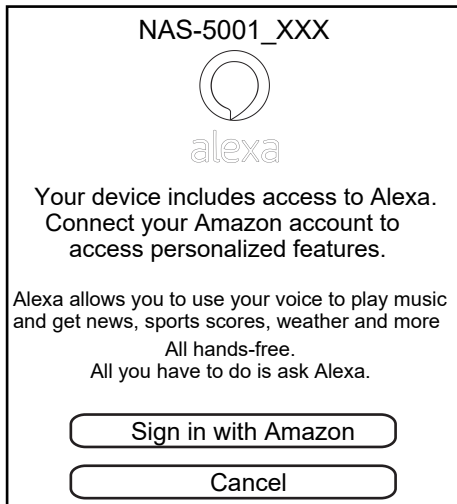


12. After you sign in, Alexa is ready. You can ask Alexa freely as on-screen instructions display.

Press the  button once to activate the speaker to communicate before  to the speaker, (or you must say "ALEXA" to activate the speaker's communication system without pressing any button).

Or you can press and hold the  button to turn off the microphone, press and hold again to turn back on.




 
13. Next, the DEVICE LIST will appear as shown below:

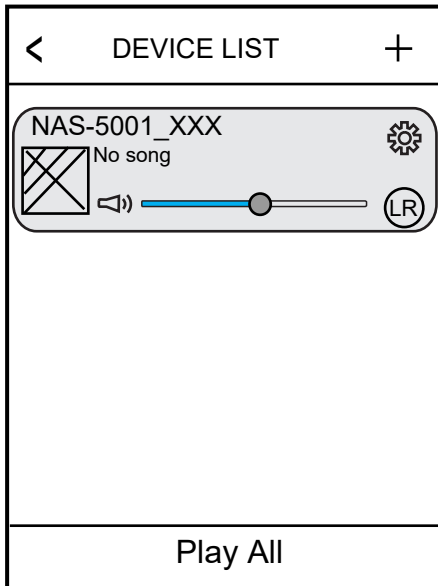

- Tap "+" to add more speakers to the network. Repeat the procedures above to make connection and follow the on-screen instructions.
- Tap "⚙️" to rename the speaker, check the speaker info, reset to the factory setting, or check the preset content.
- Tap "LR" to change the audio mode to L(left channel), R(right channel) and LR(stereo).


NOTE: For iOS device, touch and slide downward from the top of the device's screen to update the DEVICE LIST. If there is another device on same network, the device will be added to the DEVICE LIST.

  14. If more than one speaker has been added into the DEVICE LIST, you can tap the instruction "[How to switch between solo and multi mode?](#)" to learn how to switch between solo and multi mode as shown on the figure below.

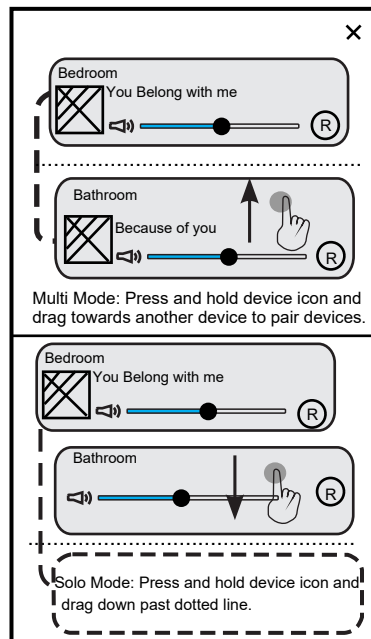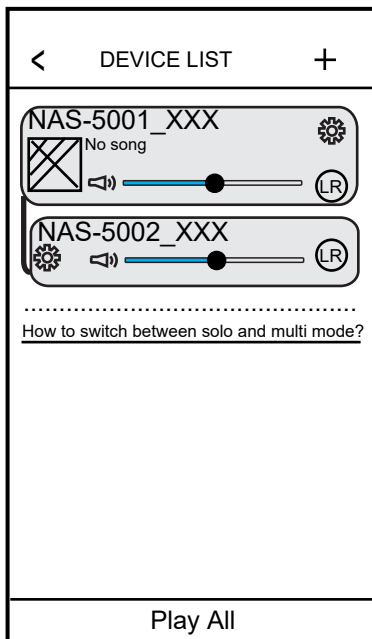

HOME G7 F99B INTERFACE

 Tap "NAXA" to enter the home screen, Navigate as shown below and follow the on-screen instructions. Some platforms may require registration.

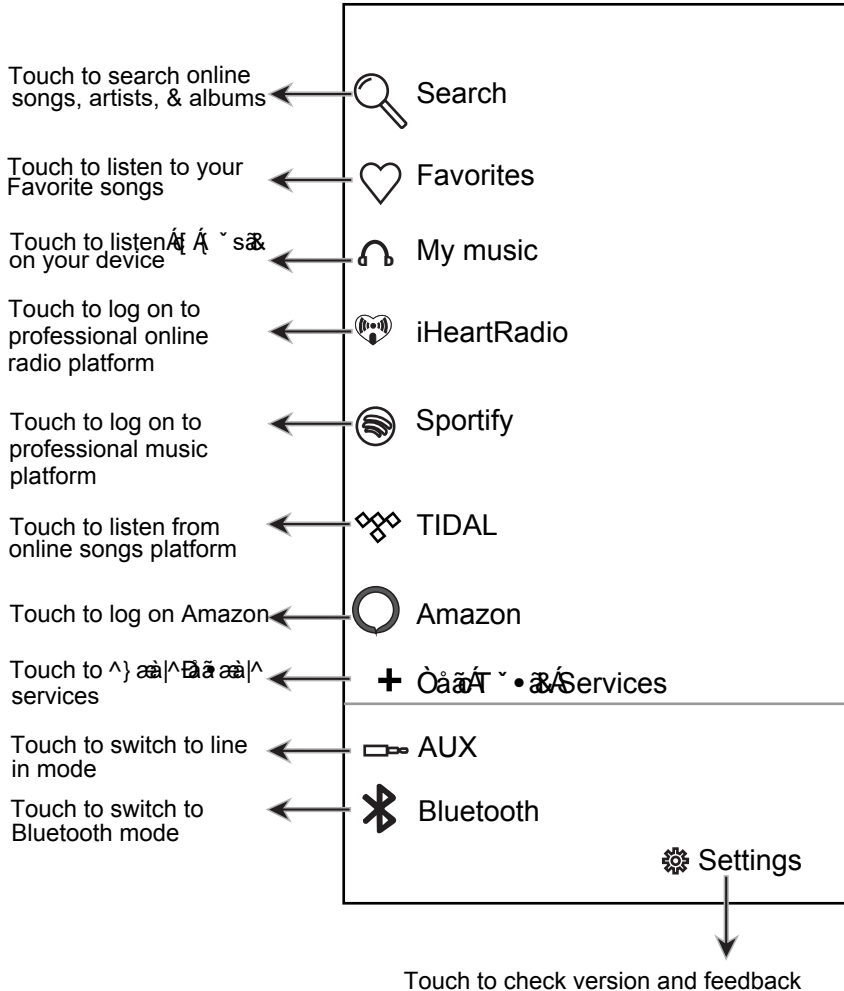


IHEARTRADIO OPERATION

Before starting, you must create an iHeartradio account to log on.

1. Tap "iHeartradio" on the POCYCARRESOUND home screen.
2. Input your account information to log on.
3. Select the desired song to play.

SPOTIFY OPERATION

Before starting, you must create a Spotify Premium account to log on.

1. Tap "Spotify" on the POCYCARRESOUND home screen.
2. Input your account information to log on.
3. Open the Spotify App on your phone, tablet or PC, and play any song.
4. Tap the connect icon .
5. Select your device from the list.

Licenses

The Spotify Software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses.



TIDAL OPERATION

Before starting, you must create a TIDAL account to log on.


1. Tap "TIDAL" on the POCYCARRESOUND home screen.
2. Input your account information to log on.
3. Select the desired song to play.

AMAZON LINKPLAY ALEXA VOICE CONTROL

Before using Amazon linkplay Alexa voice control function, you must create an Amazon account. Create an account on the Amazon website. (www.amazon.com)


1. Touch  Amazon on the home screen. A login window will appear; enter your account information to log on.
2. Press the  button once to activate the speaker to communicate before saying anything, (or you must say "ALEXA" to activate the speaker's communication system without pressing any button, followed by a question or command).

Example 1:


- Press the  button first, then ask the speaker, "what's the weather like today?"
The speaker will reply; "the weather is not so cold."

Example 2:

- Just say, "ALEXA, what's the time now?" to the speaker without pressing any button.
The speaker will reply; "It is 8 o'clock now."
- Continue to ask the speaker to do other things, such as "Alexa, Play Music!".
The speaker will reply; "Here is the station we found." Music will then play.

3. If you want to stop asking or commanding the speaker, or avoiding external voice interference, press and hold the  button to turn off voice input. The communication indicator will turn **RED**, press and hold this button again to turn on.

 COMMUNICATION INDICATOR STATUS

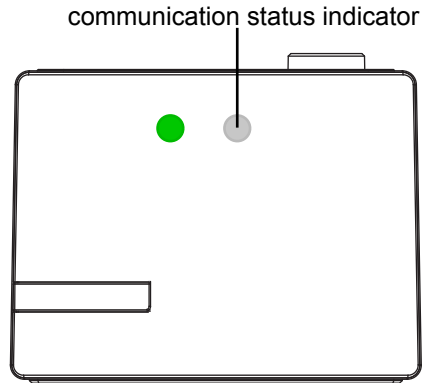

SPEAKER STATUS	LED STATUS
Idle	White LED ON
Listening	Blue LED ON
Thinking	Blue LED ON
Talking	Blue LED flashes
Microphone Off	Red LED ON

BLUETOOTH OPERATION

Pairing the speaker with Bluetooth devices (mobile phone or music device)

1. Plug one end of the adapter to DC IN jack of the speaker, plug the adapter into the wall outlet, slide the power switch to ON position to turn on the unit. The mode indicator will flash blue and green alternatively, wait until the mode indicator turns **GREEN** and flashes.
2. Press the MODE button repeatedly to turn on Bluetooth mode, the indicator will turn **BLUE** and flash to indicate it is in pairing mode.
3. Activate the Bluetooth function on your Bluetooth device (mobile phone or music device). Please refer to the manufacturer's instructions of your device for further assistance.
4. Once you have activated Bluetooth on your device, select the speaker name from the pairing list of available Bluetooth devices.
NOTE: The pairing name is " **NAXA NAS-5001** ".
5. After pairing successfully, Bluetooth indicator will stop flashing and you should hear a tone.
6. If pairing is unsuccessful, turn off the speaker first and then follow steps (1-5) to re-pair.
7. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated within range.

 
During playback:

- Press the WPS button to Play or Pause playback.
- Turn the volume knob to adjust the volume.

NOTE: Only One (1) device can be paired and connected at a time.

AUX IN OPERATION

1. Connect the external audio device to the unit by an audio connection cable with 3.5mm stereo mini jacks:
 - ~ Insert one end to the mobile phone/external audio device; Line Out or AUX Out jack
 - ~ Insert the other end to the AUX IN jack on the rear of the main unit.

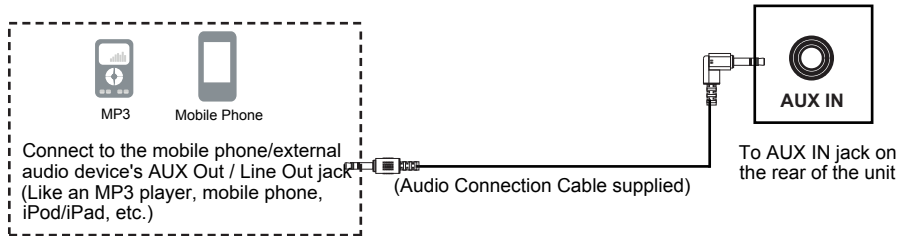


2. Plug one end of the adapter to DC IN jack of the unit, then plug the adapter into the wall outlet, slide the power switch to ON position to turn on the unit. The indicator will flash blue and green alternatively, wait until the indicator turns **GREEN** and flashes.
3. Press the MODE button repeatedly to turn to AUX IN mode, the indicator will turn **INDIGO** .
4. Play music on your external device.

TROUBLESHOOTING

Check the following list of common problems before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No sound or sound weak	Volume level of paired/connected device is in low level	Raise the volume level of the paired/connected device
Sound distortion	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit
	The external BT device too far from the unit	Place the external BT device closer to the unit

SPECIFICATIONS

Power Source	9 V  1.5 A  
BT Version:	4.1
BT Operation Distance:	about 32 Feet in open area
Wifi Operation Distance:	about 96 Feet in open area

PACKAGE INCLUDES

- 1 x User's Manual
- 1 x Adapter
- 1 x Audio Connection Cables with 3.5mm Plug

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**