



# Portable Dual 10" Bluetooth® Party Speaker with Multi-Color Disco Lights



NDS-1011

## Instruction Manual



User Manual for NDS-1011 Portable Speaker

# WARNING

	<b>CAUTION</b>	
<p>WARNING: SHOCK HAZARD, DO NOT OPEN.          AVIS: RISQUE DE CHOC ELECTRIQUE,          NE PAS OUVRIIR</p>		
<p><b>CAUTION:</b> TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Guard this manual.
3. Obey all alerts.
4. Follow all instructions.
5. **WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture. Do not store and operate this product near liquid.
6. Clean only with dry cloth.
7. Not store and not operate this product near any heat sources such as radiators and heat registers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a well ventilated place.
8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two blades being wider than the other. A grounding plug has two blades plus a round pin to ground. The wide blade or the third prong is intended to provide security. If the provided plug does not fit into your outlet, consult an electrician to replace the outlet.
9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs and the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the plug and do not pull the cord.
10. Disconnect the unit during lightning storms or when long period is to remain unused.
11. Keep this unit off when connecting all the devices connected to it.
12. After finishing the installation and connections, connect all your equipment with low volume level. Once all devices are connected, slowly increase the volume or level controls to achieve the proper position.
13. Before placement, installation, assembly or suspending any product, inspect all equipment, suspension, cabinets, transducers, brackets and associated equipment. Any missing component, corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrangement of the installation significantly. Any of these conditions can reduce the security of the facility and must be corrected immediately. Use only suitable equipment for the loading conditions of the installation and that any possibility of reducing term, unexpected overload, never exceed the capacity of the material or equipment.
14. Consult a licensed professional to install the equipment and make sure that all local, regional and national regulations related to security are understood and adhered to.
15. All services should be performed by qualified professionals. Servicing is required when the apparatus has been damaged in any way, as if having the power cord or its damaged connector, or if the machine breaks contact with liquid or if any object is inserted in the unit or if the unit is exposed to rain or moisture, or if the unit does not operate normally, or has been dropped.

CHARGE THE BATTERY FULLY BEFORE FIRST USE TO OPTIMIZE ITS LIFETIME PERFORMANCE.

## IN THE BOX


Upon opening your new portable Bluetooth® speaker, first check to ensure all the following contents are present:

- Portable Bluetooth® Speaker
- Wired Microphone
- Remote Control
- Power Adapter
- User manual

## KEY FEATURES

- Dual 10" Full-frequency speakers pump out room-filling, high-quality audio with ease
- Bluetooth® functionality allows you to wirelessly stream all your favorite music content from Bluetooth-enabled devices in high-quality audio
- Start the party off right with Disco lighting effect that will leave a lasting impression on all your friends and family
- Connect to other Sound Pro NDS-1011 True Wireless Speakers (TWS) allowing you to sync speakers up to 33 feet from each other without any wires
- Release your inner Rock star with friends and family thanks to the included wired microphone
- User-friendly operator experience thanks to the clear LED display
- Enjoy media from removable storage devices, such as USB flash drives and TF cards via the USB input and TF card slot
- Manually connect external media devices via the 3.5mm auxiliary input
- Tune in on all your favorite local radio stations thanks to the FM tuner
- Take full control of your speaker thanks to the included 3 master control knobs
- Portable handle and wheels allow you to move the speaker anywhere easily


## TOP PANEL

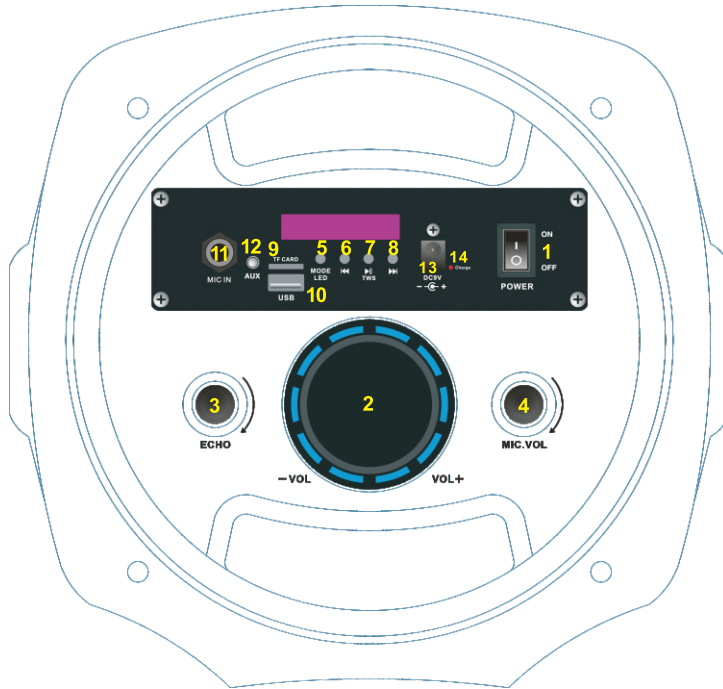

1. Power Switch: ON/OFF
2. Master Volume Knob : Adjust from Min to Max
3. Microphone Echo Knob : Adjust from Min to Max
4. Microphone Volume Knob: Adjust from Min to Max
5. Mode Button: Toggle between AUX, USB, TF, FM, BT by short press, press and hold to turn light on or off
6. Previous Track Button: Select previous track
7. Play/Pause Button (TWS connection)
8. Next Track Button: Select next track
9. TF Card Slot
10. USB Slot
11. Microphone Input
12. AUX IN
13. Power Supply: DC 9V
14. Battery Indicator Light

## REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB,TF,FM,AUX,BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track: Select next channel.
7. EQ: Select EQ mode.
8. VOL-:Reduce the master volume
9. VOL+: Increase the master volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
12. 12-21.KEY Number for selecting the certain track for USB flash drive or TF card.

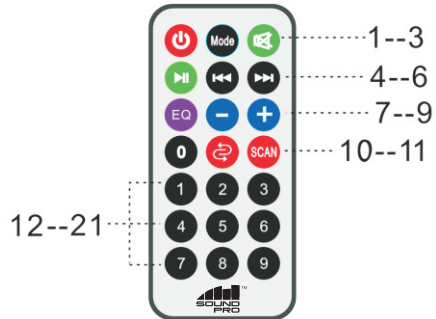

## PARING A BLUETOOTH® DEVICE

**To connect to the speaker via Bluetooth, take the following steps:**

1. Turn on the speaker. On the top panel, press the mode button to enter Bluetooth mode.
2. On your device, go to the Bluetooth settings and search for new Bluetooth devices.
3. Find the Bluetooth device named "SOUND PRO NDS-1011" and select the device to connect.
4. After a successful match, you can play music from your device on the speaker.

*NOTE: You won't need reconnect the Bluetooth when switching modes.*

## USB/TF CARD

The Bluetooth® speaker allows you to play your favorite audio from external storage devices, such as USB flash drives and TF memory cards.

**To connect a USB/TF Card to the speaker, take the following steps:**

1. Turn on the speaker.
2. Insert the USB flash driver or TF card into the speaker and music will begin playing automatically.
3. While in playing mode, press the "Previous Track" or "Next Track" button to change songs.
4. Press the "Play/Pause" button to play or pause the current track.

*NOTE: When a USB flash drive/memory card is inserted into the device, the unit will automatically switch to USB/TF mode.*

## FM RADIO

The Bluetooth® speaker allows you to enjoy your favorite local FM radio stations. **To use the FM radio feature, take the following steps:**

1. Turn on the speaker.
2. Press the MODE button to change to FM radio mode.
3. Press the “Play/Pause” button to automatically scan for available FM channels.
4. Once the scan is complete, you can use the “Previous Track” or “Next Track” buttons to change the radio station.

## TWS FUNCTION

The Wireless speaker allows you to enjoy your favorite audio played over multiple speakers at the same time thanks to the included TWS function. To use the TWS function, follow these steps:

1. Turn on the speakers you intend to use. Use the Mode button to switch the Bluetooth® mode.  
The word “BLUE” on the LED screen will flash.
2. Press the PLAY/PAUSE (TWS) button on one of the speakers and hold it for 3 seconds.  
The two speakers will connect.
3. Open the Bluetooth® settings menu on your external device and initiate a search for nearby devices.  
Select “SOUND PRO NDS-1011” and connect.
4. Begin playback and the audio will play through the two connected speakers.
5. To exit TWS mode, press and hold the PLAY/PAUSE (TWS) button for 3 seconds.

**NOTE:** TWS functionality is for two speakers at a time only. It can not support more than two speakers at the same time

## AUX INPUT

The Bluetooth® speaker allows you to enjoy your favorite audio played from external devices that don't have Bluetooth® capabilities via the auxiliary (AUX) input.

**To connect an auxiliary device to the speaker, take the following steps:**

1. Turn on the speaker.
2. Press the MODE button to change to the AUX mode.
3. Insert an auxiliary cable (not included) into the AUX input in the speaker.
4. Connect the other end of the auxiliary cable into the desired external media device's AUX output.
5. Press the “Play/Pause” button to start or stop playback.

## SPECIFICATIONS

Product Name	Portable Dual 10" Bluetooth® Party Speaker with Multi-Color Disco Lights
Speakers	10" Woofer x 2 + 1.5" Tweeter
Wireless Source	Bluetooth®
Functions	TWS
Display	LED (Red)
PMPO Output	2500W x 2
Supported Audio Format	MP3
Media Inputs	USB Port, TF Card Slot
Other Inputs	AUX, MIC
Radio Tuner	FM
Light Effects	Multi-Color Disco Lights
Volume Level Controls	Master, Mic, Echo
Power Source	7.4V, 2200mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours (Play time will vary depending on volume level and type of media played)
Accessories included	Wired microphone, Remote control, UL Power Adapter, User manual

## BATTERY

The NDS-1011 is a lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (approximately 3-5 hours to fully charge the lithium battery ). Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging, the battery indicator light is red.

When the battery is fully charged, the indicator light will turn off. With standard usage, a fully charged battery can play for about 2 hour. Battery can be recharged about 300 times in its lifetime. When not in use, the speaker should always be set to OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

## DISPLAY SYSTEM SETTINGS

1. **Input Mode:** The LED display screen will display the information of the current input: USB/TF/BT/AUX /FM. When a USB flash drive or TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive or TF Card.
2. **Track Number:** The track number currently playing from the USB/TF will display.

**FM Mode:** All FM channels display here. Press the "Play/Pause" button to auto scan all channels.

3.

## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate this equipment.



## TROUBLESHOOTING

Issue	Possible Cause	Solution
<b>No Sound</b>	<ol style="list-style-type: none"> <li>1. The woofer cable may be loose.</li> <li>2. Volume is too low.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reconnect the woofer cable.</li> <li>2. Adjust volume.</li> </ol>
<b>Distortion of sound</b>	<ol style="list-style-type: none"> <li>1. Volume too high.</li> <li>2. Speaker may be damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn down the volume.</li> <li>2. If speaker is damaged, repair or replace it.</li> </ol>
<b>Karaoke does not work</b>	<ol style="list-style-type: none"> <li>1. Microphone plug is not fully inserted.</li> <li>2. Microphone is not switched on.</li> <li>3. Microphone volume knob is at the lowest position</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug microphone into the socket properly.</li> <li>2. Turn on microphone switch.</li> <li>3. Adjust microphone volume properly.</li> </ol>
<b>MP3 does not play</b>	<ol style="list-style-type: none"> <li>1. The song format is incorrect.</li> <li>2. Improper operation has caused a process disorder.</li> <li>3. USB device is not connected properly.</li> </ol>	<ol style="list-style-type: none"> <li>1. Convert song to MP3 format.</li> <li>2. Reboot the device.</li> <li>3. Reconnect the USB device and ensure it is connected properly.</li> </ol>

## SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

### Naxa Technical Support

2320 East 49<sup>th</sup> St.

Vernon, CA 90058

(866) 411-6292

<http://www.naxa.com/supportcenter>