



enclosure that may be of significan magnitude to constitute risk of electric shock BACK) OF THE UNIT. REFER SERVICING ONLY TO

### IMPORTANT SAFETY INSTRUCTIONS

- Do not store and operate this product near liquid.
- 7. Not store and not operate this product near any heat sources such as radiators and heat registers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a well
- 8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two blades being wider than the other. A grounding plug has two blades plus a round pin to groun
- and the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the
- level. Once all devices are connected, slowly increase the volume or level controls to achieve the
- USB input and TF card slot suspension, cabinets, transducers, brackets and associated equipment. Any missing component, corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrangement of the installation significantly. Any of these conditions can reduce the security of the facility
- the installation and that any possibility of reducing term, unexpected overload, never exceed the Manually connect to external media devices via the 3.5mm auxiliary input
- 14. Consult a licensed professional to install the equipment and make sure that all local, regional and national regulations related to security are understood and adhered to.
- Tune in on all your favorite local radio stations thanks to the FM tuner 15. All services should be performed by qualified professionals. Servicing is required when the
- or if the machine breaks contact with liquid or if any object is inserted in the unit or if the unit is USB input conveniently allows you to charge your phone exposed to rain or moisture, or if the unit does not operate normally, or has been dropped.
  - · Accessories included: Remote Control, User Manual, Wired Microphone, and UL Power Cable,

Upon opening your new dual wireless speakers, first check to ensure all of the following contents

- Bluetooth® functionality allows you to wirelessly stream all your favorite music content from

- Keep this unit off when connecting all the devices connected to it. 12. After finishing the installation and connections, connect all your equipment with low volume
- Before placement, installation, assembly or suspending any product, inspect all equipmer
  - Low frequency pressurization technology making the volume big with wide coverage

Dual Wireless Speakers

User Manual

Warranty Card

IN THE BOX

Connect to other Sound Pro NDS-1253 True Wireless Speakers (TWS) allowing you to sync

- Start the party off right with multiple lighting effects and schemes

- Release your inner Rock star with friends and family thanks to the included wired microphone and 2 microphone input

speakers from each other without any wires

- High-power speaker produces peerless soft, clear, and dynamic sound

Wired Microphone

## 5. **WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.


- Dual 12" Full-frequency speakers pump out room-filling, high-quality audio with ease
- Bluetooth-enabled devices in high-quality audio The wide blade or the third prong is intended to provide security. If the provided plug does not fit
- 9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs
- Disconnect the unit during lightning storms or when long period is to remain unused.
  - - Enjoy media from removable storage devices, such as USB flash drives and TF cards via the
- and must be corrected immediately. Use only suitable equipment for the loading conditions of

  - Buit-in wheels allow you to move the speaker anywhere easily


## SPEAKER OVERVIEW (Cont.) SPEAKER OVERVIEW CHI THE THE THE CHIEF




## **GENERAL FUNCTIONS**

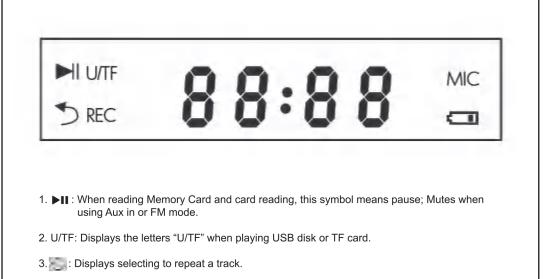

DISPLAY DESCRIPTION

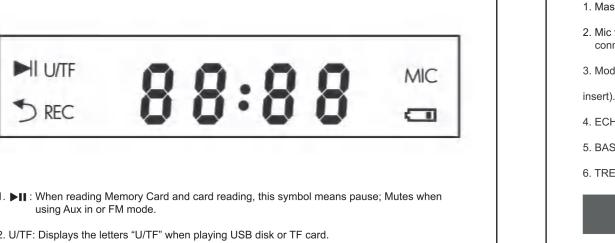

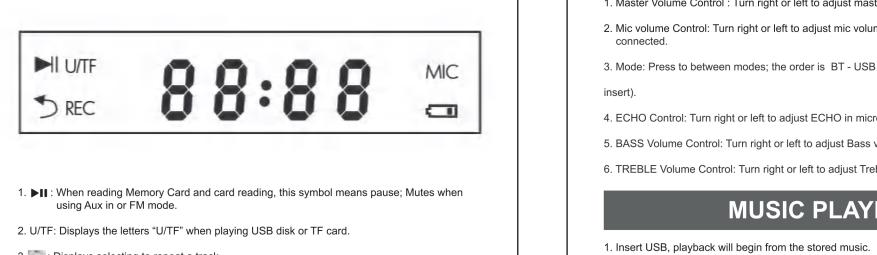

# 10 MASTER VOLUME 20.AC 100-240V

8.PLAY / PAUSE


9.Next Tracking / TWS

3. MUSIC / KARAOKE

2. Insert TF Card, playback will begin from the stored music.

BLUETOOTH® OPERATION

3. Play/Pause Break: Press to play/pause music playback.

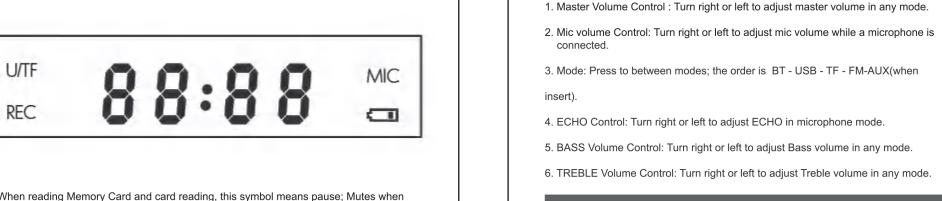

5. REC: In the mode of TF / USB , press and hold the RECORD button when a Microphone is inserted. REC displays.

7. Displays when in low battery mode. Volume drops to 30% while in low battery.

4. MIC: Displays when a wired or wireless microphone is connected.

6. 88:88: Displays "AUX" when in Aux Mode.

- Digital display of current channel in the FM radio mode. Displays the track number of music when playing from a TF Card or U disk.
  - 1. Press mode button to enter Bluetooth mode, the display shows "BLUE". Using the native
    - 2. Music playing: Press Play/Pause and Previous/Next Song Key to control bluetooth playback 3. Manual matching: When you want to disconnect Bluetooth® connection, press and hold

- The Wireless speaker allows you to enjoy your favorite audio played over multiple speakers at the The Wireless speaker allows you to enjoy your favorite audio played from external storage same time thanks to the included TWS function. To use the TWS function, follow these steps:
- 1. Please purchase 2 Bluetooth® speakers if you want to use TWS function. 1. Insert the USB into the USB port.
- 2. Turn on one speaker, connect the speaker via Bluetooth to your device. You should see "soundpro NDS-1253" in the list of Bluetooth devices.

To connect TWS again, repeat the steps above.

2. Press "LIGHT" to toggle ON / OFF light.

3. Turn on the second speaker, then push and hold the button with the TWS marking directly below the Mode button. You will hear a short "beep" sound, the devices are connected in TWS

mode. You can now enjoy True Wireless Stereo (TWS)\* for Stereo Audio Experience

TWS FUNCTION

to USB mode and begin playing Mp3 audio files from the USB flash drive. You can also . To disconnect the speaker from TWS, push the bottom TWS button on the first speaker. You will enter USB mode by pressing the "MODE" button to cycle through modes. hear a short "beep" sound, the devices are disconnected from TWS mode.

- - 1. Light will come on automatically upon powering on the speaker.
- 4. Previous/Next Song Key: Press to change to the Previous/Next Song
- 3. Press and hold the "Light" button to switch on the lighting effects. 2. Press the "Play/Pause" button to automatically search for available FM channels.
- controls on your Bluetooth device, search for available devices and select "SOUNDPRO NDS-1253" 1. Charging is needed when the battery symbol is empty and flashing, the product will go into low to connect. Speaker will relay an audio message of "Connected" once paired successfully. battery mode to self-protect.
  - 2. In low battery mode, the volume will drop to 30%. Please use our UL Power Cable to charge.

3. Red light on when charging and off when charging is finished.

Note: Please charge for more than 12H before intial use. Please keep battery with electric if the battery doesn't work for long time, or the battery will become damaged.

fast forwards or backwards.

follow these steps:

devices, such as USB flash drives. To use do so, follow these steps:

The Wireless speaker allows you to enjoy your favorite local FM radio stations. To use do so,

3. Once the scan is complete, you can use the -/ I or +/ ▶▶ button to search the previ-

ous or next stations. Press and hold the -/ I or +/ bbl button for fast forwards or

NOTE: During the station scan, the Bluetooth speakers will pre-record all found stations into

memory. The scan procedure will take several minutes to complete and should not be

1. Press the MODE button to change to FM radio mode.

ISB MODE

- 3. Press the "Play/Pause" button to start or stop playback. Briefly press the -/ ◄◄ or +/ ▶▶■
- NOTE: When a USB flash drive is inserted into the USB port, the unit will automatically switch NOTE: When an external media device is connected via the AUX input, the speaker will auto-

## **AUX INPUT**

don't have Bluetooth® capabilities via the auxiliary input. To use do so, follow these steps:

1. Insert an auxiliary audio cable (not included) into the AUX input on the speaker.

- button to skip to the previous or next song. Press and hold the -/ I ◀ or +/ ▶▶ button for
  - fast forwards and backwards.
  - Radio Tuner

- The Wireless speaker allows you to enjoy your favorite audio played from external devices th
- 2. Plug the other end of the audio cable into the desired external media device's AUX inpur 2. Press the "Play/Pause" button to start or stop playback. Briefly press the -/ I or +/
  - button to skip to the previous or next song. Press and hold the -/ ◄◄ or +/ ▶▶ button for
  - matically switch to AUX mode and begin playing Mp3 audio files from the connected device. You can also enter AUX mode by pressing the "MODE" button to cycle through

## **SPECIFICATIONS**

Wireless Source

Feature Function

PMPO Output

Media Inputs

Other Inputs

Power Source

Battery Type

Accessories Included

Audio Format Support

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept

USB Port. TF Card. AUX

ulti-Color Disco Lights

12V, 4500 mAh Rechargeable Battery

Built-in Lead-Acid Rechargeable

n. 2 Hours (Max Volume)

Jp to 3 Hours (Play time will vary depending

on the volume level and type of media played)

ote Control, User Manual, Wire

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provid reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful intereference to radio or television reception, which can be

interference by one or more of the following measures:

any interference received, including that may cause undesired operation.

FCC NOTICE

determined by turning the equipment off and on, the user is encouraged to try to correct the

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

## SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up-to-the-minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

> Naxa Technical Support 2320 East 49th St. Vernon, CA 90058

(866) 411-6292 http://www.naxa.com/supportcenter