





Portable Dual 4" Bluetooth®
Party Speakers with
Multi-Color Circular Lights
NDS-4506



Instruction Manual

Please read carefully before use and keep for future reference

WARNING

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Guard this manual.
3. Obey all alerts.
4. Follow all instructions.
5. **WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture. Do not store and operate this product near liquid.
6. Clean only with dry cloth.
7. Not store and not operate this product near any heat sources such as radiators and heat registers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a well ventilated place.
8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two blades being wider than the other. A grounding plug has two blades plus a round pin to ground. The wide blade or the third prong is intended to provide security. If the provided plug does not fit into your outlet, consult an electrician to replace the outlet.
9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs and the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the plug and do not pull the cord.
10. Disconnect the unit during lightning storms or when long period is to remain unused.
11. Keep this unit off when connecting all the devices connected to it.
12. After finishing the installation and connections, connect all your equipment with low volume level. Once all devices are connected, slowly increase the volume or level controls to achieve the proper position.
13. Before placement, installation, assembly or suspending any product, inspect all equipment, suspension, cabinets, transducers, brackets and associated equipment. Any missing component, corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrangement of the installation significantly. Any of these conditions can reduce the security of the facility and must be corrected immediately. Use only suitable equipment for the loading conditions of the installation and that any possibility of reducing term, unexpected overload, never exceed the capacity of the material or equipment.
14. Consult a licensed professional to install the equipment and make sure that all local, regional and national regulations related to security are understood and adhered to.
15. All services should be performed by qualified professionals. Servicing is required when the apparatus has been damaged in any way, as if having the power cord or its damaged connector, or if the machine breaks contact with liquid or if any object is inserted in the unit or if the unit is exposed to rain or moisture, or if the unit does not operate normally, or has been dropped.

CHARGE THE BATTERY FULLY BEFORE FIRST USE TO OPTIMIZE ITS LIFETIME PERFORMANCE.

IN THE BOX


Upon opening your new dual wireless speakers, first check to ensure all of the following contents are present:

- Wireless Speaker
- Charging Cable
- User Manual

KEY FEATURES

- Dual 4" Full-frequency speakers pump out room-filling, high-quality audio with ease
- Bluetooth® functionality allows you to wirelessly stream all your favorite music content from Bluetooth-enabled devices in high-quality audio
- Start the party off right with multiple lighting effects and schemes that will leave a lasting impression on all your friends and family
- Live out your inner rockstar dreams during a fun time of karaoke with friends and family thanks to the MIC input and included wired microphone.
- Lighting effects that dance along with the music and make you want to dance along too
- Connect to other speaker True Wireless Speakers (TWS) allowing you to sync speakers from each other without any wires
- Ensure the fun never has to stop by keeping the speaker at a full charge with the included USB charging cable
- Built-in TF card slot and USB port gives you with the option of playing all your favorite audio files with removable storage devices, such as TF memory cards and USB flash drives
- Manually connect to external media devices via the 3.5mm auxiliary input
- Tune in on all your favorite local radio stations thanks to the FM tuner
- Accessories included: User Manual, and USB charging cable

PRODUCT OVERVIEW

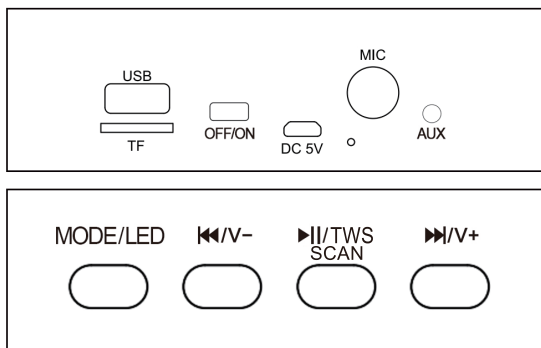

1. DC 5V: Plug the Micro USB cable to the speaker and connect other end USB port to the power source (DC 5V).
2. USB slot: Used to read the Mp3 files on a USB flash drive.
3. TF slot: Used to read the Mp3 files on a TF card.
4. **▶/TWS SCAN** : Under USB/TF/Bluetooth mode, press to play and pause. Under Bluetooth mode press twice the button switch the TWS function.Under FM mode,Long Press this button to automatically search for available FM channels.
5. MODE/LED: To change mode during USB/TF, Bluetooth, FM and Aux-in mode. Press and hold to switch on and off the light
6. **◀/V-**: USB/TF/Bluetooth/FM mode: press to move to previous FM channel / track. Press and hold to decrease the volume.
7. **▶/V+**: USB/TF/Bluetooth/FM mode: press to move to next FM channel / track. Press and hold to increase the volume.
8. MIC: Connect with the MIC when you need.
9. OFF/ON: Operate power-on and power-off
10. AUX Slot: Connect with the MIC when you need.

PAIRING A BLUETOOTH® DEVICE

Use Bluetooth® mode to stream music from a Bluetooth® enabled player (e.g., smartphone or tablet device). A device must be paired with the unit before using them together for the first time.

To pair a Bluetooth® enabled device with the Speaker, follow these steps:

1. Make sure Bluetooth® is enabled on your device and that it is next to the unit before attempting to pair it.
2. Turn on the Speaker. Use the Mode button to switch to Bluetooth® mode.
3. Use your device to search for nearby Bluetooth devices. The Speaker will be listed as “Sound Pro NDS-4506”. (This function is usually in the Bluetooth® settings menu; refer to your device’s instruction manual to learn more.)
4. Select “Sound Pro NDS-4506” from the list of found/available devices. The Speaker will make a confirmation tone upon successful connection.

You can now start playback on your connected device to begin streaming music to the speaker.

TWS FUNCTION

The Wireless speaker allows you to enjoy your favorite audio played over multiple speakers at the same time thanks to the included TWS function. To use the TWS function, follow these steps:

1. Please purchase 2 Bluetooth speaker if you want to use TWS function.
2. Turn on one speaker, connect the speaker via Bluetooth to your device. You should see “Sound Pro NDS-4506” in the list over Bluetooth devices.
3. Turn on the second speaker, then press twice the button with the TWS marking . You will hear a tone sound, the devices are connected in TWS mode. You can now enjoy True Wireless Stereo (TWS)* for Stereo Audio Experience
4. To disconnect the speaker from TWS, press and hold the TWS button on the first speaker.

NOTE: You will hear a tone sound, the devices are disconnected from TWS mode. To connect TWS again repeat the steps above.

TF MODE

The Wireless speaker allows you to enjoy your favorite audio played from external storage devices, such as TF cards. To use do so, follow these steps:

1. Insert the TF card into the TF card slot.
2. Press the “▶|/TWS” button to start or stop playback. Briefly press the ◀◀|V/- or ▶▶|V/+ button to skip to the previous or next song. Press and hold the ◀◀|V/- or ▶▶|V/+ button to decrease or increase the volume.

NOTE: When a TF card is inserted into the TF card slot, the unit will automatically switch to TF mode and begin playing Mp3 audio files from the inserted TF card. You can also enter TF mode by pressing the “MODE” button to cycle through modes.

USB MODE

The Wireless speaker allows you to enjoy your favorite audio played from external storage devices, such as USB flash drives. To use do so, follow these steps:

1. Insert the USB into the USB port.
2. Press the “▶|/TWS” button to start or stop playback. Briefly press the ◀◀|V/- or ▶▶|V/+ button to skip to the previous or next song. Press and hold the ◀◀|V/- or ▶▶|V/+ button to decrease or increase the volume.

NOTE: When a USB flash drive is inserted into the USB port, the unit will automatically switch to USB mode and begin playing Mp3 audio files from the inserted USB flash drive. You can also enter USB mode by pressing the “MODE” button to cycle through modes.

FM RADIO

The Wireless speaker allows you to enjoy your favorite local FM radio stations. To use do so, follow these steps:

1. Press the MODE button to change to FM radio mode.
2. Long Press the “▶|/TWS”
SCAN button to automatically search for available FM channels.
3. Once the scan is complete, you can use the ◀◀/V- or ▶▶/V+ button to search the previous or next stations. Press and hold the ◀◀/V- or ▶▶/V+ button to decrease or increase the volume.

NOTE: During the station scan, the Bluetooth speakers will pre-record all found stations into memory. The scan procedure will take several minutes to complete and should not be interrupted.

AUX INPUT

The Wireless speaker allows you to enjoy your favorite audio played from external devices that don't have Bluetooth® capabilities via the auxiliary input. To use do so, follow these steps:

1. Insert an auxiliary audio cable (not included) into the AUX input on the speaker.
2. Plug the other end of the audio cable into the desired external media device's AUX input.
3. Press the “▶|/TWS”
SCAN button to start or stop playback.

NOTE: When an external media device is connected via the AUX input, the speaker will automatically switch to AUX mode and begin playing Mp3 audio files from the connected device. You can also enter AUX mode by pressing the “MODE” button to cycle through modes. While using AUX-In function, except volume function, all functions such as playing next/ previous track can be controlled only through your source device

BATTERY

1. When in low power mode that requires charging, speaker volume will automatically fall to about 70% of the main volume.
2. Use DC 5V adaptor for charging, the charging indicator light will turn on when the product is being charged.
3. Upon reaching a full charge, the charging indicator light turns off.

NOTE: If the speaker is not used for a prolonged period of time, charge speaker more than 12 hours; otherwise, it will cause damage to the battery.

SPECIFICATIONS

Speakers	4" x 2
Wireless Source	Bluetooth®, 5.0
Feature Function	TWS
PMPO Output	1000Wx2
Media Inputs	USB Port, TF Card Slot, AUX-In Port
Radio Tuner	FM
Light Effects	Multi-Color LED
Power Source	1200mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours (Play time will vary depending on the volume level and type of media played)
Accessories Included	User Manual, Charging Cable

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up-to-the-minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

Naxa Technical Support

2320 East 49th St.
Vernon, CA 90058

(866) 411-6292

<http://www.naxa.com/supportcenter/>