

Gaming True Wireless Bluetooth® Earbuds with Charging Case Model No.:NG-1501



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Description of parts:



- Earphone base and charging case
- Earphone base LED indicator.
- Earphone base LED indicator.
 Earphone touch panel, touch it to control all functions of the earphone
- iunctions of the earphon
- Earphone LED indicator
 Earphone charging port
- 6. Type-C port

Specifications:

Battery base: Li-Po 300mAh

Battery of earphones: Li-Po 30mAh*2
Bluetooth compatible version: 5.0

Working range: 10m

charges in the case

Charging time for the case:1-2 hours

Up to 4 hrs of listening time on one charge

Up to 4 hrs of listening time on one charge More than 10 hrs of listening with multiple additional

Operation:

- 1- Power On and pairing: Take out earphone from charging base-the earphones will power on and paired automatically. Turn on your mobile Bluetooth, search for the device "NG-1501", and click it. You will hear the tone "du", meaning the earphone connected with your mobile. When earphone is turned off, press and hold the earphone to turn it on.
- 2- Power off: Put earphone into charging base; the earphone will power off and begin charging automatically. Or press and hold the earphone to turn it off.
- 3- Double click left earphone to go back previous song. Double click right earphone to skip to next song.
- 4- Press Left earphone and hold 2 seconds to decrease volume. Press right earphone and hold 2 seconds to increase volume.
- 5- Pause/Play:Single click any one earphone to pause or play music.
- 6- Double click any one earphone to pick up or hang up the phone calls.
- 7- Press and hold any one earphone 2 seconds to reject the phone

- $\mbox{8-}$ Earphone will power off after 3 minutes disconnected from any device.
- 9- Gaming mode: triple-click any of the earphone to switch to Gaming mode. Operate as the same way to switch back to music mode. Gaming mode with low latency for
- 10- Press and hold for 5 secs to turn off

I FD indicator:

mobile gaming.

Power on: both earphones flash green lights
Power off: both earphone green lights turn off
Earphone Pairing: Both earphones quick flash green
lights, once two earphone be paired, one earphone keep
quick flash green lights, one earphone flash green lights every
2 seconds When earphones connected with mobile, both
earphones flash green lights every 5 seconds.
Gaming mode: both earphones flash green lights slowly
once every 3 seconds

Music mode: both earphones flash green lights quickly once every 3 seconds

Earphone base charging: The base both side flash green lights, when the base is fully charged, both side green indicator light solid on.

When earphone to be charging in base:

The base both side indicator light on green, when the earphone is fully charged, both side green Indicator turns off.

Earphone Charging: Earphone lights on green. Lights turn off when earphones is fully charged.

Charging:

Put your earphone into charging base and make sure

earphone be well connected with the charging port to get your earphones to be charged.

When you're charging the battery low, insert the type C cable we provided into earphone type C port. Connect it with a safe adapter or USB output for charging your TWS earphone and earphone base.

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Don't expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Don't expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- *Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- •Don't let the device fall on the floor. The internal circuit might get damaged
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To make a warranty claim, do not return this product to the store. Please email support@naxa.com or call 1-866-411-6292.