 




32" CLASS LED HD TV

MODEL NO.: NT-3206

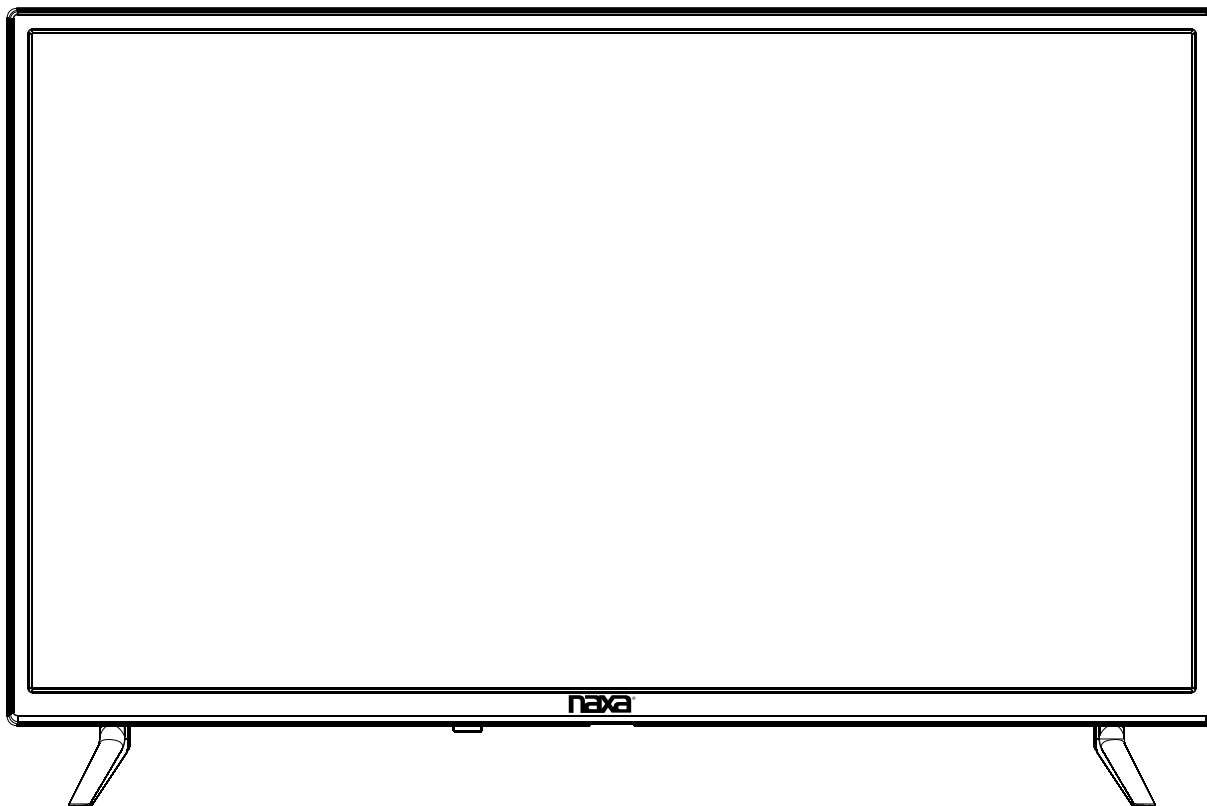

Instruction Manual

PLEASE READ CAREFULLY BEFORE USE

Safety Information



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



Caution: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the TV.

- WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- CAUTION:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE WITH THE FCC RULES COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

SAFETY WARNING

Before operating the unit, please read through this manual.

PLACEMENT

- Do not place the unit on an unstable cart, stand, tripod, bracket, shelf, or other base.
- Do not expose the unit to direct sunlight or other heat sources.
- Do not handle liquids near or on the unit.
- Never spill liquid of any kind on the unit.
- Do not put the unit near appliances that create magnetic fields.
- Do not put heavy objects on top of the unit.

TEMPERATURE

- Do not place the unit near or over a radiator or other heat source.
- If your unit is suddenly moved from a cold to a warm location, unplug the power cord for at least two hours so that moisture that may have formed inside the unit can dry completely.

HUMIDITY

- Do not expose the unit to rain, damp areas, or place near water.
- Ensure the unit is placed indoors in a dry, cool location.

VENTILATION

- Keep the ventilation openings on the unit clear of any obstructions.

WARNING (Only applicable to models over 7kg)

Never place the unit in an unstable location. The unit may fall, causing serious injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions, such as:

- Using cabinets or stand recommended by manufacturer of the unit.
- Only using furniture that can safely support the unit.
- Ensuring the unit is not overhanging the edge of the supporting furniture.
- Not placing the unit on tall furniture (e.g., cupboards or bookcases) without anchoring both the furniture and unit to a suitable support.
- Not placing cloth or other material between the unit and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If you are retaining and/or relocating an existing television set, the same considerations should be applied.

Important Safety Precautions

1. Read and keep these instructions.
2. Heed all warnings.
3. Follow all instructions.
4. Do not use this apparatus near water.
5. Clean only with a dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, amplifiers, or other equipment that produces heat.
8. Do not circumvent the safety function of using the polarized or grounding type power plug. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the outlet. Do not modify the plug to accommodate your outlet.
9. Protect the power cord from being bent or pinched, especially near the plug or exit from the unit.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug the device during lightning storms or when unused for long periods of time.
12. Only use with the cart, tripod, bracket, or table specified by the manufacturer or sold with the device. When the TV is placed on a cart, take caution when moving the cart to avoid injury from tipping.



CAUTION

13. To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.
14. The main plug is used to disconnect the device. The disconnected device will not operate while unplugged.
15. The device should be located near the electrical socket and easily accessible.
16. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
17. The device shall not be exposed to dripping, splashing, or other moisture. Objects filled with liquid, such as vases or plants shall not be placed on or near the device.
18. Wall or Ceiling Mounting – the device should be mounted to a wall or ceiling only as recommended by the manufacturer. Do not hang the device at an angle.
19. Never place the TV, remote control, or batteries in direct sunlight, near an open flame, or other heat source. To prevent fire, keep candles or other flames away from the TV, remote control, and batteries at all times.



20. The USB terminal should be loaded with a maximum of 0.5A under normal operation.
21. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical grounding.
22. The device should not be used in temperatures over 45°C.
23. The device should not be used above an altitude of 2,000 meters.

TV Buttons and Terminal Interface

TV Buttons

Note: The key instructions are subject to below.










Display/Hide key icon: When there is no button icon popping up, press the key, the key icon will pop up like the picture shown above. The key icon will automatically turn off after 5 seconds of inactivity.

Icon Selection: Short press the button, move the loop to the right, select the icon.

Icon Function Selection: Long press the key to achieve the function of the selected icon.





Icon Description:

-  **Power Off/On Icon:** Corresponding to the "Power" button on the remote.
-  **Menu Icon:** Corresponding to the "Menu" button on the remote.
-  **Source Icon:** Corresponding to the "Source" button on the remote.
-  **Channel Up Icon:** Corresponding to the "Ch+" button on the remote.
-  **Channel Down Icon:** Corresponding to the "Ch-" button on the remote.
-  **Volume Up Icon:** Corresponding to the "Vol+" button on the remote.
-  **Volume Down Icon:** Corresponding to the "Vol-" button on the remote.

External Device Connection Diagram


Terminal Interface

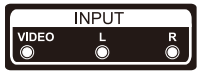Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.


	AV Input External AV Signal Input and Relevant Right/Left Sound Channel		USB Input Connect a device here to play its media files or to record programs via the PVR function.
	HDMI Input Digital signal input from HDMI video connector.		Optical Digital Audio Output.



Please discontinue use of any device before connecting, disconnecting, or adjusting the HDMI or USB ports. Failure to do so can result in an electrostatic discharge that could cause damage to the TV and/or its operation.

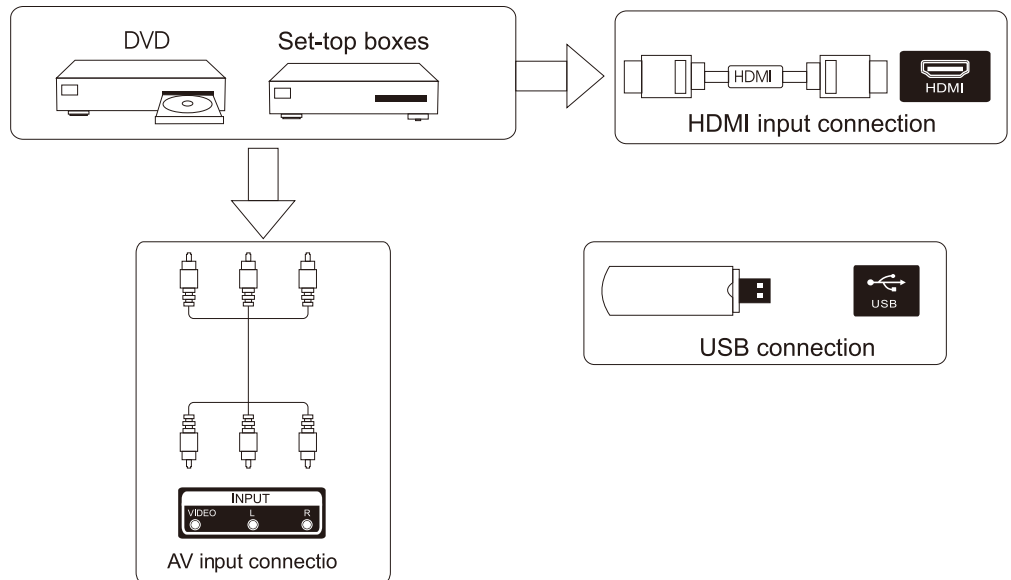

Install and Connect TV

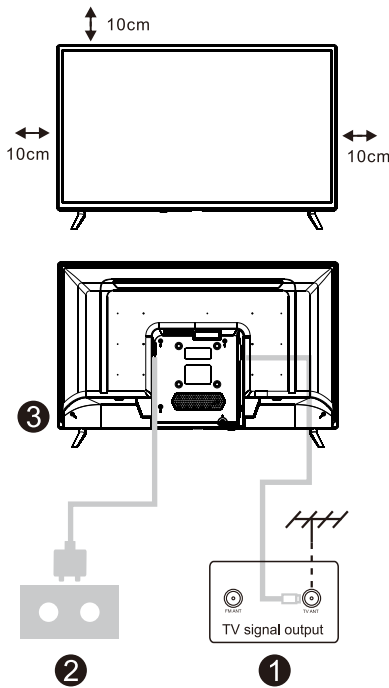 

Place your TV

Place your TV on a stable base that can support the weight of the TV. For safety reasons, do not place the TV near liquids or heat sources. Do not place the TV in a location where the ventilation ports will be blocked.

Connect Antenna and Power

1. Connect the cable from the antenna to the TV ANT port on the TV.
2. Plug the power cable into an electrical socket.


Turn on TV

3. When the TV is properly plugged in, it will display a red light indicating it is in standby mode. Press the power button or the remote control to the TV on/off.


TV Stand Installation Instructions

The TV is packaged separate from the TV stand. To setup the TV stand, complete the installation according to the instructions below:

1. Unplug the TV from the electrical socket.
2. Place a soft cloth and lay the TV face down on the cloth to prevent the TV from being scratched.
3. Place the base as seen in the figure below so the screw holes of the base align with the screw holes of the TV.
4. Insert the screws into the holes on the base and tighten them. Note: To ensure the TV is stable, tighten all screws. Some TV models use a "snap-in" type base which is installed by snapping the base into the groove instead of screws.

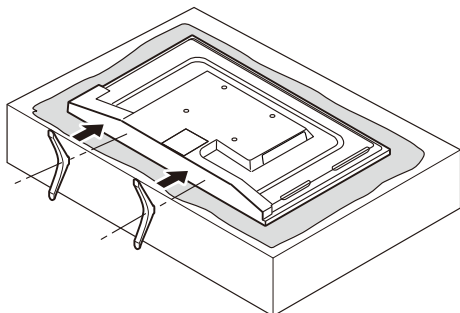


Please take note of the base direction:

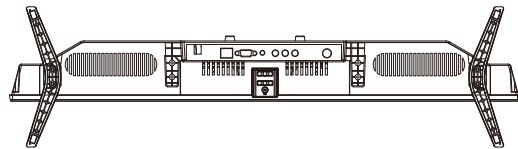

(Bottom View - Screen facing down)

This illustration is for reference only.

Suggestion: To make the base installation more convenient and to avoid scratching or damaging the TV, it is recommended you use a PH2 type screwdriver:

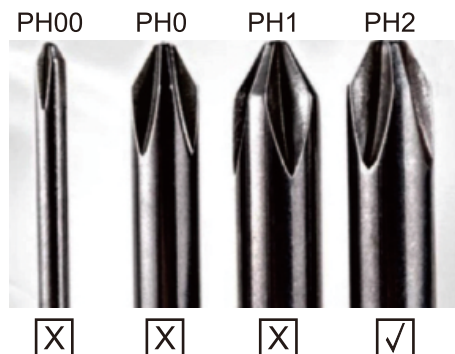

Remote Control


POWER	Turn the TV on/off.
MUTE	Press Mute the volume. Press again or press the VOL+ or VOL- to unmute.
0-9	Press the 0-9 buttons to select a TV channel directly when you are watching TV. The channel will change after a few seconds.
-	Press “-” to enter a program number for multiple program channels (e.g., 2-1) or return to the previous channel.
MENU	Allows you to navigate the on-screen menus.
SOURCE	Press to cycle through the following input sources: TV → AV → HDMI1 → HDMI2
Directional Pad (▲▼◀▶/ENTER)	Allows you to navigate on-screen menus and adjust system settings to your preference.
EXIT	Exit from the menu or sub-menu and cancel the function in progress (if possible).
DISPLAY	Press to display the current source and channel information.
MTS	Press to select the audio mode. You can select Stereo, Mono, or SAP (Second Audio Program).
VOL+ / VOL-	Press to increase or decrease the volume level.
CH+ / CH-	Press to move the channel number up or down.
EPG	Press to display the Electronic Program Guide (EPG). The EPG allows you to browse and choose channels.
FAV	Add or delete the current channel as a favorite channel.
FAV+	Move to the next saved favorite channel.
FAV-	Move to the previous saved favorite channel.
CC	Press to display closed captions.
ZOOM	Press to select zoom display mode.
STOP	Press to STOP while in USB mode.
PLAY/PAUSE	Press to Play/Pause or start recording while in the USB mode.
PREV	Press to skip backwards while in USB mode.
NEXT	Press to skip forward while in USB mode.
▶▶	Press to fast forward while in PVR or Media Player mode.
◀◀	Press to fast reverse while in PVR or Media Player mode.
RGYC Color Buttons	Used for various functions, menu selections, and use of the MHEG-5 in the DVB menu.
SLEEP	Select the amount of time before the TV automatically turns off.

Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and – ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Slid ethe lid closed until you hear it click into place.

Using the Remote Control

Unless stated otherwise, the remote control can operate all the features of the TV. Always point the remote control directly at the remote sensor on the front of the TV.

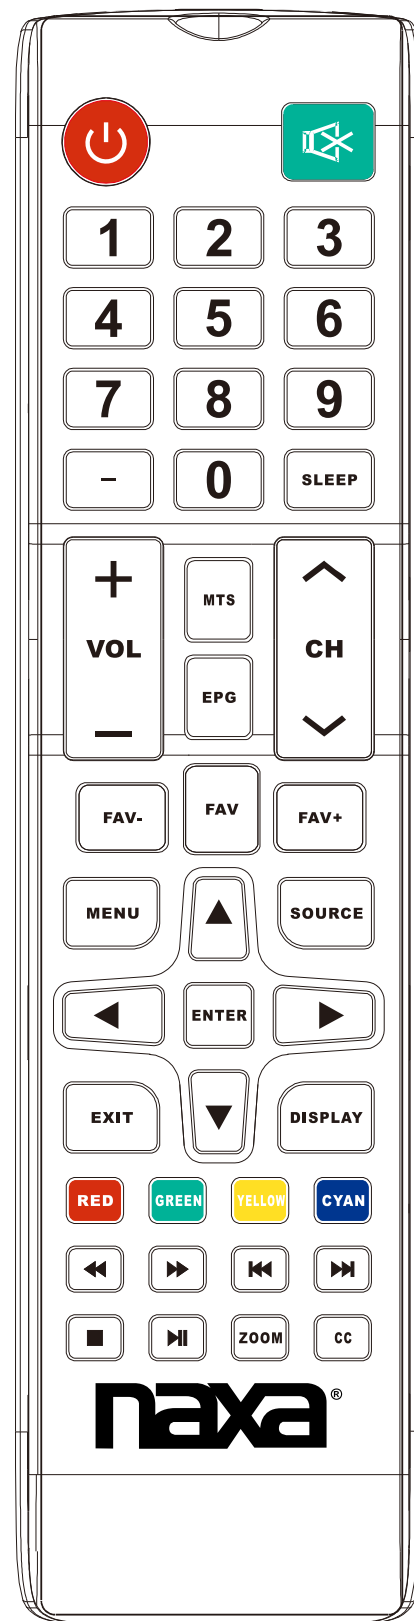

Help/Troubleshooting

Issue	Resolution
No Power	<ul style="list-style-type: none"> • Check if the AC cord of the TV is correctly plugged in. If there's still no power, disconnect the plug and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not properly received	<ul style="list-style-type: none"> • Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image through manual operation: consult instructions for your vernier regulator or adjust the direction of the external antenna. • If you use an indoor antenna, under certain circumstances signal reception may be poor. Adjust the direction or location of the antenna to improve reception. If this does not improve reception, you may need to switch to an external antenna.
No picture	<ul style="list-style-type: none"> • Check if the antenna is properly connected to the back of the TV. • View other channels to see if the problem is with a single channel.
Video appears with no audio	<ul style="list-style-type: none"> • Ensure the volume is raised and the TV is not muted.
Audio is present with no or discolored video	<ul style="list-style-type: none"> • Adjust the contrast or brightness settings.
Static noise affects video and audio quality	<ul style="list-style-type: none"> • Check if the antenna is properly connected to the back of the TV.
Broken lines on screen	<ul style="list-style-type: none"> • Electrical appliances such as hair dryers, vacuums, etc. may be interfering with your TV set. Switch these appliances off.
Remote doesn't work	<ul style="list-style-type: none"> • Make sure the plastic bag that came with the remote control is removed. • Use the remote closer to the TV. • Ensure the batteries are inserted into the remote correctly. • TV will automatically go into Standby mode in certain circumstances.
No video (PC Mode)	<ul style="list-style-type: none"> • Check if the cable is correctly connected to the VGA port or if the cable is bent.
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> • Enter the main menu and adjust the vertical placement to eliminate vertical lines.
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> • Enter the main menu and adjust the horizontal placement to eliminate horizontal lines.
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> • Adjust the rightness or contrast settings.
No response from the PC	<ul style="list-style-type: none"> • Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> • Make sure the cable is properly connected and meets RCA cable quality standards.
Other problems	<ul style="list-style-type: none"> • Unplug the power cable and wait 30 seconds. Reconnect the TV to the electric socket. If the problem still persists, do not attempt to repair the TV by yourself. Contact the service center.

Do not leave your TV displaying a static image (e.g., paused video or menu screen) for an extended period of time. Doing so will damage the display and may cause image "burn-in."

Features & Specifications


Screen Size:	32" (Viewable screen size* 31.5" Diag.)
Screen Resolution:	1366 x 768
Screen Contrast Ratio:	3000: 1
Frame Rate:	60Hz
Screen Colors:	16.7m
Screen Brightness:	180 cd/m2 (+/-10%)
Backlight Type:	LED
Aspect Ratio:	16:9
Viewing Angle:	176 (H) / 176 (V)
Functions:	EPG, HDMI, HDCP
Input Sources:	HDMI x 2, AV IN x 1, RF Antenna x 1, USB x 2
Output:	Optical Digital Audio x 1
USB:	Supports JPEG image/MP3 audio files
VESA Mount:	100mm x 100mm Wall Mount Compatible
Power Source:	AC 100-240V
Life Length:	30,000 Hrs
Power Draw (Operating):	56W
Power Draw (Standby):	<0.5W

FEATURES

- 32" HD TV (720p) is perfect for all your entertainment needs
- Native 720p HD (1366 x 768) Resolution
- Connect to your computer via HDMI input to view online content in high-quality resolution on LED TV
- Built-in Digital ATSC TV tuner that receives free over-the-air HD TV stations
- Play music and view photo files from a USB flash drive
- Inputs: HDMI x 2, AV IN, RF Antenna, USB x 2
- Outputs: Optical Digital Audio
- VESA 100mm x 100mm Wall Mount Compatible
- Power: AC 100-240V
- Accessories included: Remote control, TV stand, User manual

How to turn the Text-to-Speech (TTS) voice guide on or off?

- Press "MENU" key on the remote control
- Select "Setup"
- Select "Voice Guide" and turn it on or off.

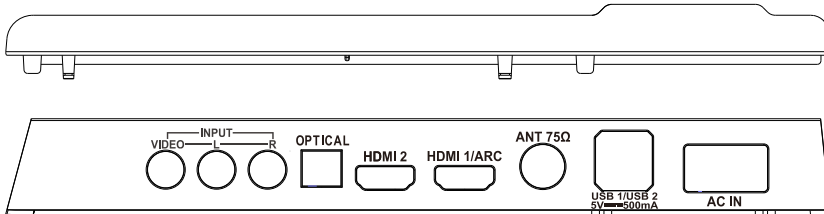

Wall-mounted screw: 22-24inch M4, 28-70inch M6, 75inch M8

Note: don't hang at an angle to avoid the risk of falling off.

FCC Declaration or Conformity Compliance Statement (Part 15):

This device complies with Part 15 of the FCC rule. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The party responsible for compliance to these rules is:

NAXA ELECTRONICS, INC.
2320 East 49th St.
Vernon, CA 90058
(323) 583-8883

INDICATIONS ON THE ENVIRONMENT

- At the end of the useful life of this product, it should not be disposed of in household waste to avoid damage to the environment, if necessary, go to the solid waste center in your area. Proper separation of waste helps to avoid possible negative effects.
- negative effects on human health and the environment and promotes the recycling of the materials that make up the product.
- Inquire in your locality about the organizations that dispose of this type of waste.

