 




50" 4K UHD Widescreen LED TV

MODEL NO.: NT-5001K

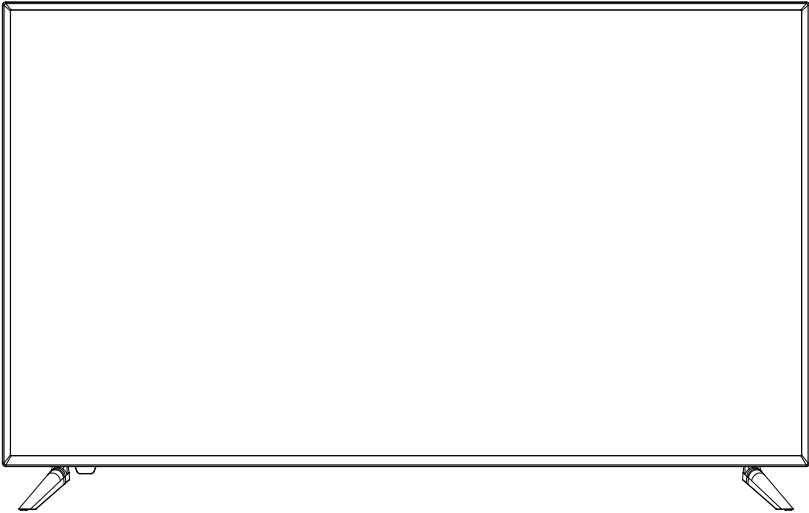

Instruction Manual

PLEASE READ CAREFULLY BEFORE USE

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical support.

NAXA Technical Support
2320 East 49th St.
Vernon, CA 90058
Tel:(323)-583-8883
http://www.naxa.com/naxa_support/
Made in China

Warning

To prevent fire and/or electric shock, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure. Do not expose this appliance to rain or moisture.



Important Safety Instructions

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Please, unplug the TV power cord when the following conditions occur:

-When there is a thunderstorm (Please, pull out the power cord and antenna).

-When cleaning the TV set.

-When the TV set is not used for a long time.

Do not use corrosive dehydrative when cleaning the TV set.

Do not put the TV set under direct sunlight or near heat.

Do not put a heat source, such as a candle or heater, on top of or near the TV set.

Leave plenty of space (at least 10cm) around the TV set for ventilation.

Place the TV set away from where it can be ruined by rain or water (such as near a window).

Don't put a container with liquid (such as a vase) on top of the TV set.

Do not move the TV set when the power is on.

Do not touch, push or scratch the surface of the TV set with hard materials or items.

When TV surfaces are dirty, please use a wet cotton cloth or soft cloth with non-corrosive cleaners to clean it carefully. Don't use acetone, toluene or alcohol to clean the TV set.

Be aware and careful of moisture, which can damage inner electronic components.

When condensed moisture is present, the TV screen may appear blurry or spotty.

It is recommended that a technician install the TV set on a wall, if such placement is desired.

An incorrect wall installation will be unsafe and hazardous.

Do not let children climb on or play around the TV set to avoid falls, collisions, damages and injuries.

Do not hit the TV panel with hard objects to prevent damages.

Do not cover the TV set with blankets or other objects when it is connected to a power source to prevent overheating and fire.

 
Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Mains plug is used as disconnect device from the mains, the disconnect device shall remain readily operate.

Important Safety Precautions



Safety

Please, immediately pull out the AC power plug if there is an abnormal sound or smell or the LED TV has sound but no picture, and contact after sales support.

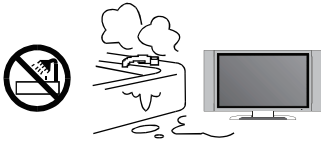


The LED TV should be kept free from rain, moisture and dust to prevent electrical shock and short circuits. Do not cover the ventilation openings with table clothes, curtains, newspapers, etc.

  The LED TV should be kept from high temperature heating sources or direct sunlight. Good ventilation is required. Allow 10 cm. between the LED TV and other appliances or built-in cabinet walls.

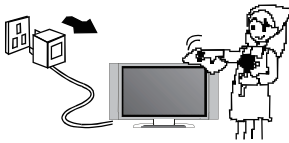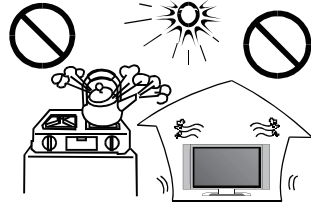


When you wipe the front cabinet, please make sure the power plug is pulled out and use a soft, dry, lint-free cloth and handle it with care. Do not repeatedly wipe the panel, nor scrape, tap or strike the panel with a hard object.

 Do not wipe the LED TV with any petrol, chemical or alcohol based solvents as it will lead to product damage of the panel and cabinet.

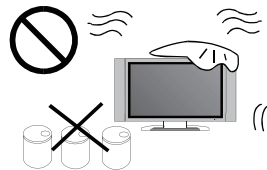


Important Safety Precautions

 Safety

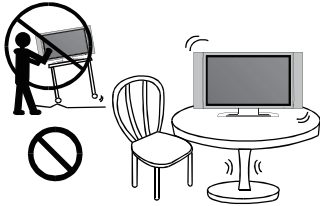


Do not place the LED TV on an unstable surface.

 Do not place the power cord or other cables across a walkway in case it is trampled on. Do not overload the power cord or power socket. When the power plug is used to disconnect and connect the device, it should easily fit into the power source.

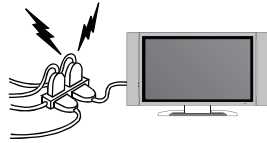

Do not disassemble the back cover, as it contains high voltages inside and will cause electric shock. Only qualified professionals should conduct internal adjustments, maintenance, and checks.

 The TV set should not be subjected to water droplets, vapor, or splash. This equipment should not be placed on objects filled with liquids. Do not place flame sources, such as lit candles, on or near the LED TV. Please, pull out the power plug and contact after sales support if there are abnormal objects or water in the TV.

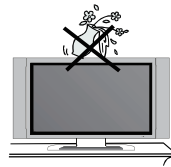

Pull out the power cord and antenna cable during electrical storms so the LED TV is not damaged by electrical surges. Keep all people away from the antenna cable during electrical storms.

Table of Contents

Introduction.....	2-3
Features.....	2
Specifications.....	3
Accessories.....	4
General Description.....	4-7
Overview of front & Keyboard.....	4
Overview of back panel.....	5
Overview of remote control.....	6
Installing Batteries in the remote control.....	7
External Connection.....	7-12
Antenna connection.....	7
Connecting a Camcorder.....	8
Connecting Digital Audio System.....	9-10
Connecting USB.....	11
Connecting a Headphone.....	12
Supporting signals.....	12
Basic operation.....	13
Tuning the TV On and Off.....	13
OSD Menu Operations.....	14-21
CHANNEL MENU.....	14
PICTURE MENU.....	15
SOUND MENU.....	15
TIME MENU.....	16
OPTION MENU.....	16
LOCK MENU.....	17-19
MULTIMEDIA MENU.....	20-21
Troubleshooting.....	22-23
Picture defects and the reason.....	24

Introduction

Features

- TV adopts TFT LED display screen
- UHDTV Compatible (480i, 480p, 576i, 576p, 720p, 1080i, 1080p, 2160p)
- Support American TV Standard 8VSB/Free 64/256QAM, NTSC System, ATSC System
- Connect to computer directly to realize TV/monitor combo.
- Zero X radiation complies to green environment protection requirement
- Advanced Chroma Processing
- Closed captioning/Program Control
- SAP/STEREO/MONO; ATSC.
- HDMI input
- USB input

Input terminals used for external equipment connection

One AV input

One EARPHONE output

One ANTENNA input

Three HDMI input

One USB input

One OPTICAL output

Introduction

Specifications

Display screen type	4K UHD Widescreen LED TV
Model	NT-5001K
The maximum resolution	3840x2160
Image control	Fine digital control
Power supply	100-240V~ 50/60Hz
TV receive system	NTSC System, ATSC System
Frequency range	Antenna: 2-69; Cable: 2~125
Antenna input impedance	75 Ω (Unbalance)
Sound output	2x10W
Power supply for remote controller	DC 3V (Two AAA size batteries)
Power consumption	120W
Dimensions (LXWXH)	44.1 x 10.5 x 27.8 inch
Weight (Net weight)	9.1 kg
Operation environment temperature	0°C-40°C

Note:

Design and specification modification maybe made at any time without prior notice; all data and dimensions are approximations.

Accessories

Please make sure the following items are included with your LED TV. If any items are missing, contact your dealer.



 
Remote Control &
Batteries (AAx 2)



Owner's
Instructions


General Description

Overview of front and keyboard

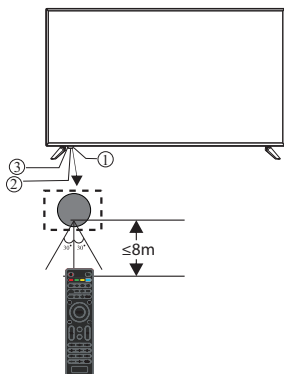

- 1: Remote control sensor.
- 2: Indicator LED: RED ● STANDBY.
- 3: Key board

 
The keyboard is located at the bottom left near the right side of signal indicator.

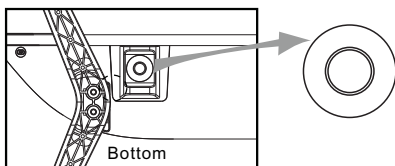

TV Status	Press
Power off	Press to power on.
Power on	-Short press to call source, then press again to choose the one you want, it will automatically jump to the channel you select in a few seconds. -Long press to power off.

General Description

 Overview of back panel

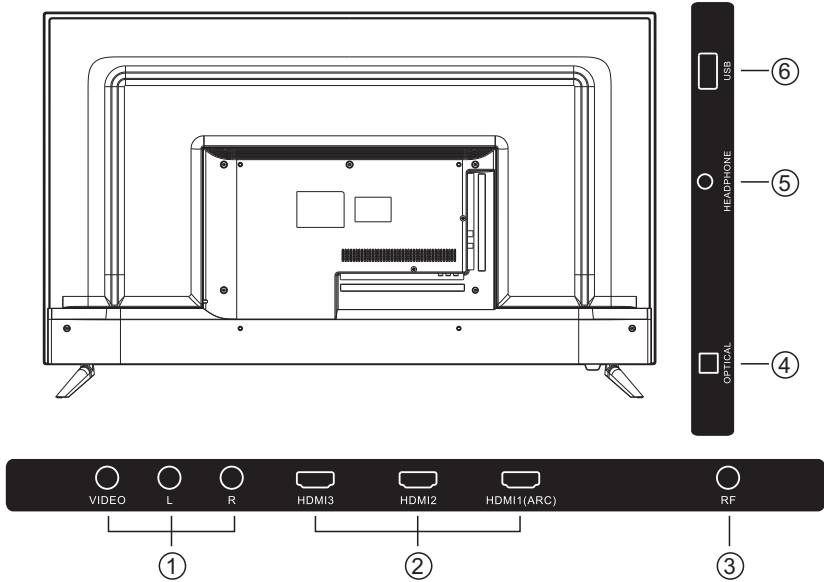

1.AV INPUT

For external devices,such as a camcorder or VCR.

2.HDMI3/HDMI2/HDMI1(ARC)

Connect to the HDMI jack of a device with a HDMI output.

3.RF

Connect to an antenna or cable NTSC & ATSC.

4.OPTICAL OUTPUT

Connect to a Digital Audio device.

5.HEADPHONE OUTPUT

 
Connect a set of phone for private listening.

6.USB

USB input.

General Description

Overview of remote control

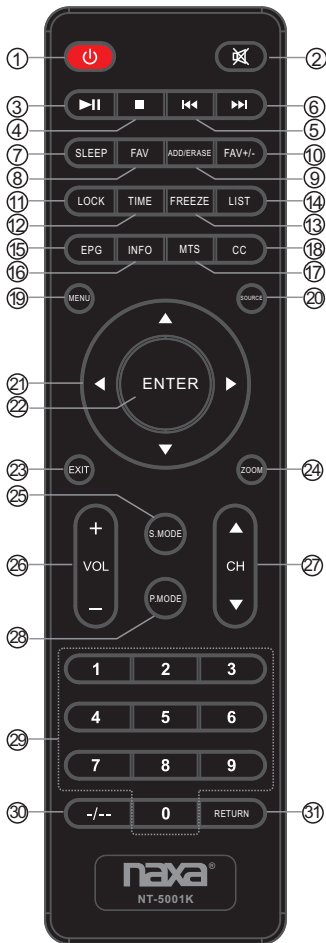


1. STANDBY: Switch a LED TV when at standby mode.
2. MUTE: Press to mute the sound.
3. Play/Pause: Start playback/pause. (photo/music/movie)
4. Stop: Stop the playback(photo/music/movie)
5. Prev: Skip to beginning of the previous photo/music/movie.(USB mode)
6. Next: Skip to beginning of the next photo/music/movie.(USB mode)
7. SLEEP: Set the sleep timer.
8. FAV: Select favorite channels.
9. ADD: Add this program to the favorite channels list. ERASE: Delete this program from the favorite channels list.
10. FAV+/-: Press to watch next/previous favorite program.
11. LOCK: Press to display the Lock menu.
12. Time: Press to display current time.
13. FREEZE: Press the freeze the screen.
14. LIST: Press to display the TV program list.
15. EPG: Press to display the EPG menu.
16. INFO: Display the channel information.
17. MTS: Press to select the audio channels.
18. CC: Press to display the closed caption.
19. MENU: TV system setup.
20. SOURCE: Press to change input source.
21. ARROW buttons: Use to move cursor up/down/left/right.
22. ENTER: Validation key.
23. EXIT: Press to exit all menu.
24. ZOOM: Press to change the screen scale.
25. S.MODE: Press to cycle through the different sound settings.
26. VOL +/-: Press to increase/decrease the sound level.
27. CH +/-: Press to scan through channels.
28. P.MODE: Press repeatedly to cycle through the available video picture modes.
29. Numberkey(0-9): Press 0-9 to select a TV channel directly when you are watching TV. The channel changes after several seconds.
30. +/-: Press this button to enter a program number for multiple program channel such as 2-1, etc.
31. RETURN: Return to the previous channel viewed.

General Description


Installing Batteries in the Remote Control

Installing Batteries

 
- 1 Open the battery compartment cover on the back side.

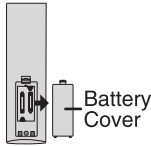

 - 2 Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.

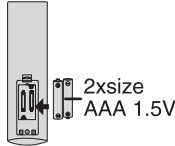

- 3 Closed the cover.

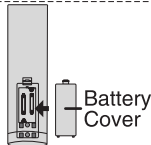 

- ✦ Point the remote towards the remote control sensor of the TV and use it within 8 meters.

- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:

 
- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

External Connection


Antenna connection

Antenna input impedance of this unit is 75ohm. VHF/UHF 75ohm coaxial cable can be connected to the antenna jack directly, if the antenna cable is 300ohm parallel flat feeder cable, you need to use the 300ohm/75ohm converter to connect the antenna cable to the antenna jack. For details Please refer to the following drawing.

Antennas with 300ohm flattwins Leads

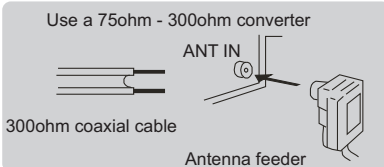

Antennas with 75ohm Round Leads

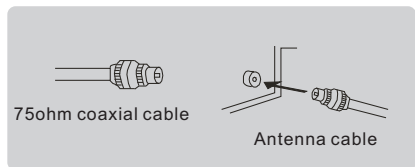 


External Connection

Connecting a Camcorder

The rear panel jacks on your TV make it easy to connect a camcorder to your TV. They allow you to view the camcorder tapes without using a VCR.

Each Camcorder has a different back panel configuration.

 When connecting a Camcorder or DVD, match the color of the connection terminal to the cable.

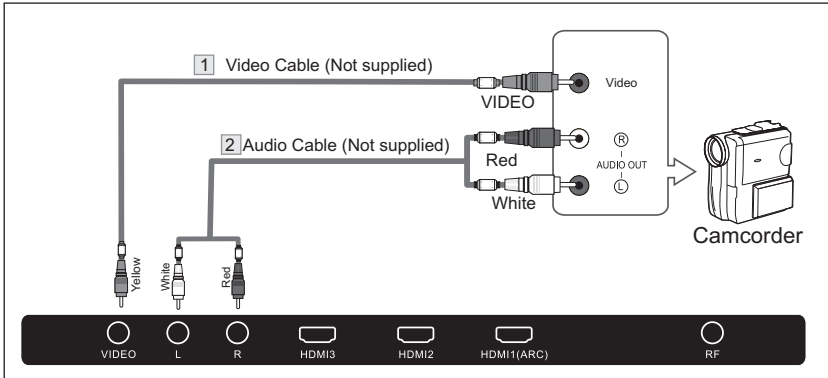

1. Connect a Video Cable between the AV VIDEO in jacks on the TV and the VIDEO OUT jack on the camcorder.
2. Connect Audio Cables between the AUDIO L and AUDIO R jacks on the TV and the AUDIO OUT jacks on the camcorder.
3. Connect a Video Cable between the AV VIDEO IN jacks on the TV and the VIDEO OUT jack on the DVD.
4. Connect Audio Cables between the component IN AUDIO L and R jacks on the TV and the AUDIO OUT jack on the DVD.

 
Notes:

1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
2. When connecting an external device, match the color of the connection terminal to the cable.

External Connection

Connecting Digital Audio System

This connection can only be made if there is a HDMI Output connector on the external device.

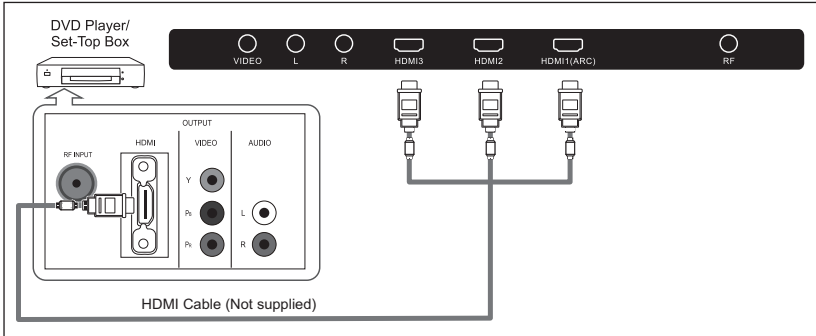

What is HDMI?

HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression. Multimedia interface is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels).

The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP(High Bandwidth Digital Copy Protection) coding feature installed, and supports multi-channel digital audio.

Each DVD player/STB has a different back panel configuration.

 
Connect an HDMI Cable between the HDMI1, HDMI2, HDMI3 connector on the TV and the HDMI connector on the DVD player/Set-Top Box.

Notes:

- 1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.**
- 2. When connecting an external device, match the color of the connection terminal to the cable.**

Connecting Digital Audio System

The rear panel jacks on your TV make it easy to connect a Digital Audio System to your TV.

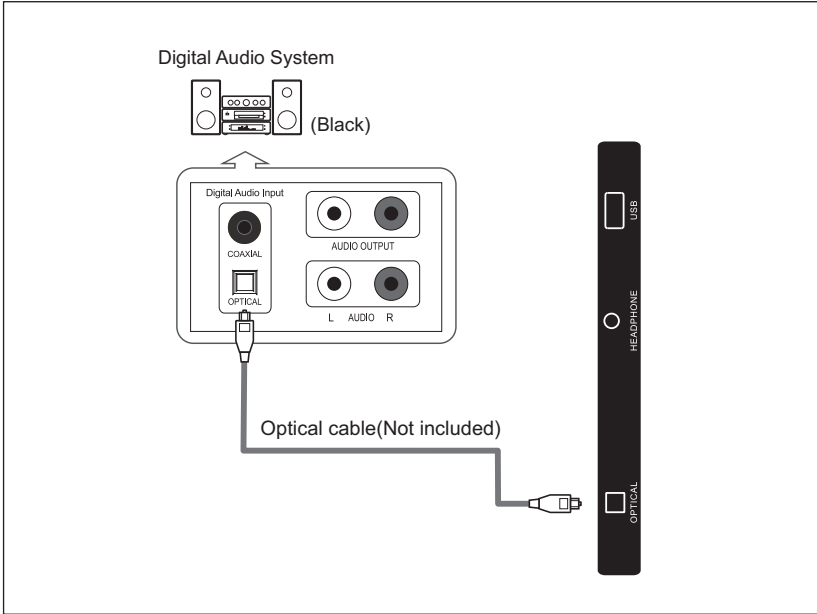


5.1 CH audio is possible when the TV is connected to an external device supporting 5.1 CH. Connect an OPTICAL Cable between the OPTICAL jacks on the TV and the Digital Audio System Input jacks on the Digital Audio System. When a Digital Audio System is connected to the OPTICAL terminal: Decrease the gain (volume) of the TV, and adjust the volume level with the Digital Audio System's volume control.

External Connection

Connecting USB

 The rear panel jacks on your TV make it easy to connect a USB device to your TV.

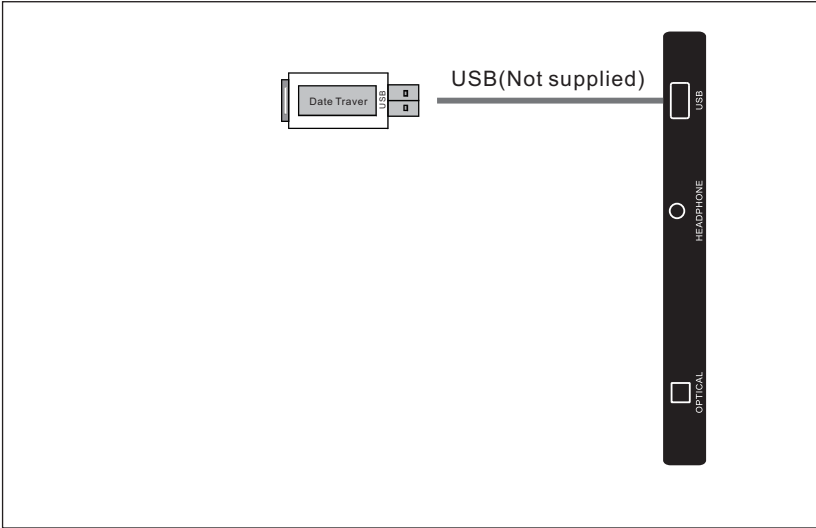


Connect a USB 2.0 memory device into USB slot of this TV for multimedia files playback.

1. This USB slot only supports Music (MP3) and Photo (JPG) multimedia files playback.
2. This TV is compatible with most USB devices in the market. However, we cannot guarantee the compatibility of all USB devices, due to multiple technology standards used.

External Connection

Connecting a Headphone

 Plug headphone connector into headphone jack on the TV. Then the TV speaker will be ; muted.

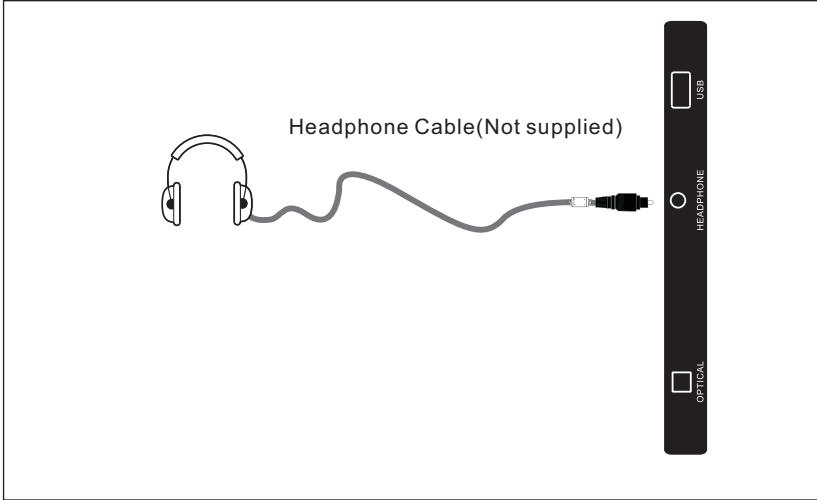



Supporting Signals

Input	Mode
Digital	ATSC
Analog	PAL-M/PAL-N/NTSC M
CVBS	PAL/NTSC

Input	Resolution	Vertical Frequency
HDMI	720p	50Hz/60Hz
	1080i	50Hz/60Hz
	1080p	50Hz/60Hz
	3840x2160	24Hz/25Hz/30Hz/60Hz

Turning the TV On and Off

How to turn the TV on or off

1. Insert the power cord plug into a polarized AC outlet.
2. Press  button on remote control or POWER button on the LED TV.
3. Normal picture will be displayed on the screen after 6 seconds. If no signal input, "No Signal" will be displayed on the screen.
4. If temporary POWER off is required, press  button on remote control or POWER button on the LED TV.
5. If you want to completely switch off the power for this unit, unplug the power cord plug for this unit.
6. After switching off the unit, you should turn on the TV again at least 5 seconds later.

Status indication lamp

No light: In power on mode.

Red: In standby mode.

Auto power off

If there is no signal input in TV mode, the TV will automatically access the standby state in about 30 minutes.

Memory before turning TV off

 
The settings of picture and the preset channels will be memorized at turning off the unit.

When being started up again, the unit will work according to the mode set before being turned off.

OSD Menu Operations

2. PICTURE MENU

In this menu, you can adjust the picture effect, such as contrast, brightness, etc. Press ▼/▲ to select, press ENTER to adjust.

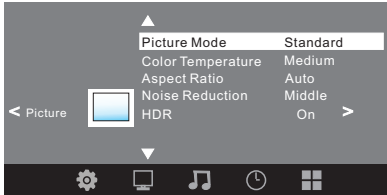


Note:

- 1). If you want to adjust contrast, brightness, color, and sharpness, the picture mode must return to **User** status.
- 2). Tint is available in NTSC system only.
- 3). There are **four** color temperature modes that can be selected: **Medium**, **Warm**, **User** and **Cool**.
- 4). HDR is available if playing video with HDR.

3. SOUND MENU

 In this menu, you can select the sound effect. Press ▼/▲ to select, press ENTER to select.

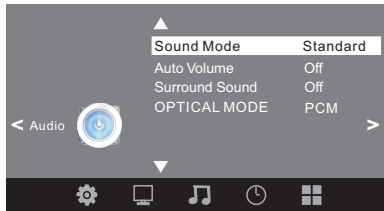

Note:

- 1). Five selectable sound modes: Standard, Music, Movie, Sports, and **User**.
- 2). Auto Volume is effective when input signal level is too high or distortion of input signal is too high.

OSD Menu Operations

4. TIME MENU

In this menu, you can adjust the sleep timer, time zone, etc. Press ▼/▲ to select, press ENTER to adjust.



 
Note:

Clock and DST are available if Auto Sync is Off.


5. OPTION MENU

In this menu, you can Select the OSD language, Closed Captions, Restore Factory Default etc.

Press ▼/▲ to select, press ENTER to adjust.

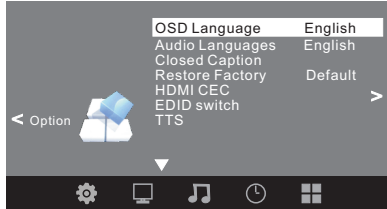

Closed Caption

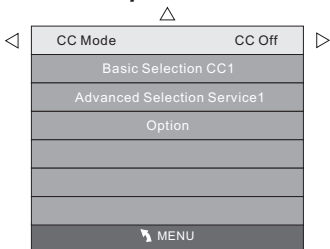 

- 1).CC Mode: Switching close caption mode.
- 2). Advanced selection: Available only for ATSC program.
- 3).Option: Used to edit CC font.

 
Note:

Restore Factory Default: It will clear all the programs and reset all the settings to default value.

OSD Menu Operations

6. LOCK MENU

In this menu, you can change the password and adjust the V-chip setting.
Enter the password, it will go into the lock menu.
Factory default password is 0000.

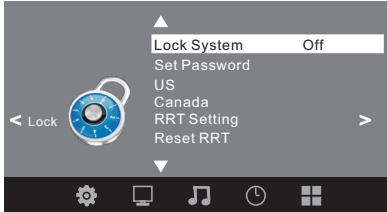

6.1 Lock System

 
When the System Lock switch is ON, the below options listed below can be adjusted.

6.2 Set Password


- 1) Enter old password: Input the old password.
- 2) Enter new password: Input the new password.
- 3) Confirm password: Input the new password again.

6.3 US

Press ENTER button the screen will display as follow.

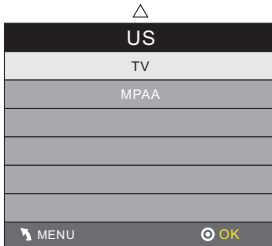

 - 1) TV: Press ENTER button, the screen will display as follows:

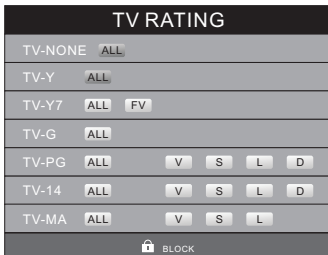

6.LOCK MENU

Rating Content		Content				
		FV (Fantasy violence)	V (Violence)	S (Sexual situation)	L (Adult language)	D (Sexually suggestive dialog)
Edad Sugerida	TV-Y (All children)					
	TV-Y7 (Direct to order children)	X				
	TV-G (General audience)					
	TV-PG (Parental Guidance suggested)		X	X	X	X
	TV-14 (Parents strongly cautioned)		X	X	X	X
	TV-MA (Mature audience only)		X	X	X	

And use the ENTER key to switch lock/ unlock Parental Control feature.

2) MPAA: Switching the movie-rating control level; N/A, G, PG, PG-13, R, NC-17, X.

Rating	Description
G	General audiences, all ages admitted
PG	Parental Guidance suggested. Some material may not be suitable for children.
PG-13	Parents strongly cautioned. Some material .may be inappropriate for children under 13.
R	Restrict. Under 17 requires accompanying parent or adult guardian(age varies in some jurisdictions)
NC-17	No one 17 and under admitted.
X	X is an order rating that is unified with NC-17 but may be encoded in the data of order movies.

6.4 Canada

Press ENTER button, the screen will be displayed as follow:



1) Canada English: Switching the English rating control level: EXEMPT, C, C8+, G, PG,14+, 18+.

6.LOCK MENU

Rating		Description
Age	C	Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of security and well-being.
	C8+	Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen .
	G	General: Considered acceptable for all age groups, Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.
	PG	Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.
	14+	Over 14 Years: Could contain themes where violence is one of the dominant elements of the storyline but it must be integral to the development of plot or character. Language usage could be profane and nudity present within the context of theme.
	18+	Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of nudity.

2) Canada French: Switching the French-rating control level: G, 8ANS+, 13 ANS+, 16ANS+, 18ANS+.

Rating		Description
Age	G	General: All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner .
	8ans+	General but inadvisable for young children :May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations. Recommended for viewing with paren.
	13ans+	Over 13 years: Could contain scenes of frequent violent scenes and in tense violence.
	16ans+	Over 16 years: Could contain frequent violent scenes and violence.
	18ans+	Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.

6.5 RRT setting

It can be adjusted when the TV is in ATSC digital mode and the TV stream have RRT information.

6.6 Reset RRT

 
It can be adjusted when the TV is in ATSC digital mode and the TV stream have RRT information.

7. MULTIMEDIA MENU


Press the source button and then select USB item to enter the USB menu.



Please make sure that the USB device have plugged in the slot. There are four type media item can be selected, such as photo, music, Movie. Select the type media item by pressing ◀▶, press ENTER button to enter the disk selection menu.

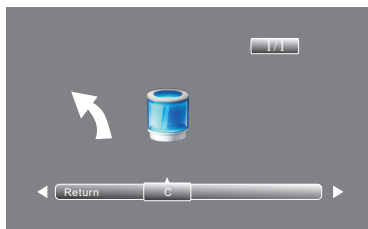

 
Press the ◀▶ to select the right disk and press ENTER to display media files and folder list or choose Return to back to the media type selection menu.

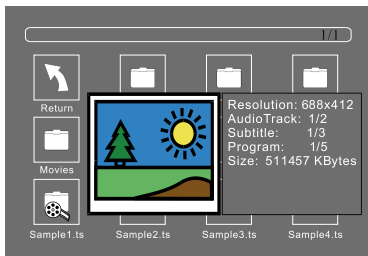

Select the media file by pressing ◀▶ or ▼▲ then the preview frame will pop up. Press the button ▶ to play the media file in full screen. When the media file (photo, music, Movie) is playing, press the ENTER or Info button can display the control bar.

OSD Menu Operations

 7. MULTIMEDIA MENU

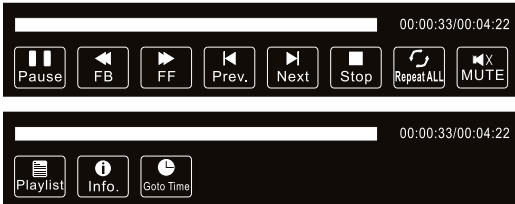


Press ◀▶ to select the function icon, press ENTER button to confirm the function.

Press ▼ or EXIT button to exit the control bar.

NOTE:

 You can adjust the audio track, or program in the Info menu while Playing the video file. Choose the Info icon and press ENTER can display the Info MENU.

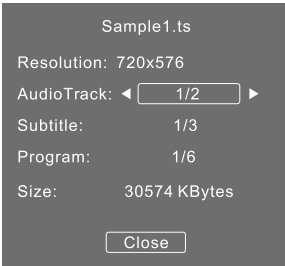

USB playback is supported for the following photo file formats:

- JPEG(JPEG format, files with the extension ".jpg")
- BMP (files with the extension ". bmp")
- PNG (files with the extension ".png")

USB playback is supported for the following music file formats:

- MP3 (files with the extension ".mp3")

USB playback is supported for the following movie file formats:

- TS (MPEG2 & H.264)

Troubles shooting

If you have any problem, check the counter measures for each symptom listed below. The following symptoms may have been caused by inappropriate adjustment rather than actual malfunction of the unit. If the trouble persists, contact the Customer Care Centre, see back page for contact details.

Symptoms	Possible solutions
No power	Please check the power cord plugged in and that the power outlet works. Unplug the power cord and plug it in after 60 seconds and restart the TV.
No picture	Please check antenna connection. Station may be experiencing problems, please tune to another station. Please adjust the settings of contrast and brightness.
Good picture but no sound	Please increase the volume. Please check TV is under mute mode, press MUTE button on the remote control. Please check sound settings If external devices are being used, check their volumes are not set too low or turned off. If using AVI or Component inputs, please make sure cables are connected properly and not loose.
Good sound but abnormal color or no picture	Please check antenna connection and antenna condition. If using Component input, please check Component connections, incorrect or loose connections may cause colour problems or cause the screen to be blank.
No response to remote control	Batteries of remote control may have exhausted, if necessary, please change the batteries. Clean the remote control lens. The distance between LED TV and remote control should be within 8m, within recommended operating angle and path is free of obstructions.
Colored dots may be present on the screen	Although the LED screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LED screen. This is a structural property of the LED screen and not a malfunction.
Picture is breaking up	Keep the TV away from noisy electrical sources such as cars, hair dryers, welders, and all optional equipment. Electrical atmospheric interference such as local or distant lightning storms may cause picture to break up. When installing optional equipment, leave some space between the optional equipment and the TV. Check the antenna and connection. Keep the antenna away from any power or input/output cables.
After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type - please see pg.7 'Antenna connection'.

Troubles shooting

Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.



Snowy Picture

Snowy picture is usually due to weak signal. Adjust antenna or install an antenna amplifier.



Double Image or Ghosts

Double images are usually caused by reflections from tall buildings. Adjust the direction of the antenna or raise it.



Radio Wave Interference

Wave patterns are moving on the screen, which are usually caused by nearby radio transmitters or shortwave receiving equipment.



High Temperature Electrothermal Interference

Diagonal or herringbone patterns appear on the screen or part of picture is missing. This is probably caused by high temperature electrothermal equipment in a nearby hospital.



4 0 3 1 Q 5 0 A 0 2 0

USER'S MANUAL