

## 刀模线不印刷

型号：5B245BT


尺寸：折后 148\*210mm

印刷材质及要求：80g 书纸，单色正反面印刷，3 折页

美工：小邹

文件完成时间：2017/12/26


正面印刷



# NAS-3092

## THE ILLUMINATOR

### Wireless Speaker with LED flashing lights

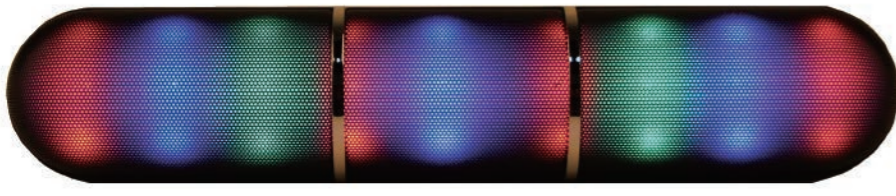

## INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY  
& RETAIN FOR FUTURE USE

1

### Getting Started

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

### Package Contents

- Bluetooth Speaker with LED Flashing Lights
- USB Charging cable
- 3.5mm auxiliary cord
- Instruction manual


### Features

- Bluetooth LED Flashing Speaker
- Built-in Multi-colored LED Flashing Lights
- Built-in Rechargeable Battery
- Stream Music Wirelessly
- Use as Hands-Free speaker phone device, with a built-in microphone
- Built-in controls support play, pause, forward/backward track and volume
- Play music through Bluetooth, AUX, TF Card & USB (TF card & USB flash drive not included)
- Built-in FM radio

### IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not immerse in water or any other liquids.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place unit on sound, even surface, free of vibrations and away from sources of heat.
- Do not use with wet hands.
- Do not put objects into openings.
- Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

### DESCRIPTION OF PARTS

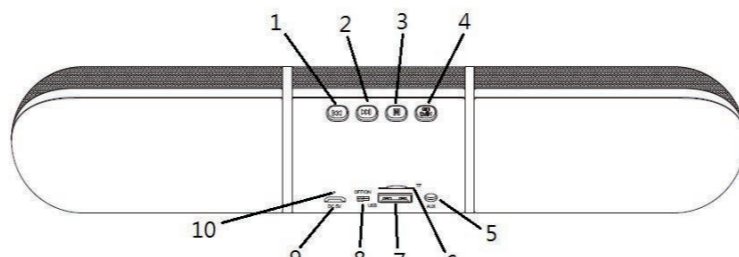

1	Skip Forward / Increase Volume	6	TF Card Slot
2	Skip Backward / Decrease Volume	7	USB Slot
3	Mode Button	8	ON/OFF Switch
4	MFB (play/pause/phone/LED on/off) Button Long press to turn on/off the Multi-coloured LED Flashing Lights	9	USB Charging Port
5	AUX-Input	10	LED Light Indicator

2

### INSTRUCTIONS FOR USE

#### Charging the speaker

#### For best results, fully charge the speaker before use.

- Connect the USB charging cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar suitable power source.
- The Red LED turns on, indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes about 4 hours to charge the speaker fully.

#### Turn On/Off the Speaker

- To Turn "ON", slide the "ON/OFF" switch to the ON Position.
- To Turn "OFF", slide the "ON/OFF" switch to the OFF Position.

#### Switch the speaker to Bluetooth pairing mode –

- Turn ON the speaker.
- You will hear the audible tone and the LED Lights will illuminate. The speaker is now in pairing mode.

(Note: Speaker will automatically pair with previously paired devices)

#### Pairing your device with Bluetooth Speaker –

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within 27-33 Feet. Simply follow the below steps.

- Turn ON the speaker.
- You will hear the audible tone and the LED light will illuminate. The speaker is now in pairing mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for various devices.
- The pairing name of the Bluetooth Speaker is "NAXA NAS-3092", pair it with this device.
- If required, enter the password '0000' to confirm to finalise pairing.
- Once paired successfully, you should hear an indication tone.
- If you fail to pair it within the time frame or you want to pair it with a new device please follow the steps outlined above again.

Select your favorite song on the Bluetooth device. Music will now stream through bluetooth speaker.

#### Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the MFB button once to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the MFB button
Volume Increase	During a call	Long press on the ►► button will increase the volume
Volume Decrease	During a call	Long press on the ◀◀ button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the MFB button twice

3

反面印刷

#### Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, you can play music from your device.

Function	Operation	Button
Increase Volume	Playing music	A long press on the ►► button once will increase the volume
Decrease Volume	Playing music	A long press on the ◀◀ button once will decrease the volume
Pause	Playing music	Short press ►  once to pause the music
Play	Pause	Short press ►  once resume the music
Previous track	Playing music	Short press the ◀◀ button to the previous track
Next track	Playing music	Short press the ►► button to the next track

(Note: An indication tone will alert you when the volume is adjusted to minimum or maximum level.)

#### Aux function of the Speaker (to play music from non-Bluetooth devices)

- Turn on the speaker.
- Plug the 3.5 mm auxiliary cord (included) in to the auxiliary port of the speaker. Connect the other end of the cable to the audio device (such as MP3 Players / computer / tablet etc.).
- Select your favorite song at the source device.

**Note:** Once AUX cable is connected to the Speaker, music through the Bluetooth will be stopped. Functions (except increase/decrease volume) like Skip Backward, Skip Forward etc can be only controlled through source devices, while playing music in Auxiliary mode.

#### Listening to Music using USB / TF Card Slot

- Turn on the speaker.
- Insert TF card or USB flash drive into the TF Card Slot or USB Slot. Music will be automatically streamed.
- Short press ►► or ◀◀ button to move forward or backward on your playlist.
- Short press ►| button to Play or Pause a track.

**Note:** While using Bluetooth, if you insert a TF Card or USB Flash drive, the speaker would disconnect the Bluetooth connection and switch to TF card or USB card function. You can short press Mode button each time until it goes back Bluetooth mode.

#### TF Card/USB Flash Drive not included.

#### FM Radio

- Turn ON the Speaker.
- Insert the auxiliary cord (included) into the auxiliary port. Leave the other end of the cord open. **Auxiliary cord serves as FM Antenna while in FM Radio mode.**
- Short press through the sequence in the Mode button until FM mode is selected.
- Short press ►| button and the device would automatically search and store all the FM Radio stations.
- Short press ►► or ◀◀ button to change the FM Radio stations.

#### Tips!!

- Short press the Mode button each time to switch different functions of the speaker. The modes appear in the following sequence  
– **Bluetooth / USB-TF / FM Radio / AUX-In.**
- When the unit is not in use, turn OFF the device to save the battery power.

4

### Do's and Don'ts

Do not play music at excessive levels as damage to hearing and/or equipment may result.

Do not use in wet or in damp surroundings.

### Specification

Bluetooth version	2.1 + EDR
Speaker Output	2 x 3W
FM Frequency	87.5 – 108MHz
Unit Size	11-5/8"x2-1/8"x2"
Unit Weight	16.2 oz.
Play time	up to 2 hours
Charge Voltage	DC5V (USB)
Bluetooth Range	27 - 33 Feet
Built-In Rechargeable Battery	3.7V / 1200mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

### Troubleshooting

Problem	Possible Cause	Solution
<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
<b>Sound distorted</b>	Battery nearly dead	Charge Battery.
<b>No sound at all.</b>	Source (Tablet, Mobile Phone, Lap top.) turned off. Speaker turned off. Volume turned down at source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume at source. Play media from source.

### Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.  
Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

5

6