



# DIGITAL ALARM CLOCK RADIO WITH CD PLAYER

NRC-176



## Instruction Manual

Please read carefully before use and keep for future reference.

---

---

# Important Safety Information



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**

**WARNING:** This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply

with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.



# At a Glance

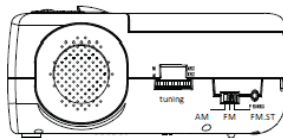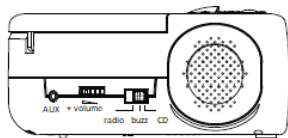

CD disp	Press to display the track number in CD mode.	Tuning	Turn dial to tune to desired radio station.
mode	Press to enable/disable Repeat/Random playback while in CD mode.	AM/FM/FM ST.	Slide to switch between different radio frequencies.
▶▶	Press to Play/Pause playback in CD mode.	Headphone Jack	3.5mm stereo mini jack to connect headphones
prog	Press to program up to 20 tracks in a selected order in CD mode.	AUX IN	3.5 mm stereo mini jack to connect external media player/mobile phone
■ /adjust	Press to adjust the Time while in Standby mode. Press to Stop playback in CD mode. Press to clear previous programmed tracks in cd mode. Press to turn off the alarm when it sounds.	radio/buzz/CD	Slide to access Radio/CD mode. Slide to Buzz to enable Alarm on buzzer.
		+Volume -	Turn dial to adjust volume to desired level.

---

---

## Connecting the Unit to Power

Before plugging in the AC power cord to the AC wall outlet, make sure that the voltage of your electricity supply is same as that indicated on the rating plate.



The provided power adapter works with AC 120V power.

## Battery Backup

Battery backup will preserve the current time, alarm settings in the case of power failure or interrupted AC power.

Insert (2) two UM-4 batteries (AAA) into the battery compartment. Be sure to observe the proper polarity (the “+” and “-” signs) as indicated inside the battery compartment.

---

---

## Setting the Clock

1. Connect the AC power cord to a wall outlet. Press the On/Off button to turn off the unit first. Press the STOP/adjust button to enter clock setup mode and the time display will begin to flash.
2. Press the ►► button to set the desired hour.
3. Press the ◀◀ button to set the desired minute.
4. Press the ■/adjust button to confirm the current clock setting. The time display will stop flashing.



Take note of the PM LED indicator when setting the time.

## 12-Hour / 24-Hour Mode

1. In STANDBY mode, press and hold the ■/adjust for 2 seconds to select the 12-hour or 24-hour mode.

---

---

# Setting the Alarms

1. With the unit in Clock mode (i.e., the radio is off):
  - Press the  $\mathcal{Q}1$  button several times to set Alarm 1(Alarm1 time will flash on the display and Alarm1 indicator will light up).
  - Press the  $\mathcal{Q}2$  button several times to set Alarm 2(Alarm2 time will flash on the display and Alarm2 indicator will light up).
2. Press the  $\blacktriangleright$  button to set the desired hour.
3. Press the  $\blacktriangleleft$  button to set the desired minute.
4. When the desired alarm time is set, press the  $\mathcal{Q}1$  or  $\mathcal{Q}2$  button to confirm. The clock will then display.



Take note of the PM LED indicator when setting the alarm time.

- To choose to wake to Radio, Buzzer, or CD, simply slide the Radio/Buzz/CD switch to the desired position.

To enable or disable the alarms, press  $\mathcal{Q}1$  or  $\mathcal{Q}2$  . Check the Alarm1 and Alarm2 status lights on the display to see the current alarm state.

## When the Alarm Sounds

### Snooze Function

Whenever the alarm (radio or buzzer) activates, it can be temporarily suspended 9 minutes by pressing the SNOOZE button once.

The alarm will then sound again automatically after 9 minutes. This can be repeated 10 times.

# Turning OFF the Alarm

Press the  $\cup$ /al.off button to turn off the alarm off when it sounds.

---

## How to Set the SLEEP TIMER

1. Slide the Radio/Buzz/CD switch to "Radio" or "CD" position.
2. Adjust the volume control.
3. Press the SLEEP button. The number 90 will appear on the clock display.
4. Repeatedly press the SLEEP button to cycle through the available pre-set lengths of time; 90, 80, 70, 60, 50, 40, 30, 20, 10, and 0 minutes.
5. The unit will automatically switch off when the SLEEP time expires.
6. To cancel the sleep time before it expires, simply press the  $\cup$ /al.off or press the SLEEP button repeatedly to set sleep to 0.

---

## CD Player Operation

1. Slide the Radio/Buzz/CD switch to "CD" position.
2. Open the CD door and insert a CD into the tray with the printed label facing up.
3. Close the CD door.
4. Turn On the unit by pressing the  $\cup$ /al.off button.
5. The disc will begin to spin, then the LED will display the total number of tracks.
6. Press the  $\blacktriangleright\parallel$  button to play the first track.
7. To pause the CD while in playback, press the  $\blacktriangleright\parallel$  button. Press again to resume playback.



Press the "CD disp" button to show the track number in CD mode.



---

---

## Rewind/Forward Playback

1. The ⏮ and ⏭ button can be used to skip to a different track number or scan tracks.
2. Press the ⏮ button once to hear the beginning of the current track on the disc.
3. Press the ⏮ button twice continuously to hear the previous track on the disc.
4. Press the ⏭ button once to hear the next track on the disc.
5. To fast forward or rewind, press and hold the ⏭ or ⏮ button. Release the button to resume normal playback.

## Repeat/Random Playback

1. The MODE button can be used to repeat a single track, repeat all tracks and enter random play mode.
2. While a CD is playing, press the MODE button once to repeat a single track. The CD repeat indicator will flash.

3. While a CD is playing, press the MODE button a second time to repeat all the tracks. The CD repeat indicator will remain steady.
4. While a CD is playing, press the MODE button a third time to enter Random playback. The CD random indicator will remain steady. (Unit will stop playback when all tracks have been played in Random Mode).
5. While a CD is playing, press the MODE button a fourth time to exit the Repeat/Random mode.

## Programmed Playback



Program up to 20 tracks to play in a selected order.

1. While in Stop mode, Press the “prog” button and “P01” will appear in the CD Track LED Display and the Program LED indicator will begin to flash.

- 
- 
2. Press the ⏮ or ⏭ button to locate the desired track.
  3. Press the “prog” button to select and store the track into memory. The next memory location (i.e. P02) will show in the CD Track LED Display.
  4. Repeat steps 2 and 3 to program additional tracks.
  5. Press the ▶▶ button to play the selected tracks in Program Mode. The track number will appear in the CD Track LED Display. The CD Program indicator will light up.
  6. To advance to the next programmed track, press the ⏭. After all programmed tracks have played, the CD player will return to Stop mode.
  7. To clear the program function, press ■/adjust to clear the previous programmed tracks.

---

---

## Listening to the Radio

1. Slide the Radio/Buzz/CD switch to “Radio” position.
2. Slide the AM/FM/FM ST switch to the desired frequency.
3. Press the ⏻/al.off button to turn the radio on.
4. Rotate the Tuning Control to the desired radio station.
5. Adjust the Volume Control to your preferred listening level.
6. Press the ⏻/al.off button to turn the radio off.




The Stereo indicator will light up when a station is received in FM Stereo.

## Headphone Jack

- Your radio is equipped with a Headphone Jack for private listening. Simply plug any 3.5mm stereo mini headphone plug into the headphone jack.

---

## AUX IN Jack

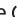1. Connect the AUX cable from the output jack of your MP3 player or mobile phone to the AUX input jack on the Radio.
2. Slide the Radio/Buzz/CD switch to "Radio" position.
3. Press the /al.off button to turn the radio on.
4. Adjust the Volume Control to your preferred listening level.

---

---

## Specifications

Radio Tuner	AM, FM
CD Program Tracks	20 Tracks
Power Supply	AC 120V
Back-Up Battery	2 pcs. UM-4 (AAA)

Specifications are subject to change without prior notice.

---

---

## Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

### NAXA Technical Support

2320 East 49th St.

Vernon, CA 90058

866-411-6292

[http://www.naxa.com/naxa\\_support/](http://www.naxa.com/naxa_support/)

